


24E Motor and Finished Product Installation

Instructions




Product introduction

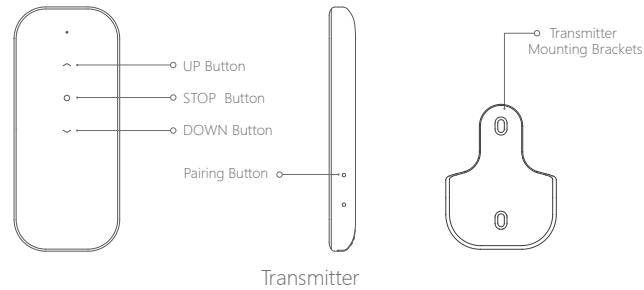

Technical data:

Power:	Refer to the nameplate for details
Frequency:	433.92MHz
Receiver sensitivity:	-112dBm
IP grade:	IP20
Working temperature:	-20°C ~+55°C

Wiring principle:

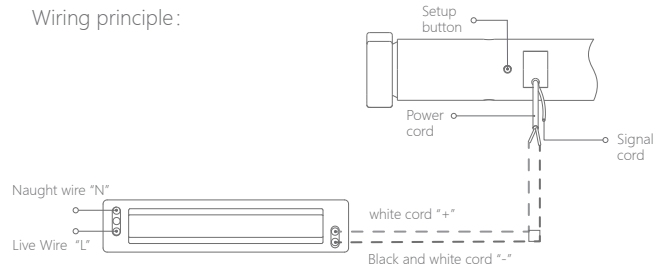


Operating instruction


In the setting process, the maximum time interval between two consecutive operations is 10 seconds. Performing the next operation within 10 seconds is considered valid; otherwise, it is regarded as abandonment (except for setting limit operations).

Pair programming


Option A: Power on programming

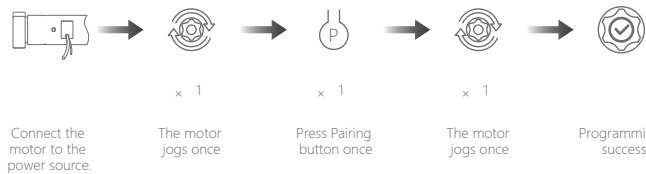

Option B: Button programming

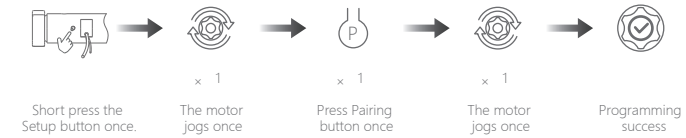

Option C: Copy programming

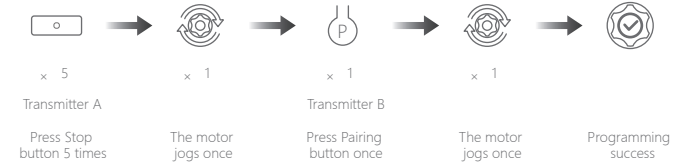


Change direction



Set the two limits


Before completing the limit setting, the motor remains in a jog state. After setting the upper and lower limits, it transitions to a continuous operation state:

1. Long-press the Up/Down button for 3 seconds, and the motor will run continuously. During continuous operation, pressing the opposite direction button once will make the motor run continuously in the opposite direction.
2. The size of the jog is related to the duration of pressing the button. If the button is released within 3 seconds, the motor stops running.

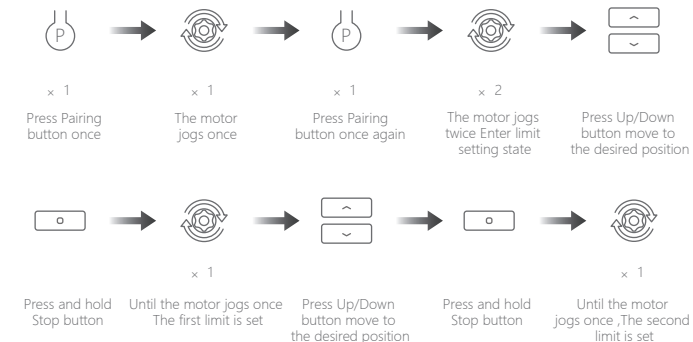


Set the third limit

The third limit can only be set after the first and second limits are completed. After the third limit has been set, long press Stop button to run to the limit.

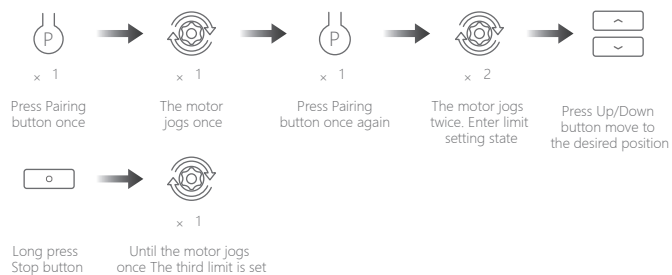


Delete limits

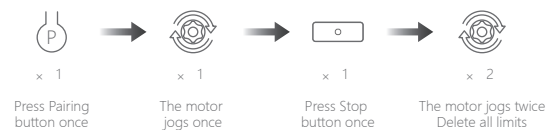


Adjustable speed

The speed of motor is adjustable, which can switch among three levels. The initial factory setting defaults to minimum.

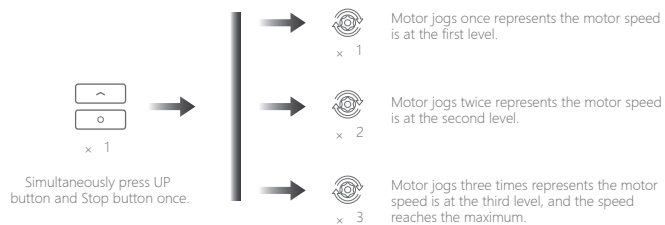


Delete the currently operating transmitter/channel

For multi-channel transmitter, delete the channel of the currently operating transmitter.

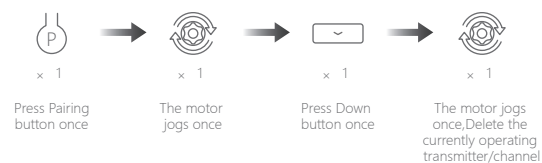

Restore factory settings

Note: All transmitter and original limits are removed

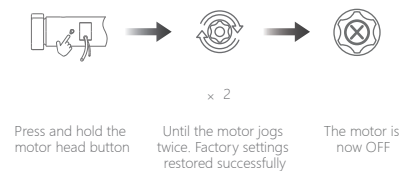


Attention

- 1) Improper installation may result in serious personal injury, please strictly follow all instructions.
- 2) Please place the motor and transmitter out of the reach of children to avoid accidents caused by improper operation.
- 3) The motor controller has high voltage, please keep it away from a wet or splashing place.
- 4) Before installing the motor, please make sure to remove all extraneous power cables.
- 5) During the setting process, it may fail because of signal interference, please reset once.
- 6) Please operate strictly in accordance with the motor function manual, if there are any unfinished matters, please contact our company.

Installation method

Install the motor as shown in the diagram:

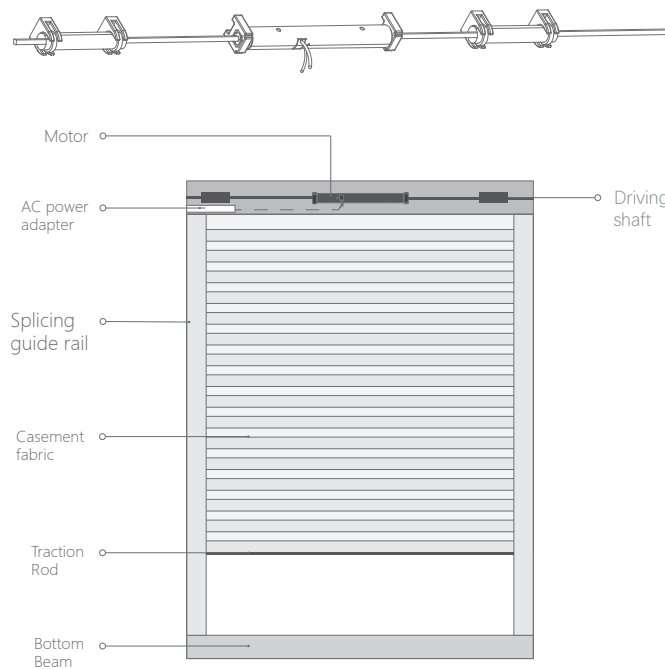

Warranty card

User Name	
Contact number	
Postal address	
Product Name	
Model	
Purchase date	

The following situations are out of free warranty:

1. Faults and damages caused by human factors, including failure to use according to the instructions or caused by the environment not in accordance with the instructions.
2. Without the authorization, the user is not allowed to disassemble the motor, otherwise it will not be covered by the warranty.
3. Damage caused by other force majeure (such as flood, lightning strike, earthquake).
4. Failure to show valid shopping vouchers or warranty card, etc.
5. Products do not belong to our company (such as counterfeit products).
6. Normal use, wear, tear and dipping.