 
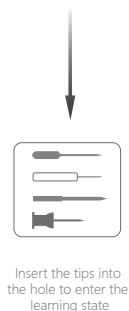 
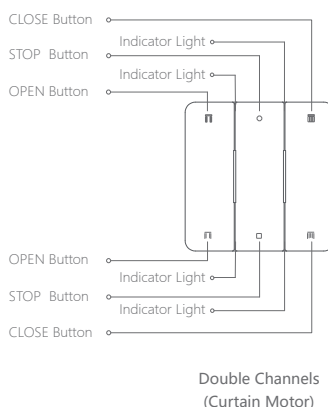 
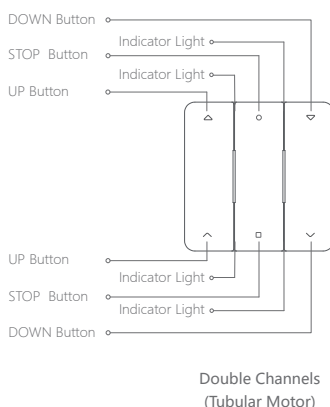 
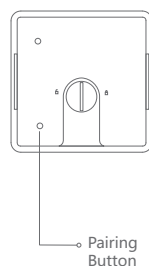 
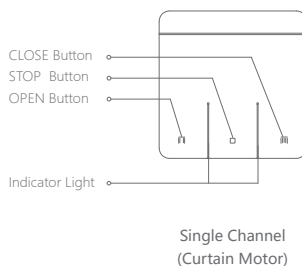 



Product introduction

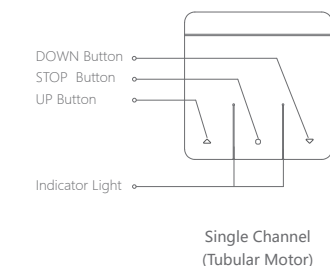

Technical data

- Power: 3V
- Frequency: 433.92MHz
- Working current : ≤20mA
- Operating distance: ≥100m
- Standby current: ≤1uA
- Working temperature: -20°C ~ +60°C
- Product size: 86 * 86 * 16.8mm
- Battery specification: CR2032

 Battery replacement

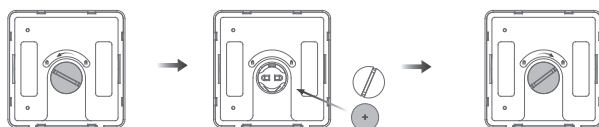

①Rotate the battery cover to the left to open.

②Place the battery right side up in the battery compartment.

③Rotate to the right to close the battery cover

Warning

- Keep away from moisture and impact to extend the service life.
 - If it is found that switch needs to be closely controlled or the button is not too sensitive and the indicator light blinks and darkens, the battery needs to be replaced.
 - Press any button for more than 10 seconds, the wall switch will stop sending wireless signals.
 - Please dispose of used batteries properly.
-