


35LE Tubular Motor

Instruction Manual




Product Introduction

Motor Head

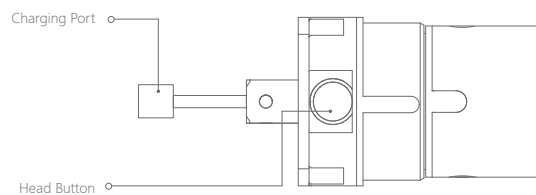

Remote

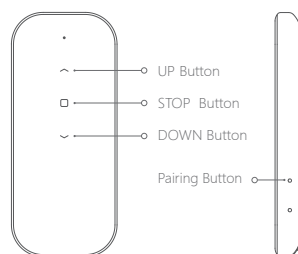

Technical Data

Power:	Refer to the nameplate for details
Frequency:	433.92MHz
Receiver Sensitivity:	-112dBm
IP Grade:	IP20
Working Temperature:	-20°C ~ +60°C

Operation Instruction

Factory default setting is hibernation mode. Please activate the motor before setting and make sure every operation is within 10s.

Activation / Hibernation

Activation: The motor is operable after being activated.




Hibernation: The motor can't perform any operation.




Pairing


① Button Pairing

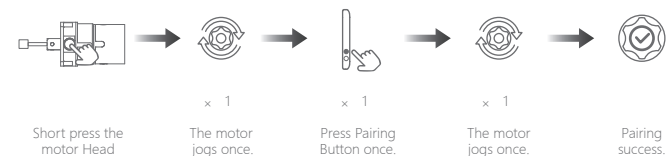

② Copy Pairing

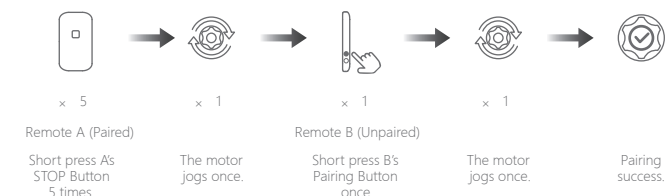


Change Direction

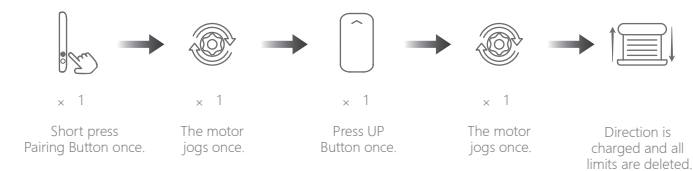


Set the First and Second Limits

Before the limit position is set, the motor is in the jogging state. When the first and second limit positions are set, the motor turns to the interlocking state. After the limits are set, short press UP/DOWN Button, and the motor will run up/down continuously.

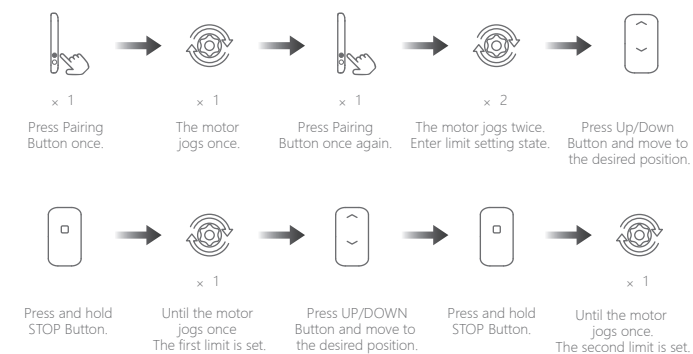


Set the Third Limit

The third limit can only be set after the first and second limits are completed. After the third limit has been set, long press STOP Button to run to the limit.

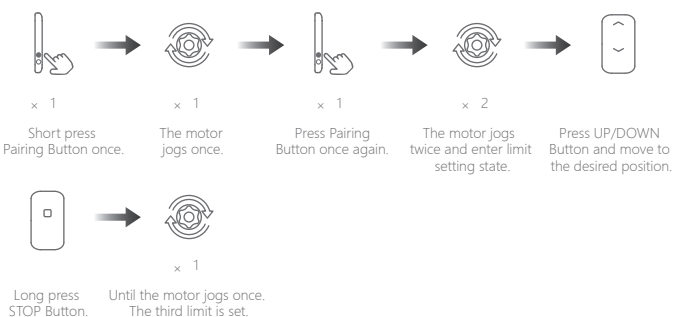


Delete All Limits

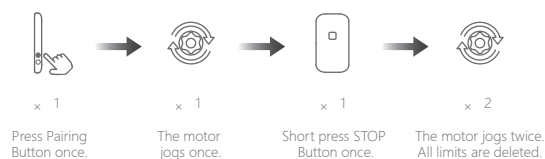


Delete the Current Operating Remote/Channel

For a multi-channel remote, delete the channel of the current operating remote.

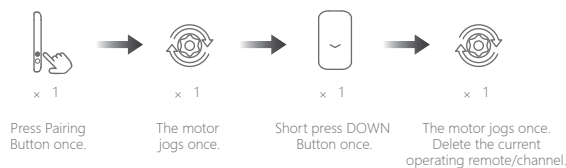

Restore Factory Settings


Note: All remotes and original limits are removed

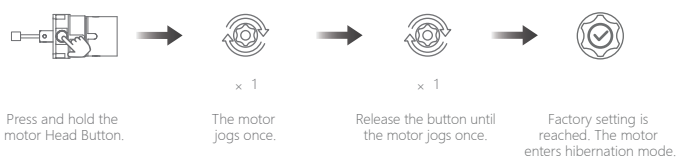

Charge Reminder

The motor jogs once after being charged. (It takes about 10-15h to charge to the fullest.)

Charging port: Type-C " "

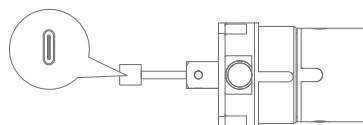

Attention

- 1) Improper installation may result in serious personal injury. Please strictly follow all instructions.
- 2) Please place the motor and remotes out of the reach of children to avoid accidents caused by improper operations.
- 3) Before installing the motor, please remove all extraneous power cables.
- 4) During the setting process, it may fail because of signal interference. Please reset once.
- 5) The remote button time should keep short, otherwise it will affect the battery life; The button time should be about 0.5s, and the interval remote between each button is about 1s. When the battery power is low, the transmitter does not work. The battery needs to be replaced.
- 6) Please operate strictly in accordance with the motor function manual. If there are any unfinished matters, please contact with our company.

Warranty Card

User Name	
Contact Number	
Postal Address	
Product Name	
Model	
Purchase Date	

The following situations are out of free warranty:

1. Faults and damages caused by human factors, including failure to use according to the instructions or caused by the environment not in accordance with the instructions.
2. Without the authorization, the user is not allowed to disassemble the motor. Otherwise it will not be covered by the warranty.
3. Damage caused by other force majeure (such as flood, lightning strike, earthquake).
4. Failure to show valid shopping vouchers and warranty card, etc.
5. Products that do not belong to our company (such as counterfeit products).
6. Normal use, wear, tear and dipping.