 
 
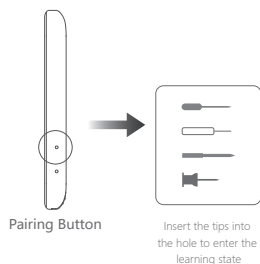 
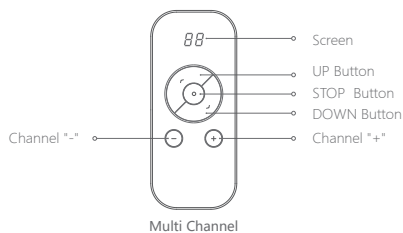 


# PE5201-C/PE5215-C Rechargeable Transmitter Instruction

81102010084600A

## Product Introduction

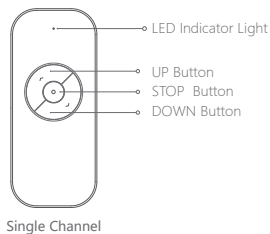

## Technical Data

PE5201-C




PE5215-C




- Product Model: PE5201-C / PE5215-C
- Working Temperature: -20~+60°C
- Working Current: ≤20 mA
- Standby Current: ≤15 uA
- Operating Distance: ≥35 m
- Frequency: 433.92 MHz
- Battery Capacity: 250 mAh
- Power Supply: Rechargeable lithium battery

## Maximum Channel Latch

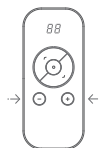

Use the "+" or "-" channel button to select the maximum channel (except the teamwork channel "00").

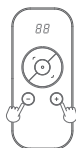

Hold down the "+" and "-" channel buttons at the same time, the screen will start flashing the current channel until "AA" is displayed.



The screen displays "AA" as successful

## Release The Maximum Channel Latch



Except for the teamwork channel "00", hold down the "+" and "-" channel buttons.




The display starts flashing the current channel and let go until "16" is displayed



When "16" is displayed, the operation succeeds.

## Charging Instruction

Note: When the display starts flashing, it means the battery is running low. Please put it on charge in time.

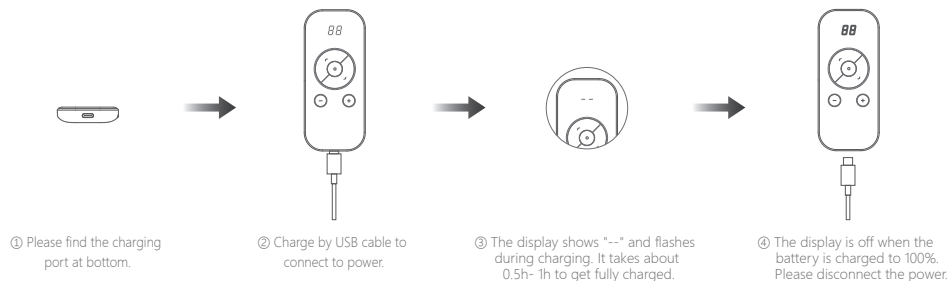

## Warning

1. Keep the Transmitter away from moisture and impact to extend the service life.
2. Press any button for more than 10 seconds, the Transmitter will stop sending wireless signals.
3. The 00 channel can control all channels, and the code matching function cannot be realized when using this channel.