



PE 10 Series Transmitter Instruction

3020010052


Product introduction

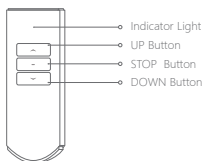


Single Channel
(Tubular Motor)

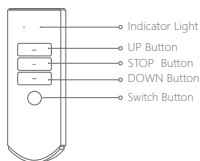


Double Channels
(Tubular Motor)

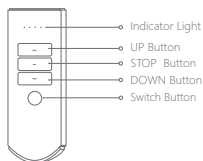


Five Channels
(Tubular Motor)

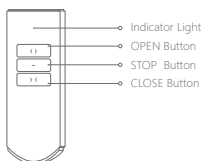


Single Channel
(Curtain Motor)

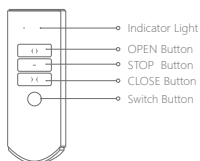


Double Channels
(Curtain Motor)

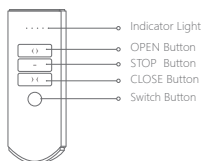

Five Channels
(Curtain Motor)

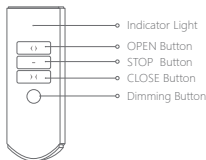

Single Channel -LED
(Curtain Motor)

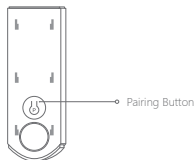

Back



Mounting Bracket


Technical data

- Power : 3V
- Frequency : 433.92MHz
- Working current : $\leq 20\text{mA}$
- Standby current : $\leq 1\mu\text{A}$
- Working temperature : $-20^{\circ}\text{C} \sim +60^{\circ}\text{C}$
- Distance : $\geq 100\text{m}$
- Battery specification : CR2032

Warning

- Keep the transmitter away from moisture and impact to extend the service life.
- If it is found that transmitter needs to be closely controlled or the button is not too sensitive and the indicator light blinks and darkens, the battery needs to be replaced.
- Press any button for more than 10 seconds, the transmitter will stop sending wireless signals.
- Please dispose of used batteries properly.

Battery replacement

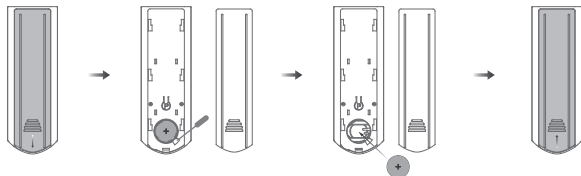

① Slide the battery cover downward

② Use a pointed object to pry out the old battery and dispose of it properly.

③ Place the new battery right side up in the battery compartment

④ Slide it upward to close the battery cover.