



H805

QUICK START GUIDE

1.APEARANCE INTRODUCTION

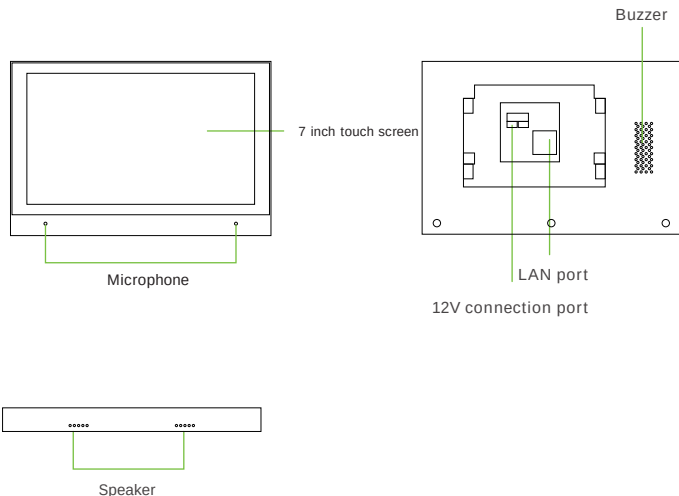


2.EQUIPMENT INSTALLATION

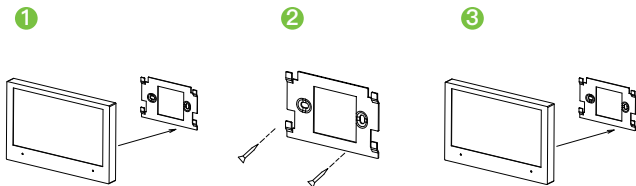

- 1) Remove the mounting plate from the device.
- 2) Attach the mounting plate to the wall, drill holes, and secure the mounting plate to the wall with screws.
- 3) Hang the device on the installed mounting plate.

3. Schematic Diagram of Access Control System

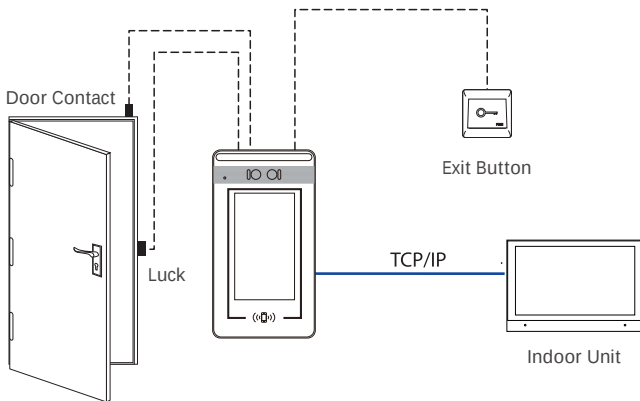


4. USE FUNCTION DESCRIPTION

The display shows the content after power on



 Answer an incoming call



Remote monitoring door machine



- Selecting the "Open Door" button will open the door controlled by the other door machine;
- Select the "Answer" button to enter the answering interface, and you will be able to answer audio and video calls;
- Selecting the "Open Door" button will open the door controlled by Select the "Hang Up" button to reject the other party's call.

communicate by telephone Smart home (to be developed) Home security (to be developed)



Ladder control (to be developed)

information

 
set up



View system information

Ethernet

Set the volume



Set brightness

Set language

Restart (Restartable device)




- Click "Call" to select the door machine or property management machine to be called, and then the call can be made;
- In the "Ethernet bar", you can set static IP and dynamically obtain IP address, IP address and subnet.
- Mask, gateway, DNS
- Click on the "display bar" to control the screen brightness and screen time; Scroll by dragging brightness level;
- In the "Language Bar", click the corresponding language to switch different languages,
- which are currently supported. simplified Chinese, traditional Chinese and English;
- In the "sound bar", slide the scroll bar to set the volume of the device;
- In the Equipment column, you can see the equipment type, IP address, version number and serial number.

5. ADD DEVICES (BACKGROUND)



(1)

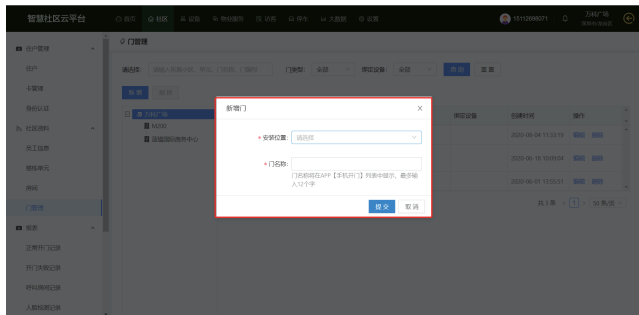

(2)

智慧社区云平台																																																																																																													
首页 社区 设备 物业设备 门禁 停车 大数据 设置 用户头像 用户名称																																																																																																													
设备管理 设备	设备状态监控 设备总数 26 在线设备 26 离线设备 0 断网 0 <table> <thead> <tr> <th>设备名称</th><th>设备型号</th><th>安装位置</th><th>状态</th><th>版本号</th><th>IP地址</th><th>最近在线时间</th><th>命令数</th><th>命令结果</th><th>操作</th></tr> </thead> <tbody> <tr> <td>1栋1单元门-111363581</td><td>M500</td><td>1栋1单元1栋1单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.72</td><td>20200807182513</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> <tr> <td>1栋1单元门-1194943302</td><td>M500</td><td>1栋1单元1栋1单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.14</td><td>20200807182534</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> <tr> <td>1栋2单元门-1276026220</td><td>M500</td><td>1栋2单元1栋2单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.71</td><td>20200807182512</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> <tr> <td>2栋1单元门-1411254493</td><td>M500</td><td>2栋1单元1栋2单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.77</td><td>20200807182512</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> <tr> <td>2栋1单元门-1194938061</td><td>M500</td><td>2栋1单元1栋2单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.23</td><td>20200807182515</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> <tr> <td>2栋2单元门-1194941980</td><td>M500</td><td>2栋2单元1栋2单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.21</td><td>20200807182513</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> <tr> <td>2栋2单元门-1194942683</td><td>M500</td><td>2栋2单元1栋2单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.20</td><td>20200807182514</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> <tr> <td>3栋1单元门-1411266270</td><td>M500</td><td>3栋1单元1栋3单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.65</td><td>20200807182514</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> <tr> <td>3栋2单元门-1275923944</td><td>M500</td><td>3栋2单元1栋3单元无选...</td><td>在线</td><td>2.2.0.120</td><td>192.168.1.42</td><td>20200807182511</td><td>0</td><td>OK</td><td>设备命令 详情</td></tr> </tbody> </table>									设备名称	设备型号	安装位置	状态	版本号	IP地址	最近在线时间	命令数	命令结果	操作	1栋1单元门-111363581	M500	1栋1单元1栋1单元无选...	在线	2.2.0.120	192.168.1.72	20200807182513	0	OK	设备命令 详情	1栋1单元门-1194943302	M500	1栋1单元1栋1单元无选...	在线	2.2.0.120	192.168.1.14	20200807182534	0	OK	设备命令 详情	1栋2单元门-1276026220	M500	1栋2单元1栋2单元无选...	在线	2.2.0.120	192.168.1.71	20200807182512	0	OK	设备命令 详情	2栋1单元门-1411254493	M500	2栋1单元1栋2单元无选...	在线	2.2.0.120	192.168.1.77	20200807182512	0	OK	设备命令 详情	2栋1单元门-1194938061	M500	2栋1单元1栋2单元无选...	在线	2.2.0.120	192.168.1.23	20200807182515	0	OK	设备命令 详情	2栋2单元门-1194941980	M500	2栋2单元1栋2单元无选...	在线	2.2.0.120	192.168.1.21	20200807182513	0	OK	设备命令 详情	2栋2单元门-1194942683	M500	2栋2单元1栋2单元无选...	在线	2.2.0.120	192.168.1.20	20200807182514	0	OK	设备命令 详情	3栋1单元门-1411266270	M500	3栋1单元1栋3单元无选...	在线	2.2.0.120	192.168.1.65	20200807182514	0	OK	设备命令 详情	3栋2单元门-1275923944	M500	3栋2单元1栋3单元无选...	在线	2.2.0.120	192.168.1.42	20200807182511	0	OK	设备命令 详情
设备名称	设备型号	安装位置	状态	版本号	IP地址	最近在线时间	命令数	命令结果	操作																																																																																																				
1栋1单元门-111363581	M500	1栋1单元1栋1单元无选...	在线	2.2.0.120	192.168.1.72	20200807182513	0	OK	设备命令 详情																																																																																																				
1栋1单元门-1194943302	M500	1栋1单元1栋1单元无选...	在线	2.2.0.120	192.168.1.14	20200807182534	0	OK	设备命令 详情																																																																																																				
1栋2单元门-1276026220	M500	1栋2单元1栋2单元无选...	在线	2.2.0.120	192.168.1.71	20200807182512	0	OK	设备命令 详情																																																																																																				
2栋1单元门-1411254493	M500	2栋1单元1栋2单元无选...	在线	2.2.0.120	192.168.1.77	20200807182512	0	OK	设备命令 详情																																																																																																				
2栋1单元门-1194938061	M500	2栋1单元1栋2单元无选...	在线	2.2.0.120	192.168.1.23	20200807182515	0	OK	设备命令 详情																																																																																																				
2栋2单元门-1194941980	M500	2栋2单元1栋2单元无选...	在线	2.2.0.120	192.168.1.21	20200807182513	0	OK	设备命令 详情																																																																																																				
2栋2单元门-1194942683	M500	2栋2单元1栋2单元无选...	在线	2.2.0.120	192.168.1.20	20200807182514	0	OK	设备命令 详情																																																																																																				
3栋1单元门-1411266270	M500	3栋1单元1栋3单元无选...	在线	2.2.0.120	192.168.1.65	20200807182514	0	OK	设备命令 详情																																																																																																				
3栋2单元门-1275923944	M500	3栋2单元1栋3单元无选...	在线	2.2.0.120	192.168.1.42	20200807182511	0	OK	设备命令 详情																																																																																																				

Online status

7.ONLINE AND OFFLINE STATUS (EQUIPMENT)



Online status



Offline status

When the device displays the IP address, it is online; When the device does not display the IP address, it is offline.

