

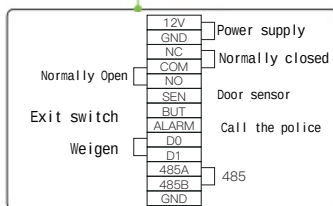


VF632


Quick Start Guide

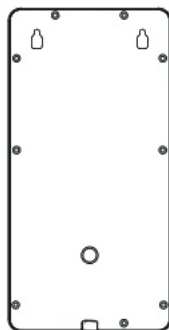

1. Product Description

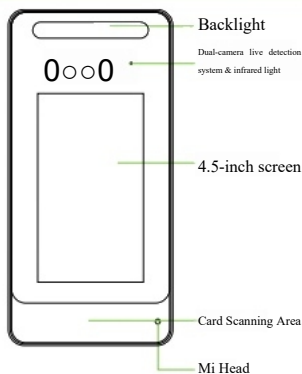


2. Equipment Installation

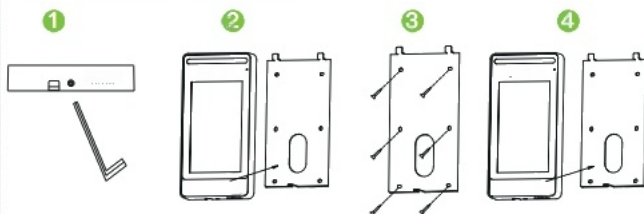


- 1) Remove the anti-tampering screw using a four-point screwdriver;
- 2) Remove the hanging panel, attach it to the wall, and drill a hole;
- 3) Secure the mounting plate to the wall with screws, and run power cables, network cables, and other wires through the holes for wiring.
- 4) Hang the device on the installed mounting plate and drive in the anti-tampering screws.

3. Schematic Diagram of the Access Control System

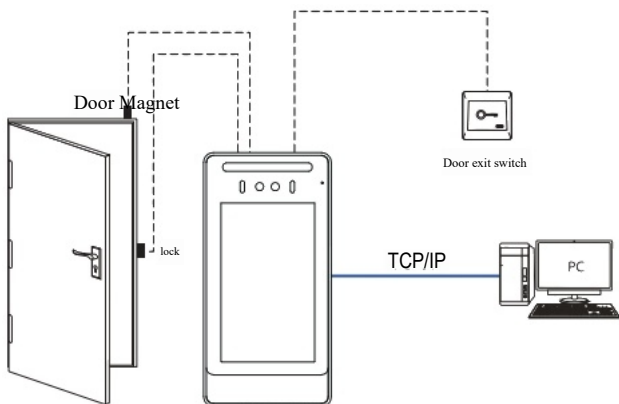


4. Door Contact Magnet, Exit Switch

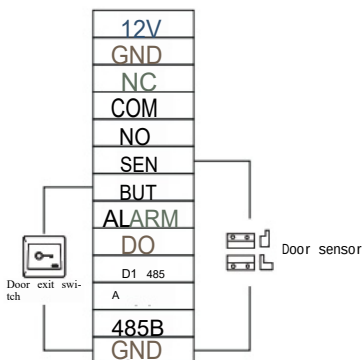


5 Connection Door Lock

This device supports both normally open (NO) and normally closed (NC) locks. For locks that open when powered and close when powered off, use the NO terminal; for those that close when powered and open when powered off, use the NC terminal.

1) Normal closed lock when powered on

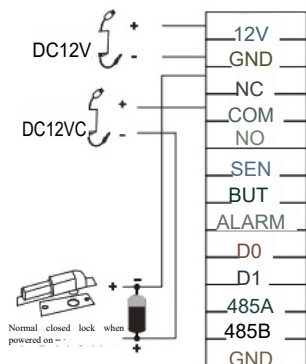

2) Power-on Normally Open Lock

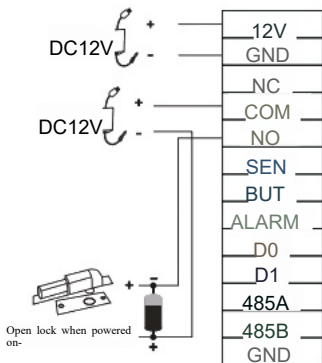

6. View system information

After entering the device interface, press the "Password" button, then the "Settings" button. Enter the management password "115200" and click the "Confirm" button to view system information.



Device thermal imaging: VF710

IP address 1021681.132

Even number: 0990

Serial Number: V325163282

CNS 1921081.1

Gateway address: 192.168.1

Server address: 10052.94.1008+e9

Total faces: 150

Number of successful annotations: 120

7. Call Room Number

After entering the device interface, press "Dial".  Click the button to enter the call interface.

For a residential building entrance, enter the unit number followed by the room number, then press the "Dial" button to initiate a call. After the call ends, press "Hang Up".  Click the button to end the call.

For a unit door, simply enter the room number and press the "Dial" button to initiate a call. After the call ends,



8. View Door Opening Records



Click "Community" - "Normal Door Opening Records" to view the regular door opening records.

Click "Community" - "Door Opening Failure Records" to view the failed door opening records.

Click "Community" → "Call Room Records" to view the call room records.

Click "Community" - "Face Detection Records" to view the records of door openings using facial recognition.

9. Add Device (Background)



(1)



(2)



(3)

1. Click "Community" → "Door Management", as shown in Figure (1);
2. Click "Add", enter the door-related information, and select "Residential Complex, Unit, Room" as the installation location to create the door. The door number is used for card registration; then click "Submit", as shown in Figure (2).
3. Click "Device" → "Add" to enter the device information, then click "Submit", as shown in Figure (3).

Note: Two door entry units cannot be installed at the same location. When adding a new door entry unit, the device will be associated with user information, facial recognition data, access cards, management unit details, indoor unit specifications, property information, advertisements, announcements, and visitor records.

10 Online and Offline Status (background)

Click "Device" → "Device Status Monitoring" to view the online and offline status of the device.

智慧社区云平台

设备状态监控

设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作

Offline State

智慧社区云平台

设备状态监控

设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作
设备名称	设备型号	设备位置	状态	版本号	固件版本	最近连接时间	平均数	安全结果	操作

Online Status

11. Online and Offline Status (device Side)



Online Status

When the Ethernet icon, cloud visualization icon, or cloud platform icon in the upper-left corner appears white, it indicates that the device is online.



Offline state

When the "Prohibited" icon appears in the upper left corner, the device is offline.

12. Face Addition (Background)



1. Click "Community" → "Resident" → "Add", enter resident information, then click "Browse" to upload photos from your computer; click "Snap" to capture images with the camera.



2. To enter information, click "Edit" to upload the face image.

13 Face Addition (APP)



(1)



(3)



(2)



(4)

1. Click "Community" → "My Home", as shown in Figure (1);
2. Click "Add Property", as shown in Figure (2);
3. Fill in the residential community information as shown in Figure (3);
4. Enter the resident information and upload the facial image, then click "Submit" as shown in Figure (4). Once the backend review is approved, the facial recognition system will unlock the door.



Note: If household information has been completed, you can upload and replace your facial photo under "Community"> "My Home"> "Face Registration".

14. Face Removal (Background)



1. Click "Community" - "Resident" - "Add", then click the face photo to see the "Delete" icon. Click the icon to remove the face photo.

15. Face Removal (APP)



(1)



(2)




(3)

1. As shown in Figure (1), click "My" → "My Property" → "Face Registered" to access the interface displayed in Figure (2). Click the image to enlarge it and proceed with the face deletion operation, as illustrated in Figure (3).

16. Appendix

Product Appearance Display

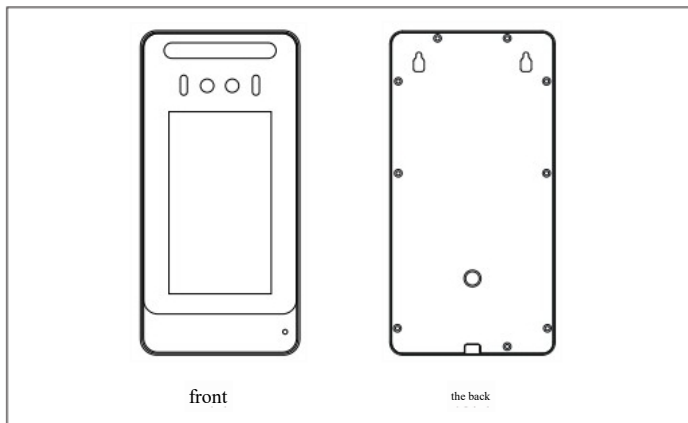

*The Company reserves the final right to make changes and to interpret the terms.

