




Model: PGC-320

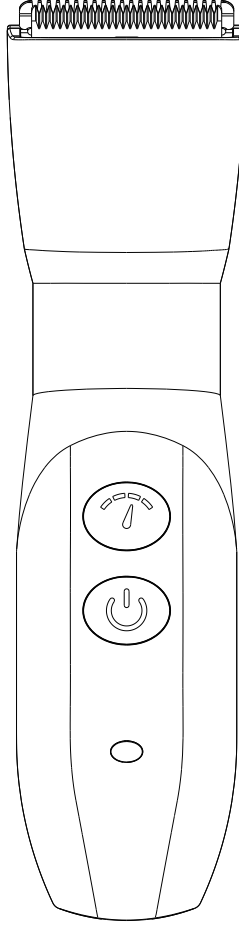



CORDLESS ANIMAL CLIPPER

Pet Clipper

CLIPPER SPECIFICATIONS

Model	PGC-320
Input	5V --- 1A 8W Max
Lithium Battery	3.7V 2000mAh
Charge Time	150 minutes
Run Time	240 minutes
Speed	5500 / 6500 SPM
Noise	≤ 65 dB
Package Includes	Clipper USB Type-C Cable - 1.5m / 4.9 feet. Cleaning Brush Lubricant Oil - 4ml / 0.14oz Manual

Accessories:

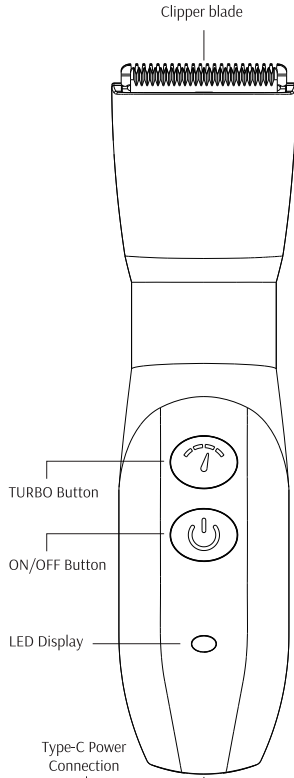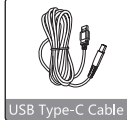



①

USAGE

Push the switch lever and adjust it to the desired speed position to use the clipper.

- When the battery level is sufficient, the clipper can be operated cordless.
- When the battery level is very low or there is no time to charge the clipper, it can be temporary operated with a cord like the corded version.

 * The battery will be charged simultaneously when the clipper operated with a cord.

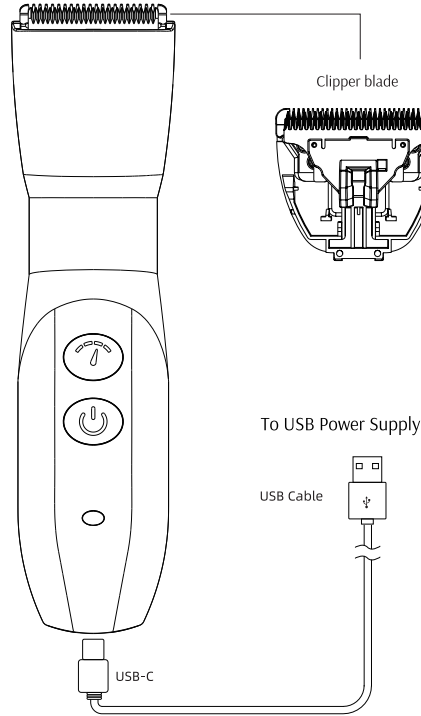

②


CHARGING INSTRUCTION

PGC-320 support working with cord and cordless, to meet the demands of long working hours. Cordless using is more convenient.

The clipper can be charged by charing cable and your power adaptor.

When fully charged, please remove the charging cable. Remaining power from 0% to 100% takes only 150 minutes, convenient for you to use at any time.

During using the clipper with cord, it can be charged at the same time.

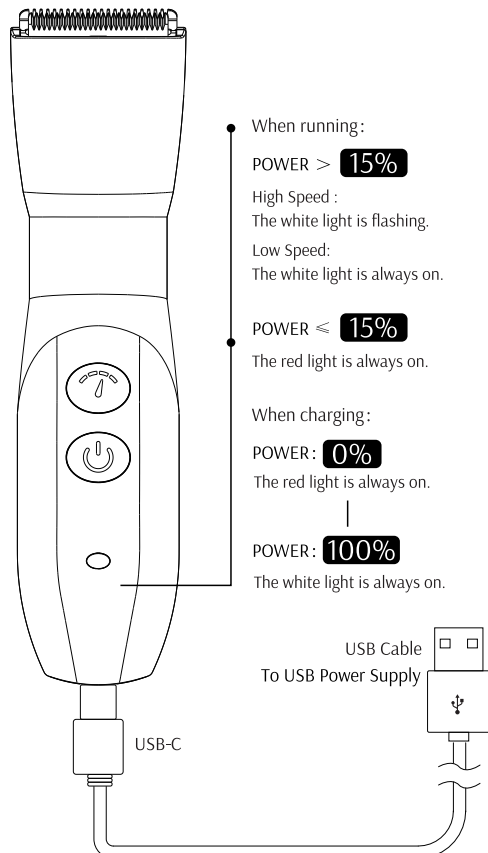

③

MAINTAINING BLADES


CAUTION:

Turn OFF the clipper and disconnect from outlet before performing maintenance.

BLADE REMOVAL, MAINTENANCE AND INSTALLATION


◆ BLADE REMOVAL

Hold the clipper face up with one hand and press the blade down with thumb, then remove the blade into the other hand to avoid dropping the blade.

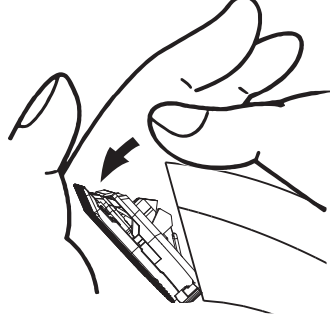

◆ BLADE MAINTENANCE


- Blade cleaning: Press and hold the top of the shear blade. Use the cleaning brush to clean hair between the shear blade and the fixed blade.

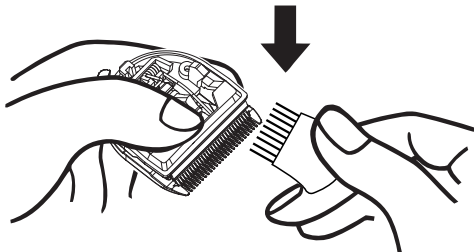

④

CHARGING INSTRUCTION


- Blade oiling: Use 1-2 drops of lubricating oil on the 5 points shown below.

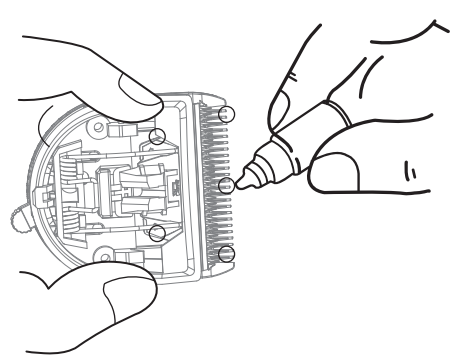

⊘ Do not detach the blade spring while maintaining to avoid malfunction.

◆ BLADE INSTALLATION

Hold the clipper face down with one hand and place the bottom of the blade aligning the middle of the blade with the clipper. Push the front of the blade down until it snaps into place.

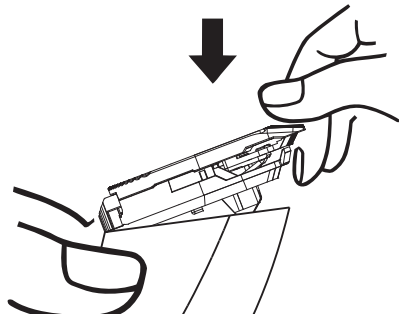

⑤

Warranty card

THE FOLLOWING PRODUCTS GUARANTEE

- This product under-went strict quality control and inspection during the manufacturing process.
- Product has 1 year warranty except the blade and other accessories which come with product. Improper use will automatically void warranty.
- Warranty will be voided if the following occurs:
 - Failure caused by improper use
 - Attempting to repair the clipper yourself
 - Dropping clipper
 - Power failures caused by short circuit
 - Non-compliance with the specification precautions caused by fault
- It is mandatory that proof of purchase and warranty card are included with your defected item. If it is not, the warranty will automatically be voided.

WARRANTY CARD

Purchase Date: _____

Point of Sale Phone: _____

Sales point address: _____

⑥