

shernbao

Your Pets, Our Care

Wuhan Shernbao Pet Products Manufacturing Co., Ltd.
武汉神宝宠物用品有限公司

☎ 400-658-8428

 
🌐 WWW.SHERNBAO.COM

📍 Room 1608, Unit A, No. 38, Minyuan Road, Wuhan,
Hubei Province, China

武汉东湖新技术开发区民院路38号龙安港汇城A单元16层08室

shernbao

Model: PGC-318

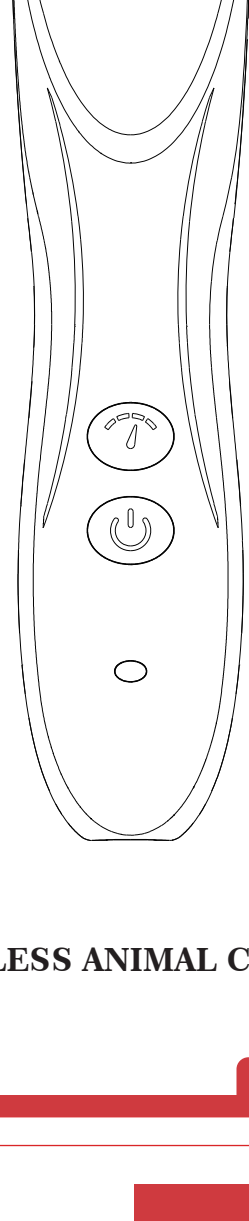



CORDLESS ANIMAL CLIPPER

Pet Clipper
专业宠物电推剪

CLIPPER SPECIFICATIONS

Model	PGC-318
Input	5V = 1A 5W Max
Lithium Battery	3.7V 2000mAh
Charge Time	150 minutes
Run Time	240 minutes
Speed	5000 / 5500 RPM
Noise	≤ 65 dB

Accessories:

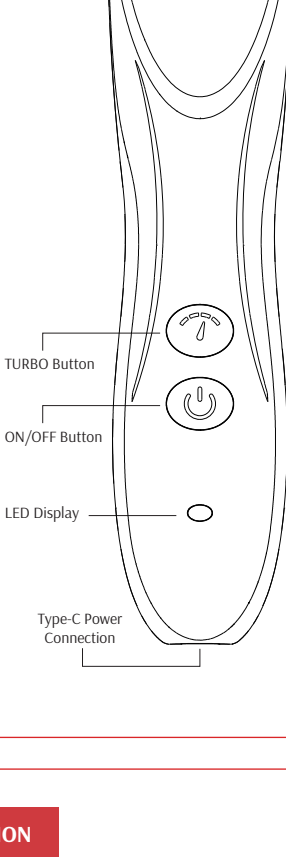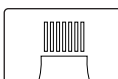


①

USAGE

Push the switch lever and adjust it to the desired speed position to use the clipper.

- When the battery level is sufficient, the clipper can be operated cordless.
- When the battery level is very low or there is no time to charge the clipper, it can be temporarily operated with a cord like the corded version.

* The battery will be charged simultaneously when the clipper operated with a cord.

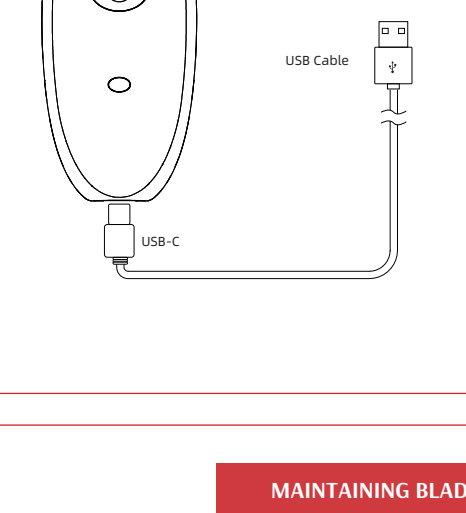

②


CHARGING INSTRUCTION

PGC-318 support working with cord and cordless, to meet the demands of long working hours. Cordless using is more convenient.

The clipper can be charged by charging cable and your power adaptor.

When fully charged, please remove the charging cable. Remaining power from 0% to 100% takes only 150 minutes, convenient for you to use at any time.

During using the clipper with cord, it can be charged at the same time.

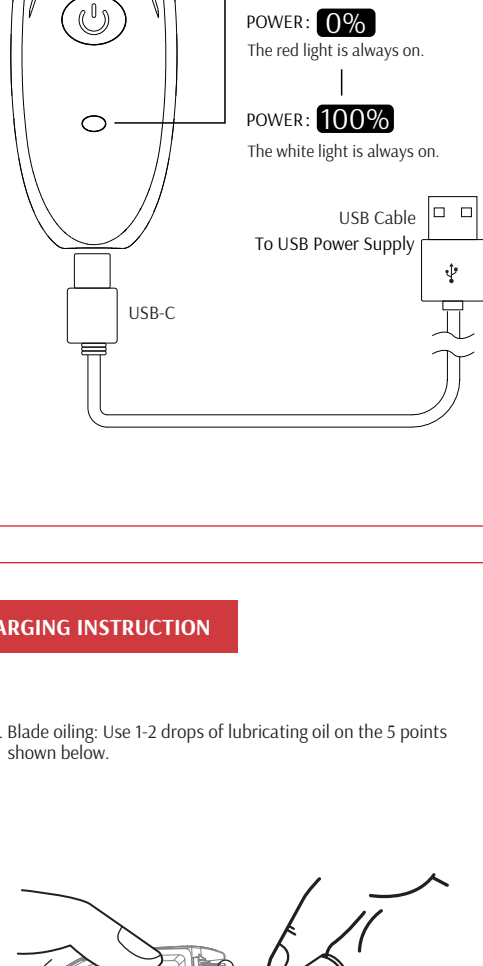

③

MAINTAINING BLADES


CAUTION:

Turn OFF the clipper and disconnect from outlet before performing maintenance.

BLADE REMOVAL, MAINTENANCE AND INSTALLATION


◆ BLADE REMOVAL

Hold the clipper face up with one hand and press the blade down with thumb, then remove the blade into the other hand to avoid dropping the blade.

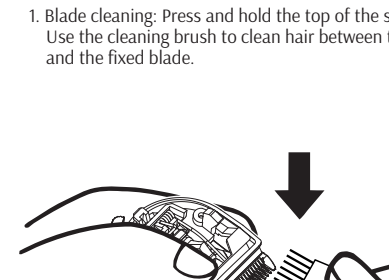

◆ BLADE MAINTENANCE


1. Blade cleaning: Press and hold the top of the shear blade. Use the cleaning brush to clean hair between the shear blade and the fixed blade.

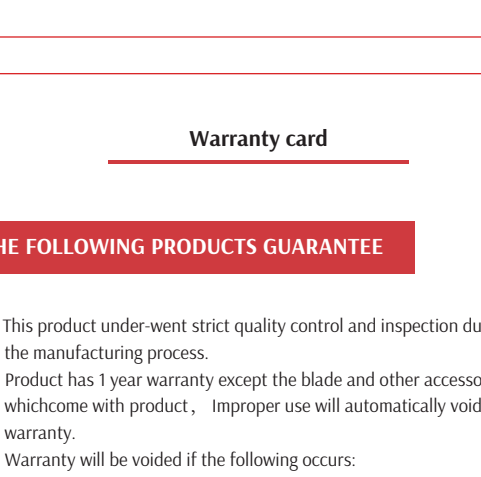

④

CHARGING INSTRUCTION

2. Blade oiling: Use 1-2 drops of lubricating oil on the 5 points shown below.

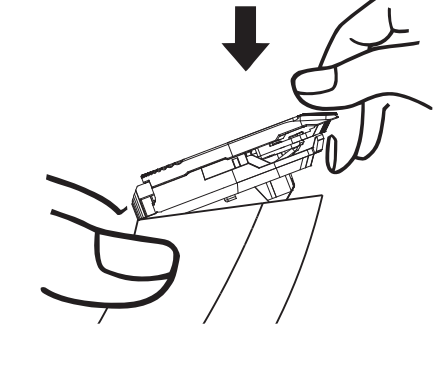

⚠ Do not detach the blade spring while maintaining to avoid malfunction.

◆ BLADE INSTALLATION

Hold the clipper face down with one hand and place the bottom of the blade aligning the middle of the blade with the clipper. Push the front of the blade down until it snaps into place.



⑤

Warranty card

THE FOLLOWING PRODUCTS GUARANTEE

- This product under went strict quality control and inspection during the manufacturing process.
- Product has 1 year warranty except the blade and other accessories which come with product. Improper use will automatically void warranty.
- Warranty will be voided if the following occurs:
 - Failure caused by improper use
 - Attempting to repair the clipper yourself
 - Dropping clipper
 - Power failures caused by short circuit
 - Non-compliance with the specification precautions caused by fault
- It is mandatory that proof of purchase and warranty card are included with your defected item. If it is not, the warranty will automatically be voided.

WARRANTY CARD

Purchase Date: _____

Point of Sale Phone: _____


Sales point address: _____

⑥

产品规格

型 号	PGC-318
输 入	5V = 1A 5W Max
电 池	3.7V 2000mAh
充电时间	150 分钟
续航时间	240 分钟
转 速	5000 / 5500 RPM
噪 音	≤ 65 dB
主机以及附件	电推剪 USB Type-C 充电线 - 1.5m 清洁刷 润滑油 - 4ml 说明书

附属配件:

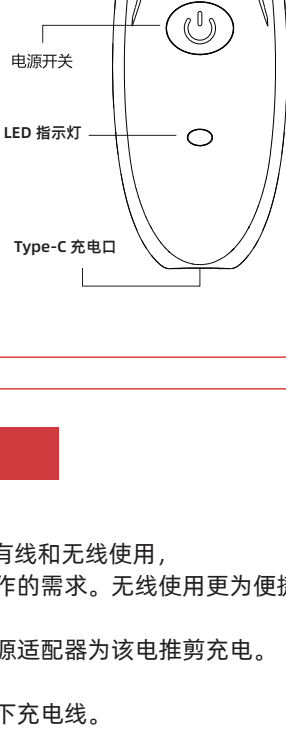

⑦

使用方法

打开开关，即可使用该理发器。

- 当电量充足时，电推剪可以无线使用。
- 当电量极低或没有时间给电推剪充电时，可像有线款电推剪一样临时连接电源线使用。

* 连接电源线使用电推剪时，电池会同时充电。



电源开关



调速开关
5000 / 5500 RPM



⑧

充电说明

 
PGC - 318 支持有线和无线使用，以满足长时间工作的需求。无线使用更为便捷。

可用充电线和电源适配器为该电推剪充电。

充满电后，请拔下充电线。

电量从 0% 充至 100% 仅需 150 分钟，方便您随时使用。

在使用有线理发器时，它也可以同时充电。

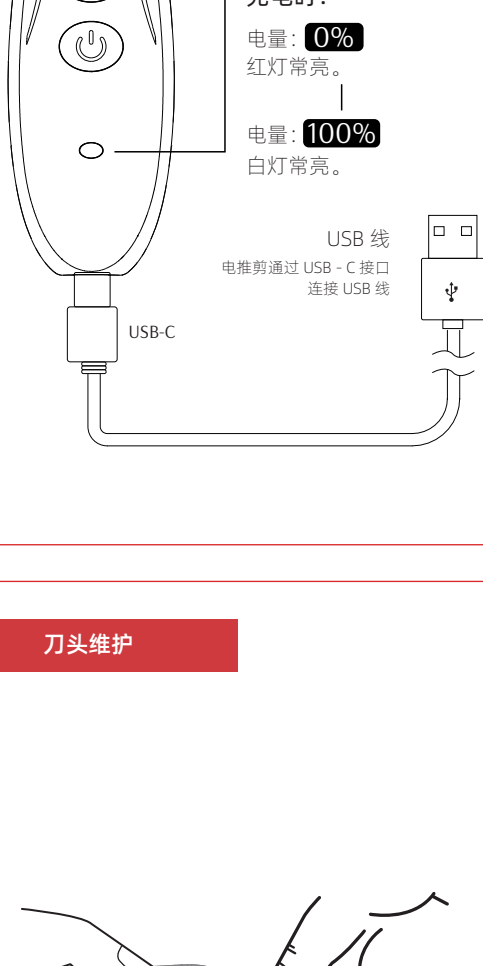

⑨

刀头维护


⚠ 注意事项:

在进行维护前，请关闭电推剪并断开电源。

刀头拆卸、维护与安装




如图所示，用右手大拇指向后推动刀头，左手保护以免刀头跌落并损坏。

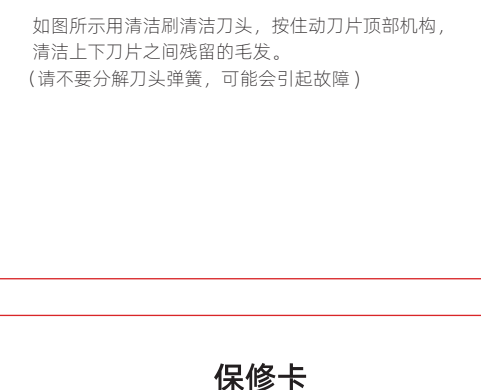

如图所示用清洁刷清洁刀头。按住刀片顶部机构，清洁上下刀片之间残留的毛发。
(请不要分解刀头弹簧，可能会引起故障)

⑩

刀头维护

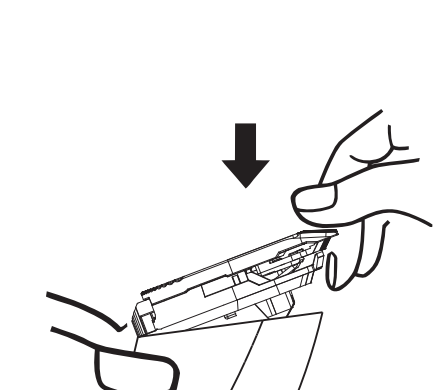

清洁完后如图所示在刀头5个位置注入1-2滴润滑油，然后重新装入刀头。
(对准槽位在装入时必须听到“咔哒”声才能确定完全装上)

⑪

保修卡

产品保修条例

- 在正常使用、保养状态下，主机保修一年。
- 消耗性产品或零件如刀头、分毛套梳、润滑油、毛刷等，不在保修之列。
- 在保修期内，若有下列状况之一，恕不免费修理
 - 未能出示保修卡或保修的机型与本保修卡所填写之内容不符
 - 弄虚作假、未按要求填写保修卡的内容或者涂改的
 - 购买日期有填写但无销售单位印章
 - 未按使用说明书要求使用、维护、保养而造成故障或损坏的(如跌落、浸水、自行拆装等人为损坏等)
 - 因自然灾害等不可抗力或购买后运送、保管不当所造成的损坏
- 本保修卡为唯一保修凭证，请勿遗失，恕不补发，请妥为保存。
- 对于无保修卡或超过保修期的产品，本公司实行合理的收费修理。
- 需修理(含保修)时请将产品直接送至神宝指定售后服务点，本公司不承担任何因送修产生的交通及运输费用，也不承担任何其它间接损失。
- 由于产品的不断更新换代，本公司保留在没有事先通知的情况下，对产品进行变动、修改的权利。

顾客联系信息

姓名及电话: _____

联系地址: _____

销售单位及出售时间: _____

⑫