



 
Your Pets, Our Care

WUHAN SHERNBAO PET PRODUCTS MANUFACTURING CO., LTD

- ☎ 400-658-8428
- 🌐 WWW.SHERNBAO.COM
- 📍 Room 1608, Unit A, No. 38, Minyuan Road, Wuhan, Hubei Province, China



Model: ND01/ND01i

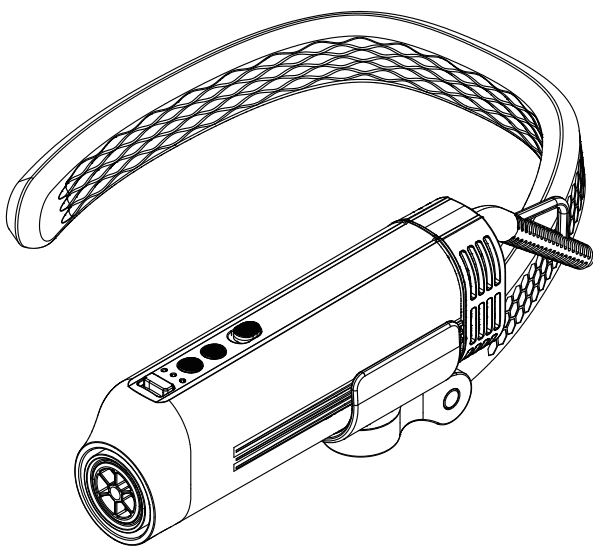

PROFESSIONAL NECK DRYER
WITH HIGH POWER FOR PET GROOMING

NECK DRYER

SAFETY INSTRUCTIONS

- 1.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similany qualifiedper- sons in order to avoid a hazard.
- 2.This appliance can be us ed by children aged from 8 years and above and persons with reduced physical ,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without superision.
3. When the appliance is used in a bathroom, unplug it after use since the proximity of waterpresents a hazard even when the appliance is switched off.
- 4.This dryer is available in three configurations:
220V~50Hz 1000W
220V-240V~50/60Hz 1000W-1200W
125V~60Hz 1100W
5. Use a power outlet that meets certified safety standards and has sufficient rated capacity for the device. The dryer must be connected to a dedicated circuit separate from other appliances.
- 6.Do not use this product near textiles, flammable objects, or flammable gases (such as petroleum gas, volatiles, paint thinners, sprays, etc.).
- 7.Do not block the air inlet and air outlet during use. Clean it after use to prevent the accumulation of grease and other residues.
- 8.Please clean the air inlet regularly to ensure smooth air intake, which can extend the service life of the dryer.
- 9.Never leave the dryer unattended while it is running. When finished using or in case of a power outage during use, turn off the wind speed and temperature control switches first, and then unplug it from the socket.
- 10.Avoid dropping the dryer or subjecting it to strong impacts.
- 11.Do not connect any accessories of other brands to this dryer.
- 12.Please regularly check the condition of the power cord. If the plug, power cord, or the dryer itself is damaged, do not use it again.
- 13.Do not coil the power cord around the dryer.
- 14.Do not use thinners, benzene, or other solvents to clean the dryer.
- 15 ⚠ WARNING Do not use this appliance near bathtubs, showers, basins or other vesselscontaining water.
- 16.For additional protection, the installation of a residual current device (RCD) having a ratedresidual operating current not exceeding 30 mA is advisable in the electrical circuitsupplying the bathroom.Ask your installer for advice.

①


CLEANING

USER MAINTENANCE INSTRUCTIONS

This product is equipped with a thermostat that maintains the operating temperature within the safe range. Do not block the air vents during use. When using this dryer near water (like in a bathroom), always plug it into an outlet fitted with a residual-current device (RCD) to prevent electric shock.



Filter Cleansing

- Press and hold the wind speed control button ⬇ for 8~9 seconds to reverse the motor. The air is drawn in through the tail and expelled through the inlet mesh, automatically clearing trapped hair to prevent clogging.
- Please clean the air vents after use each time before power it off.
- Exit self-cleaning mode and power on the unit again to enter normal operation mode.

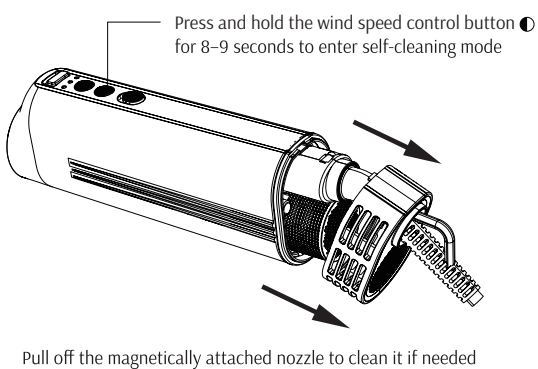

②


ACCESSORIES

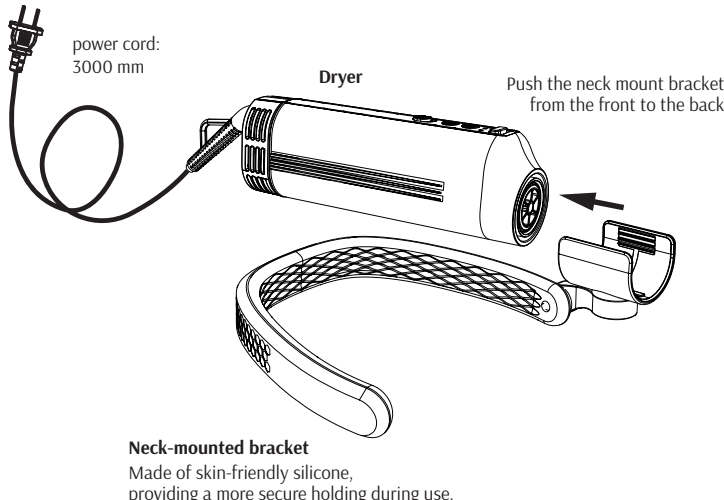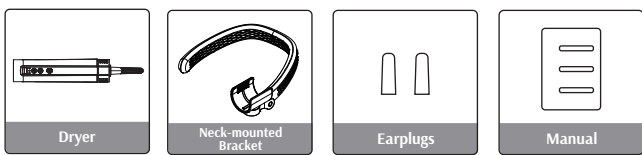

③

OPERATING INSTRUCTION

Two options to use and adaptable to various situations.

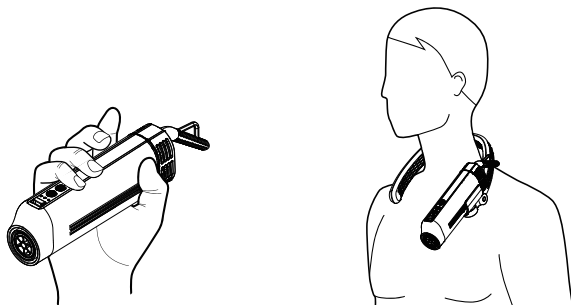

Option 1: Hand hold

Provide more precise control of airflow direction and increases drying efficiency for targeted areas.


Option 2: Neck mounting

Fully free your hands, allowing it to function as a finishing dryer.

④

OPERATING INSTRUCTION

First, ensure the power switch is in the " 0 " position, then insert the plug into a qualified socket to connect the power supply. Push the power switch to the " I " position to turn on the dryer; it will default to the last used temperature setting before shutdown.

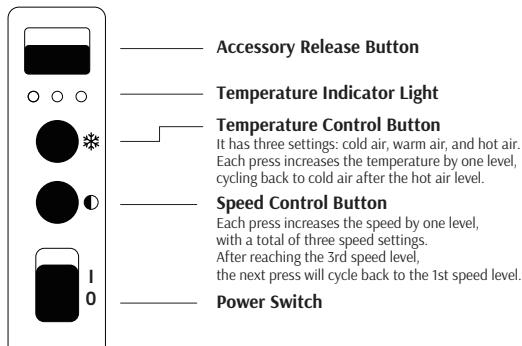

Temperature Indicator Light Status:

- Blue: Cold air
- Purple: Warm air
- Red: Hot air

- Speed 1
- Speed 2
- Speed 3

⑤


INTELLIGENT “CARE” FUNCTION

Intelligent Alternating Cold and Hot Air Cycle Mode:

It blows air alternately with 7 seconds of cold air and 5 seconds of hot air. The temperature indicator light flashes alternately in blue and red.

Short press the speed control button ⬇ :
Adjust the air volume in this mode.

Long press the temperature control button *
for 3-4 seconds:
Activate the cold and hot air care mode.

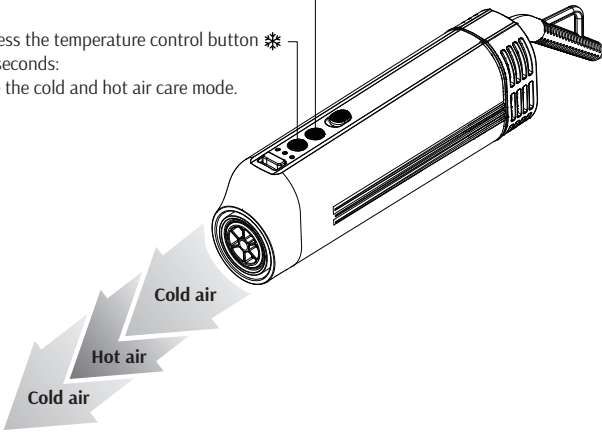

⑥

SPECIFICATIONS

Model	ND01/ND01i
Power	220V-240V~50/60Hz 1000W-1200W
	125V~60Hz 1100W
Net Weight	258g (excluding power cord)
Noise	≤ 76 dB
Temperature	88 C Max
Package Includes	Dryer Neck-mounted bracket Earplugs Manual

Attention

1. Using a hair dryer while hanging around your neck for long time may damage your hearing. Please wear earplugs.
2. Images are for reference only. Actual appearance and specifications may vary with upgrades. Please refer to the actual product.
3. Specifications are based on laboratory testing.

⑦

WARRANTY

Warranty Period:

The warranty begins on the day following the date of receipt, provided the product is used and maintained under normal conditions.

Component	Details	Warranty Period
Dryer	Dryer and internal components	12 months
Neck-mounted Bracket	Neck silicone strip, clamps & rotation mechanism (Note: The neck-mounted components will experience wear & tear and part fatigue over time during use, which is considered normal wear.)	3 months

Non-Warranty Conditions:

- Failure or damage caused by improper use, maintenance, or care as outlined in the user manual, or due to other human factors, including but not limited to.
- Physical damage such as drops, impacts, water immersion, exposure to strong acids or alkalis, inserting foreign objects into device openings, or vigorous shaking.
- Neglect such as failure to regularly clean the back cover and filter, resulting in blockage and indirect product damage; use with incorrect power voltage; placement near heat sources or high-temperature objects.
- Improper operation, use of incompatible parts, unauthorized disassembly, or incorrect reassembly.
- Under these circumstances, warranty service will not be provided.

Paid Repair Service Terms:

Out-of-Warranty Products

Once the warranty expires, we offer chargeable repairs. After inspection, we will propose a reasonable solution and quote a fair repair fee.

How to Request Service

Contact our After-Sales Service Center immediately when a fault occurs. Follow the instructions given, pack the product safely, then bring or send it to us or an authorized service point.

Product Evolution

We reserve the right to revise the user manual or product specifications without prior notice.

Note: To claim warranty service you must supply valid proof-of-purchase showing the exact purchase date.

TEL: 400-658-8428

⑧