



WUHAN SHERNBAO PET PRODUCTS MANUFACTURING CO., LTD.


☎ **400-658-8428**

🌐 WWW.SHERNBAO.COM

📍 ROOM 1608, UNIT A, NO.38 MINYUAN ROAD WUHAN, CHINA



Model: CD-08

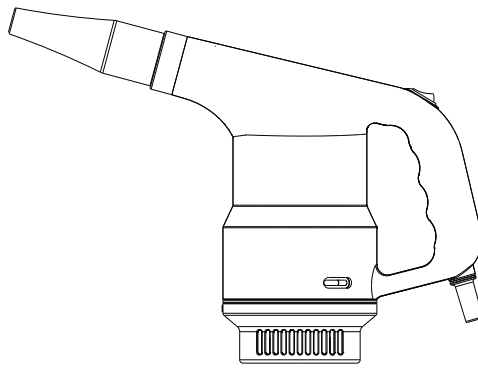

PROFESSIONAL CAR DRYER
HIGH POWER DRYING MACHINE

CAR DRYER

WARNINGS

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 3. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
4. Use a power outlet that meets certified safety standards and has sufficient rated capacity for the device. The dryer must be connected to a dedicated circuit separate from other appliances;
 5. Do not use this product near textiles, flammable objects, or flammable gases (such as petroleum gas, volatiles, paint thinners, sprays, etc.);
 6. Do not block the air inlet and air outlet during use. Clean it after use to prevent the accumulation of grease and other residues ;
 7. Please clean the air inlet regularly to ensure smooth air intake, which can extend the service life of the dryer;
 8. Never leave the dryer unattended while it is running. When finished using or in case of a power outage during use, turn off the wind speed and temperature control switches first, and then unplug it from the socket.
 9. Avoid dropping the dryer or subjecting it to strong impacts.
 10. Do not connect any accessories of other brands to this dryer.
 11. Please regularly check the condition of the power cord. If the plug, power cord, or the dryer itself is damaged, do not use it again.
 12. Do not wrap the power cord around the dryer.
 13. Do not use thinners, benzene, or other solvents to clean the dryer.
 14. If any abnormalities or malfunctions occur during use, do not attempt to disassemble the appliance by yourself.
 15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

⚠ Warning: Do not use this appliance near bathtubs , showers ,basins, or other vessels containing water.

①


CLEANING&MAINTENANCE

USER MAINTENANCE INSTRUCTIONS

During use, do not block the air vents. When using this appliance near water(such as bathroom). Please use a power outlet with a leakage protection device to avoid accidents.

CLEANING THE FILTER


- Clean the air inlet filter when necessary.
- Turn the air inlet cover of the dryer clockwise until it cannot turn further, then remove it from the dryer.
- Remove the dust and clean it.
- Reinstall the dryer air inlet cover. Align the protrusion on it with the notch on the inner back cover of the dryer, then turn clockwise until locked.

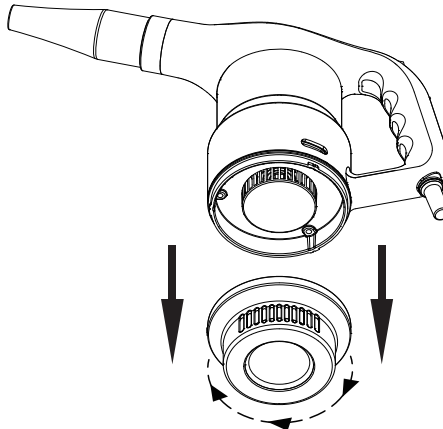


Removable Air Inlet Cover

②


ACCESSORIES

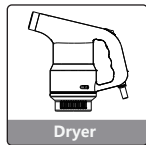


Dryer

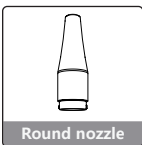


Round nozzle

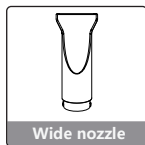 

Wide nozzle

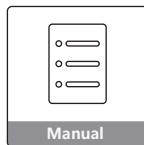 

Manual

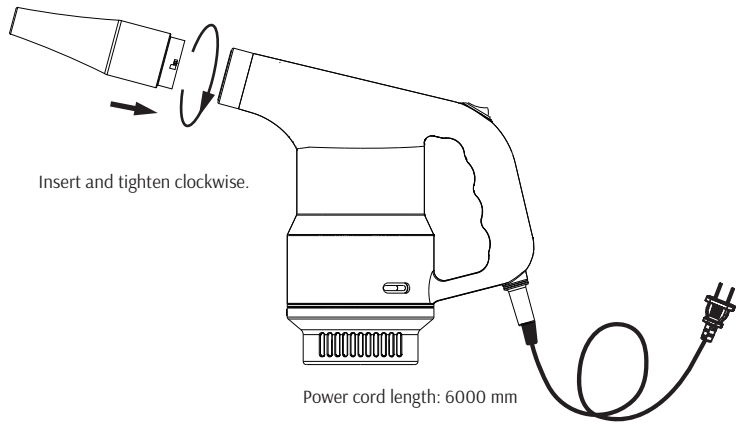

Depending on usage needs,
you can choose the round nozzle or the wide nozzle.

③


OPERATING INSTRUCTION

SWITCH SETTING

2-speed wind settings. Adjust the switch to the required speed level.

WIND SPEED CONTROL SWITCH

 Level I : Low Speed
Level 0 : Off
Level II : High Speed

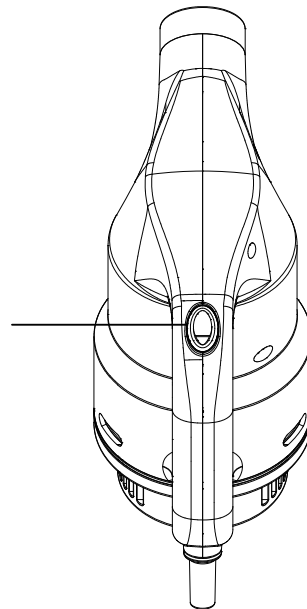

④

SPECIFICATIONS

Model	CD-08
Power	110V~60Hz 1200W 120V~60Hz 1200W 220V-240V ~50Hz 1200W
Noise	≤ 85 dB
Package Includes	Dryer Round nozzle Wide nozzle Manual

⑤

WARRANTY

Warranty Period:

The warranty period starts from the day after receipt, under normal use and maintenance conditions.

Component	Details	Warranty Period
Dryer	Dryer and internal components	12 months

Non-Warranty Conditions:

- Failure or damage caused by improper use, maintenance, or care as indicated in the user manual, or due to other human factors.
- Physical damage such as drops, impacts, water immersion, exposure to strong acids or alkalis, inserting objects into device openings, or vigorous shaking.
- Neglect such as failure to regularly clean the back cover and filter, resulting in blockage and indirect product damage; use with incorrect power voltage; placement near heat sources or high-temperature objects.
- Improper operation, use of incompatible parts, unauthorized disassembly, or incorrect reassembly.
- Under these circumstances, warranty service will not be provided.

Paid Repair Service Terms:

Out-of-Warranty Products

Once the warranty expires, we offer chargeable repairs. After inspection, we will propose a reasonable solution and quote a fair repair fee.

How to Request Service

Contact our After-Sales Service Center immediately when a fault occurs. Follow the instructions given, pack the product safely, then bring or send it to us or an authorized service point.

Product Evolution

We reserve the right to revise the user manual or product specifications without prior notice.

Note: To claim warranty service you must supply valid proof-of-purchase showing the exact purchase date.

TEL: 400-658-8428

Or contact the seller from whom you purchased, official platform store customer service, sales person etc.

⑥