

shernbao

Your Pets, Our Care

Wuhan Shernbao Pet Products Manufacturing Co., Ltd.
武汉神宝宠物用品有限公司


400-658-8428

WWW.SHERNBAO.COM

Room 1608, Unit A, No. 38, Minyuan Road, Wuhan,
Hubei Province, China
武汉东湖新技术开发区民院路38号龙安港汇城A单元16层08室

shernbao

Model: PGC-818

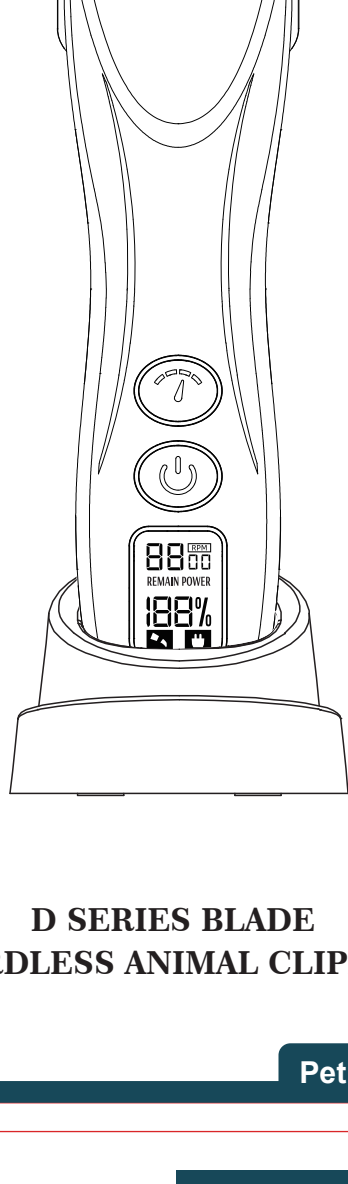


D SERIES BLADE CORDLESS ANIMAL CLIPPER

Pet Clipper

CLIPPER SPECIFICATIONS

Model	Model
Input	5V = 1A
Lithium Battery	3.7V 2600mAh
Charge Time	210 minutes
Run Time	150 minutes
Speed	5000-5500-6000 RPM
Noise	< 65dB
Package Includes	Clipper Charging Station USB Type-C Cable - 2.4m/7.9feet. Cleaning Brush Lubricant Oil Manual

Accessories:

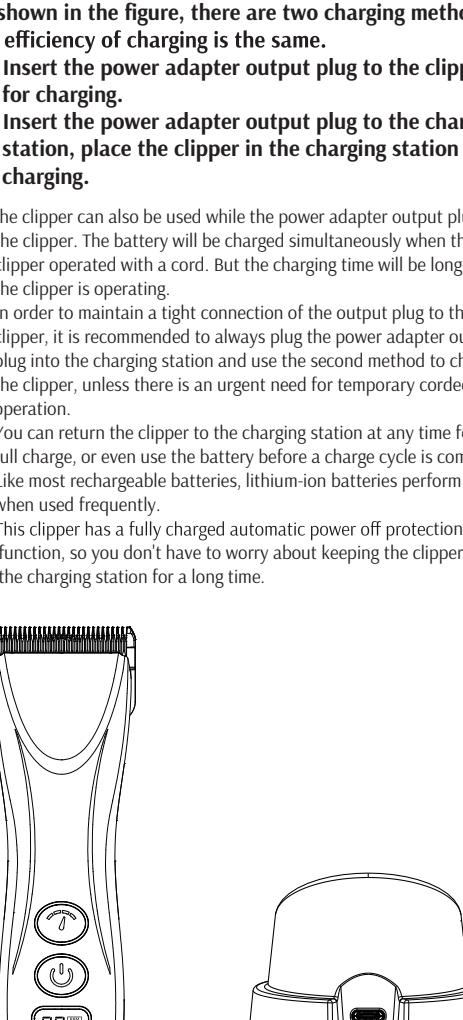


USAGE

Push the switch lever and adjust it to the desired speed position to use the clipper.

- When the battery level is sufficient, the clipper can be operated cordless.
- When the battery level is very low or there is no time to charge the clipper, it can be temporarily operated with a cord like the corded version.

* The battery will be charged simultaneously when the clipper operated with a cord.

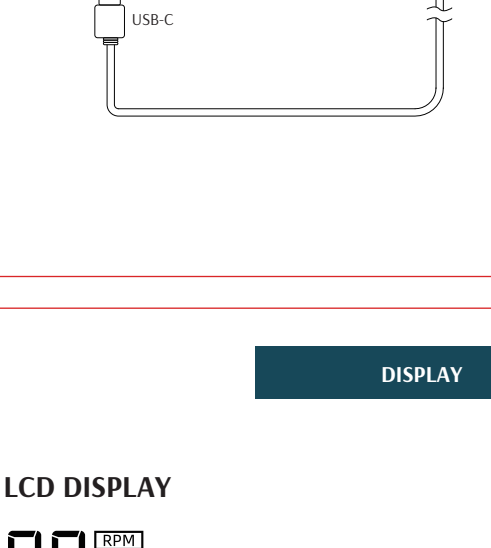


CHARGING INSTRUCTION

As shown in the figure, there are two charging methods, the efficiency of charging is the same.


- Insert the power adapter output plug to the clipper for charging.
- Insert the power adapter output plug to the charging station, place the clipper in the charging station for charging.

- The clipper can also be used while the power adapter output plug to the clipper. The battery will be charged simultaneously when the clipper operated with a cord. But the charging time will be longer if the clipper is operating.
- In order to maintain a tight connection of the output plug to the clipper, it is recommended to always plug the power adapter output plug into the charging station and use the second method to charge the clipper, unless there is an urgent need for temporary corded operation.
- You can return the clipper to the charging station at any time for a full charge, or even use the battery before a charge cycle is complete. Like most rechargeable batteries, lithium-ion batteries perform best when used frequently.
- This clipper has a fully charged automatic power off protection function, so you don't have to worry about keeping the clipper in the charging station for a long time.

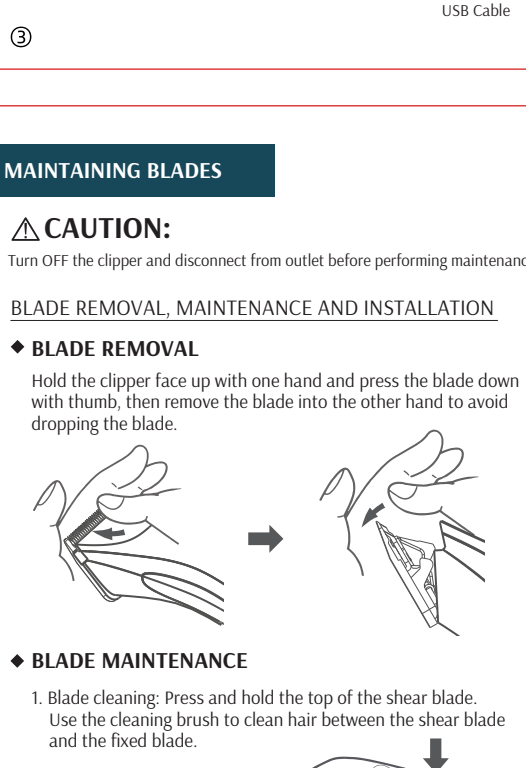


DISPLAY


LCD DISPLAY

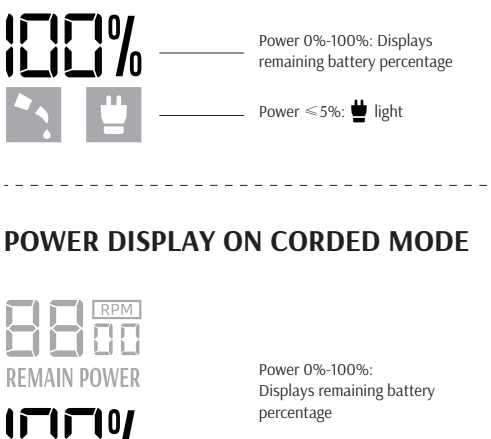

POWER DISPLAY ON CORDLESS MODE

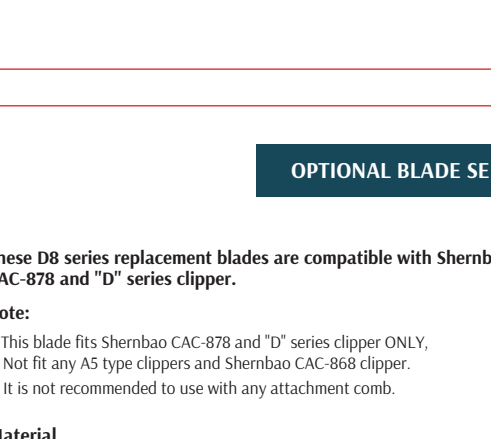

POWER DISPLAY ON CORDED MODE

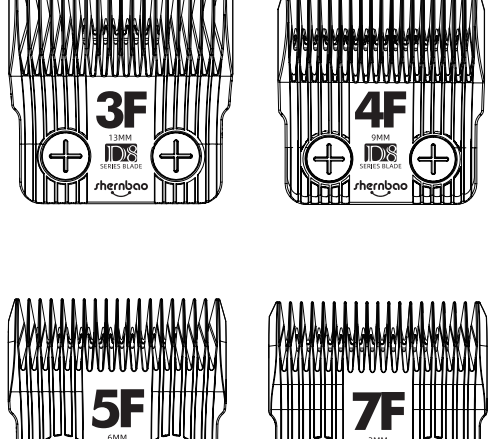


MAINTAINING BLADES

CAUTION:
Turn OFF the clipper and disconnect from outlet before performing maintenance.

BLADE REMOVAL, MAINTENANCE AND INSTALLATION


◆ BLADE REMOVAL

Hold the clipper face up with one hand and press the blade down with thumb, then remove the blade into the other hand to avoid dropping the blade.

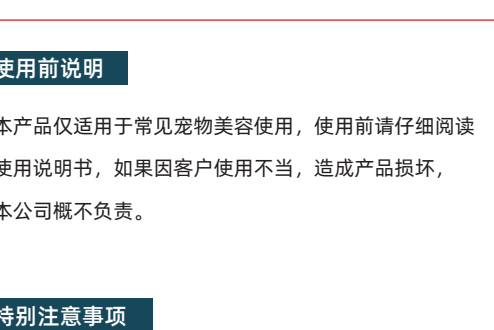

◆ BLADE MAINTENANCE

1. Blade cleaning: Press and hold the top of the shear blade. Use the cleaning brush to clean hair between the shear blade and the fixed blade.

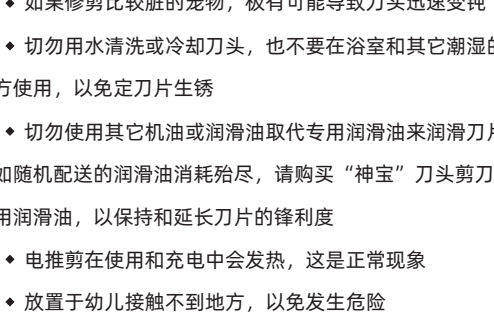


2. Blade oiling: Use 1-2 drops of lubricating oil on the 5 points shown below.



Do not detach the blade spring while maintaining to avoid malfunction.

◆ BLADE INSTALLATION

Hold the clipper face down with one hand and place the bottom of the blade aligning the middle of the blade with the clipper. Push the front of the blade down until it snaps into place.

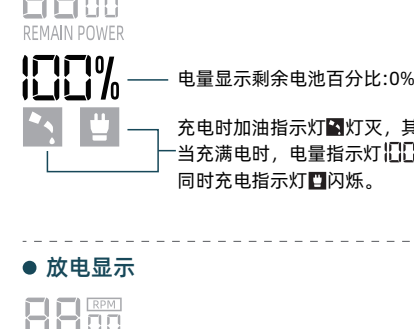

OPTIONAL BLADE SERIES


These D8 series replacement blades are compatible with Shernbao CAC-878 and "D" series clipper.

Note:

- This blade fits Shernbao CAC-878 and "D" series clipper ONLY. Not fit any A5 type clippers and Shernbao CAC-868 clipper.
- It is not recommended to use with any attachment comb.

Material

Comb blade: 440C Steel
Shear blade: Titanium plated Cerami

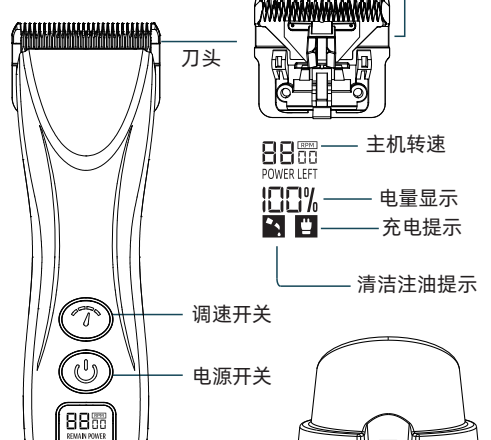

BLADE SIZE CHART	
Blade Size	Leaves Hair
7F	3.0mm
5F	6.0mm
4F	9.0mm
3F	13.0mm

*The clipper comes with a 7F blade.

使用前说明

本产品仅适用于常见宠物美容使用，使用前请仔细阅读使用说明书，如果因客户使用不当，造成产品损坏，本公司概不负责。

特别注意事项

- 剧烈磕碰或跌落都容易造成刀头损坏或主机损坏，每使用30分钟后请务必卸下刀头，清除碎毛屑后加入专用润滑油保养，以保持刀片的锋利度和运转的低噪音，也可以防止长时间的干磨导致刀片发热
- 一次剃较长时间或要剃几只宠物，也要注意适时停下清理刀片和加油后再继续使用
- 最好先洗净吹干，再清理掉毛球和毛结后再修剪，不仅可让您修剪顺畅，延长刀头的寿命，也可以让您的宠物很好的配合和适应
- 如果修剪比较脏的宠物，极有可能导致刀头迅速变钝
- 切勿用水清洗或冷却刀头，也不要浴室和其它潮湿的地方使用，以免定刀片生锈
- 切勿使用其它机油或润滑油取代专用润滑油来润滑刀片，如随机配送的润滑油消耗殆尽，请购买“神宝”刀头剪刀专用润滑油，以保持和延长刀头的锋利度
- 电推剪在使用和充电中会发热，这是正常现象
- 放置于幼儿接触不到地方，以免发生危险

主机结构说明

神宝PGC-818电推剪，可适用于神宝 D8 系列刀头或某些其它D系列刀头。

注意:PGC-818电剪不适用于所有A5系列刀头，也不适用于神宝CAC-868的CoolEdge系列刀头。



附属配件




产品规格参数


型号:PGC-818	
电压	5V = 1A
电池容量	DC3.7V 2600mA
充电时间	210分钟
使用时间	150分钟
3档转速	5000-5500-6000 RPM
噪音	≤ 65dB

LCD屏幕功能说明


● LCD屏幕显示

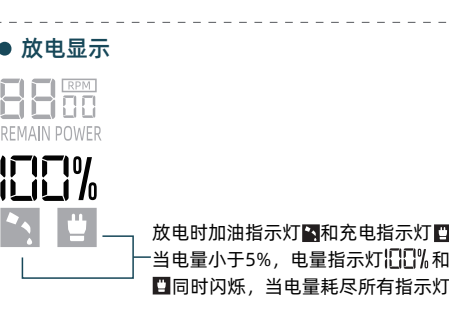

● 充电显示

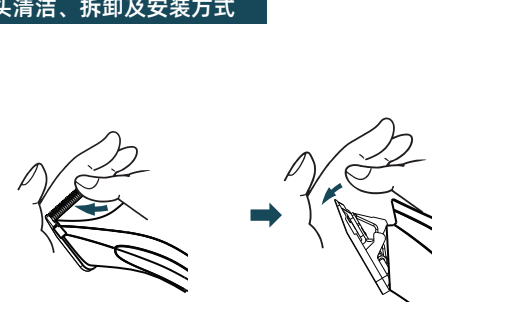

● 放电显示

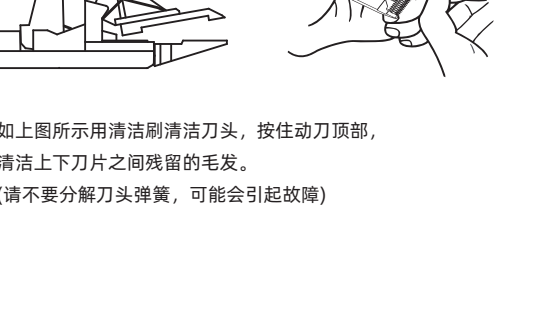

注意:请勿私自拆卸或更换电池，否则可能导致主机系统无法识别，导致主机无法正常工作启动等。


带线使用/无线使用

在你使用过程中，刚好电剪电量不足，工作又只做了一半，这时候你只需要插上原装USB充电线，即可继续工作，可以做到“永不断电”。

在你带线操作的过程中，边工作、边充电。电剪充满电后，即可去掉电源线，无线操作，更加方便，当然，在不使用的时间段，您可以使用充电线为主机充电，剩余电量0%充至100%仅需150分钟，方便您随时使用。

PGC-818可选购刀头

尺寸表	
刀头	最长长度
7F	3.0mm
5F	6.0mm
4F	9.0mm
3F	13.0mm

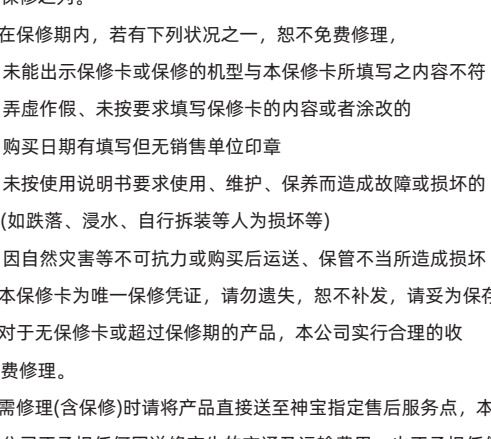

*主机标配刀头为7F

保修卡

产品保修条例

- 在正常使用、保养状态下，主机保修一年。
- 消耗性产品或零件如刀头、分毛套梳、润滑油、毛刷等不在保修之列。
- 在保修期内，若有下列状况之一，恕不免费修理。
 - 未能出示保修卡或保修的机型与本保修卡所填写之内容不符
 - 弄虚作假、未按要求填写保修卡的内容或者涂改的
 - 购买日期有填写但无销售单位印章
 - 未按使用说明要求使用、维护、保养而造成故障或损坏的(如跌落、浸水、自行拆装等人等为损坏等)
 - 因自然灾害等不可抗力或购买后运送、保管不当所造成损坏
- 本保修卡为唯一保修凭证，请勿遗失，恕不补发，请妥为保存。
- 对于无保修卡或超过保修期的产品，本公司实行合理的收费修理。
- 需修理(含保修)时请将产品直接送至神宝指定售后服务点，本公司不承担任何因运送产生的交通及运输费用，也不承担任何其它间接损失。
- 由于产品的不断更新换代，本公司保留在没有事先通知的情况下，对产品进行变动、修改的权利。

顾客联系信息

姓名及电话: _____

联系地址: _____

销售单位及出售时间: _____

10

11

10

11