



More trimming tips and video demo,
please visit our website.


WWW.SHERNBAO.COM

Ver. 1.0 EN

Wuhan Shernbao Pet Products Manufacturing Co., Ltd.



Model: PGT-420

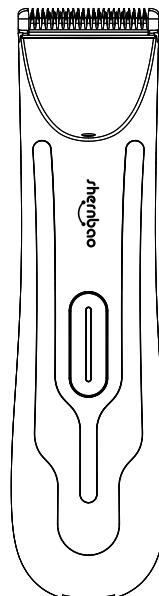


Pet Trimmer

Description

This trimmer is design for detailing use, to trim on pet 's face and ears, sanitary area, feet and paws.

Also works well for surgical prep work.

Parts and Functions

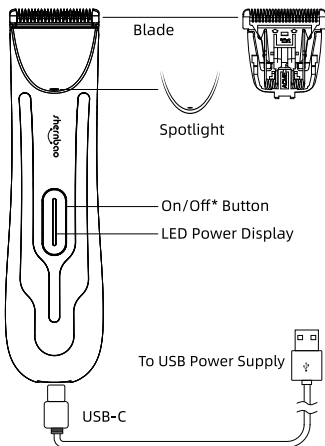

On/Off*



Spotlight
1st

Running, the spotlight is off.



Spotlight
2nd

Keep running, the spotlight is on.



Spotlight
3rd


All off.

LED Indicator Description


While runing and power $\geq 20\%$, steady white light.

While runing and power $\leq 20\%$, flashing red light.

While charging, flashing red light.

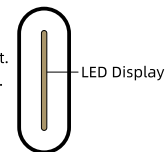

Accessories

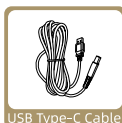

Charging Time


Make sure that the OFF switch is in position before placing the trimmer on the power adapter.

When indicator light is on, means the trimmer is in the process of charging.


Charging time is about 1.5 hours.

Runing time is about 2.5 hours after full charge.


* Best charge temperature is between 5°C - 40°C (40°F-105°F).

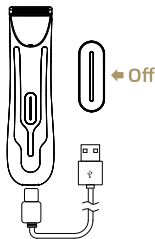

Cleaning and Removal of Head Method

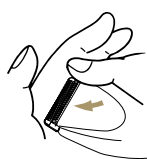

Use your thumb to push the head of the clipper outwards.

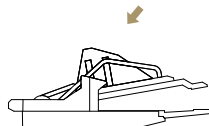


Clean hair with cleaning brush, holding blade at the top left between the upper and lower blade as shown in the picture above.


(Disassembling will cause malfunction. Do not attempt to disassemble.)

After cleaning, use 2-3 drops of lubricating oil on the 5 points shown below.

Tilt clipper head toward the floor to avoid oil seeping into motor.

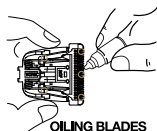

OILING BLADES

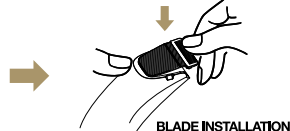

BLADE INSTALLATION


Trim schematic



Face and Ears



Sanitary Area

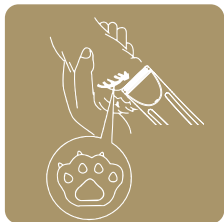

Feet and Paws



Genital Regions

Warranty Card

Purchase Date:

Point of Sale Phone:

Sales Point Address:

* The blade is not covered by the warranty. If the blade becomes dull and cannot be used, please purchase the original blade to replace.

Safety Information

IMPORTANT SAFETY INFORMATION

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using your SHERNBAO product.

DANGER: To reduce the risk of electric shock

1. Avoid placing or storing clipper near water or other liquids.
2. Do not use if clipper, plug, or charging base has been immersed in water or other liquid.
3. Unplug immediately if clipper falls into water or another emergency occurs.
4. Unplug cord from outlet and clipper except when charging.
5. Turn clipper off and unplug cord from outlet before cleaning or changing parts.
The appliance must only be supplied at SELV.


WARNING: To reduce the risk of fire, electric shock, or personal injury

1. Clipper should never be left unattended when plugged in.
2. Supervision is necessary when used by, on, or near children or individuals with certain disabilities.
3. Use this clipper only for its intended use. Do not use attachments not recommended by SHERNBAO.
4. Do not use this trimmer if cord or plug is damaged, if it is not working properly, if it has been dropped, or immersed in any liquid, return to SHERNBAO for repair.
5. Do not use an extension cord with this trimmer.
6. Keep the cord away from heated surfaces.
7. Detach the hand-held part from the supply cord before cleaning it in water.
8. The product is intended for animal grooming purpose only.
9. For indoor use only. Do not use around aerosol products or where flammable gases, such as oxygen, are in use.
10. To avoid injury: never use this clipper with a damaged or broken blade or comb.
11. To disconnect: turn control to OFF then remove plug from outlet.
12. Use only the charging base supplied by SHERNBAO to recharge.
13. The blade is structural part, do not disassemble the blade spring by yourself.
14. Store the trimmer at -10°C-40°C (14°F - 104°F), otherwise may damage the battery.
15. The batteries of this product is non-replaceable. Remove battery before disposing of product, dispose of battery properly and safely.
16. KEEP OUT OF REACH OF CHILDREN!
Children under 3 years old or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, can only use this product under supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

产品描述

PGT-420是一款用于局部修剪的MINI电剪，小巧精致，特别适合修剪宠物的脸部、耳朵、腹部、肛门周边、脚部等，也可以用于手术前的准备工作。

主机机构名称

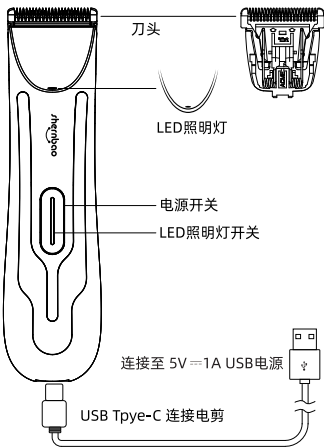

附属配件




主机和LED照明灯的开启及关闭



LED 充电指示灯

主机运行时，电量≥20%时，白灯常亮。
主机运行时，电量≤20%时，红灯闪烁。
当主机充电时，红灯闪烁。

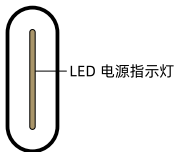

充电时间


充电前，请确保主机电源已关闭，将电源线一端连接至5V =1A USB Type-A 输出端口，将另一端USB Type-C 连接至主机即可。

充电时间：约1.5小时。


充满电使用时间：约2.5小时。

* 电池最合适的充电环境温度度为 5℃ - 40℃ (40°F-105°F)。


注：本机不配备充电适配器，请选择正规且质量可靠安全的适配器，为主机充电。

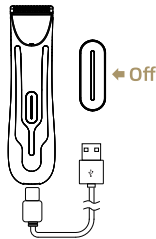


清洁及拆卸刀头方法

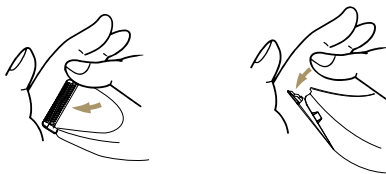

如图所示，用右手大拇指指向后推动刀头，左手保护以免刀头跌落并损坏。

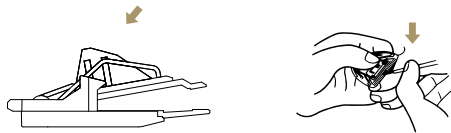

如图所示用清洁刷清洁刀头，按住动刀片顶部机构，清洁上下刀片之间残留的毛发。（请不要分解刀头弹簧，可能会引起故障。）

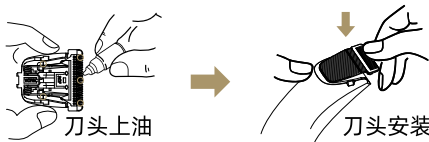

清洁完后如图所示在刀头5个位置注入1-2滴润滑油，然后重新装入刀头。

（对准槽位在装入时必须听到“咔哒”声才能确定完全装上。）


修剪示意图



面部修剪



腹部修剪

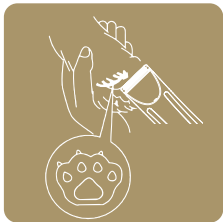

脚部修剪



肛门修剪

特别注意事项

1. 剧烈的磕碰或跌落都容易造成陶瓷刀片的破碎；
2. 为确保刀头的锋利度及维持低噪音，请务必经常清洁及润滑；
3. 一次剃较长时间或要剃几只宠物，也要注意适时关机清理刀片和加油后再继续使用；
4. 如果修剪比较脏的宠物，极有可能导致刀头迅速变钝；
5. 刀片变钝，即使清洁和润滑也不能恢复锋利时，表示刀头使用寿命已尽，请更换新刀头；
6. 请认准原厂配件。

安全注意事项

1. 请不要用本产品去修剪其他物品，仅用于修剪人类及宠物毛发；
2. 如在使用过程中不小心将电推剪掉入水中或者碰到化学药品，请立即拔掉充电线，关机并清理干净主机；
3. 请使用原厂或正规可靠的充电线为主机充电，如发现USB充电线有破损请不要继续使用，请及时更换；
4. 主机内配置充电电池，此电池不能被扭曲、拆解或者戳破，否则可能导致线路短路烧坏机器，请不要设法自行拆解本机，如需修理请到指定服务点维修；
5. 本产品刀头可能伤到小孩，小孩也有可能吞咽小的配件，请将本产品保存时置于远离小孩能接触到的位置；
6. 刀头配件属于结构件，所以请勿自行拆解刀头弹簧；
7. 不要长时间将本机置于 -10°C 以下或 40°C 以上的温度环境下保存，否则可能损伤电池。

保修条例

1. 在正常使用、保养状态下，主机保修一年；
2. 消耗性产品或零件如刀头、USB充电线、润滑油、毛刷等不在保修之列；
3. 在保修期内，若有下列状况之一，恕不免费修理：
 - ① 未按使用说明书要求使用、维护、保养而造成故障或损坏的；（如跌落、浸水、自行拆装等人为损坏等）。
 - ② 因自然灾害等不可抗力因素、购买后运输、保管不当等所造成之损坏；
4. 本保修卡为重要保修凭证，请勿遗失，恕不补发，请妥为保存；
5. 对于无保修卡或超过保修期的产品，本公司实行合理的收费修理；
6. 需修理（含保修）时请将产品直接送至神宝公司或指定售后服务点，本公司及销售商不承担任何因送修产生的交通及运输费用，也不承担任何其他间接损失；
7. 由于产品的不断跟新换代，本公司保留在没有事先通知的情况下，对产品进行变动、修改的权利。

保修登记

购买日期：

客户姓名：

联系电话：

销售单位印章

如未填写购买日期或无指定经销商印章，保修期以出厂日期为起始日！

中国大陆售后中心：浙江省宁波余姚市兰江街道凤仪路81号 电话：400-658-8428
中国台湾售后中心：新北市新店區安康路三段525巷37號 电话：(02)5599-6199