


inRAx

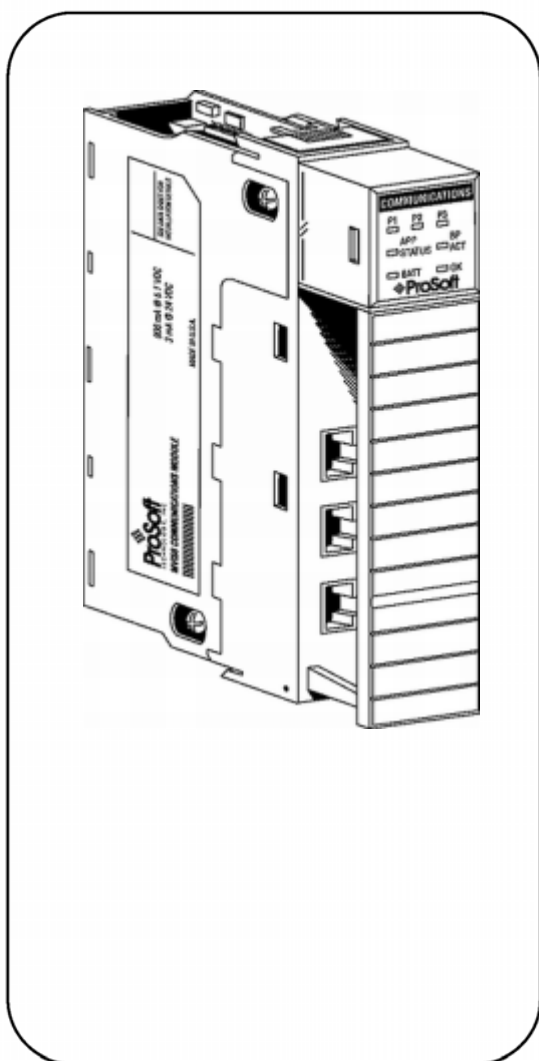

MVI56 GSC

ControlLogix Platform
Generic Serial Communication Module

User Manual

December 05, 2007



Please Read This Notice

Successful application of this module requires a reasonable working knowledge of the Rockwell Automation ControlLogix hardware, the MVI56 GSC Module and the application in which the combination is to be used. For this reason, it is important that those responsible for implementation satisfy themselves that the combination will meet the needs of the application without exposing personnel or equipment to unsafe or inappropriate working conditions.

This manual is provided to assist the user. Every attempt has been made to ensure that the information provided is accurate and a true reflection of the product's installation requirements. In order to ensure a complete understanding of the operation of the product, the user should read all applicable Rockwell Automation documentation on the operation of the Rockwell Automation hardware.

Under no conditions will ProSoft Technology be responsible or liable for indirect or consequential damages resulting from the use or application of the product.

Reproduction of the contents of this manual, in whole or in part, without written permission from ProSoft Technology is prohibited.

Information in this manual is subject to change without notice and does not represent a commitment on the part of ProSoft Technology. Improvements and/or changes in this manual or the product may be made at any time. These changes will be made periodically to correct technical inaccuracies or typographical errors.

Warnings

UL Warnings

- A** Warning - Explosion Hazard - Substitution of components may impair suitability for Class I, Division 2.
- B** Warning - Explosion Hazard - When in Hazardous Locations, turn off power before replacing or rewiring modules.
Warning - Explosion Hazard - Do not disconnect equipment unless power has been switched off or the area is known to be nonhazardous.
- C** Suitable for use in Class I, division 2 Groups A, B, C and D Hazardous Locations or Non-Hazardous Locations.

ATEX Warnings and Conditions of Safe Usage:

Power, Input, and Output (I/O) wiring must be in accordance with the authority having jurisdiction

- A** Warning – Explosion Hazard – When in hazardous locations, turn off power before replacing or wiring modules.
- B** Warning – Explosion Hazard – Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous.
- C** These products are intended to be mounted in an IP54 enclosure. The devices shall provide external means to prevent the rated voltage being exceeded by transient disturbances of more than 40%. This device must be used only with ATEX certified backplanes.
- D** DO NOT OPEN WHEN ENERGIZED.

Electrical Ratings

- Backplane Current Load: 800 mA @ 5 V DC; 3mA @ 24V DC
- Operating Temperature: 0 to 60°C (32 to 140°F)
- Storage Temperature: -40 to 85°C (-40 to 185°F)
- Shock: 30g Operational; 50g non-operational; Vibration: 5 g from 10 to 150 Hz
- Relative Humidity 5% to 95% (non-condensing)
- All phase conductor sizes must be at least 1.3 mm(squared) and all earth ground conductors must be at least 4mm(squared).

Markings:



II 3 G 0C ≤Ta≤ 60C EEx nA IIC T4 DEMKO 07ATEX0710717X

Your Feedback Please

We always want you to feel that you made the right decision to use our products. If you have suggestions, comments, compliments or complaints about the product, documentation or support, please write or call us.

ProSoft Technology

1675 Chester Avenue, Fourth Floor

Bakersfield, CA 93301

+1 (661) 716-5100

+1 (661) 716-5101 (Fax)

<http://www.prosoft-technology.com>

Copyright © ProSoft Technology, Inc. 2000 - 2007. All Rights Reserved.

MVI56 GSC User Manual

December 05, 2007

PSFT..MVI56.UM.07.12.05

ProSoft Technology®, ProLinx®, inRAx®, ProTalk® and RadioLinx® are Registered Trademarks of ProSoft Technology, Inc.

Contents

PLEASE READ THIS NOTICE	2
Warnings	2
Your Feedback Please	3
GUIDE TO THE MVI56 GSC USER MANUAL	7
1 START HERE	9
1.1 System Requirements.....	9
1.2 Package Contents	10
1.3 Setting Jumpers.....	11
1.4 Install the Module in the Rack.....	12
1.5 Connect your PC to the Processor	13
1.6 Download the Sample Program to the Processor	14
1.6.1 Configuring RSLinx	15
1.7 Connect your PC to the Module.....	17
2 INSTALLING AND CONFIGURING THE MODULE	19
2.1 Module Configuration.....	23
2.1.1 Power Up	24
2.1.2 Changing parameters during operation	24
2.2 Module Data Object (GSCModule)	24
2.2.1 Configuration Objects.....	24
2.2.2 Status Object (GSCInStat)	26
2.3 Configuration Parameters	26
3 LADDER LOGIC	29
4 DIAGNOSTICS AND TROUBLESHOOTING	31
4.1 Reading Status Data from the module	31
4.1.1 The Configuration/Debug Menu	31
4.1.2 Required Hardware	32
4.1.3 Required Software.....	33
4.1.4 Using the Configuration/Debug Port.....	33
4.1.5 Main Menu	34
4.1.6 Data Analyzer.....	36
4.1.7 Data Analyzer Tips	39
4.2 LED Status Indicators	41
4.3 Clearing a Fault Condition	42
4.4 Troubleshooting	43
5 REFERENCE	45
5.1 Product Specifications	45
5.1.1 Features and Benefits	45
5.1.2 General Specifications	45
5.1.3 Hardware Specifications.....	46
5.1.4 Functional Specifications.....	46
5.2 Functional Overview	47
5.2.1 General Concepts	47
5.2.2 Normal Data Transfer.....	50
5.2.3 Configuration Data Transfer	54
5.2.4 Command Control Blocks.....	55
5.2.5 Data Flow between MVI56 GSC Module and ControlLogix Processor.....	55
5.2.6 Termination of Received Data	58
5.3 Cable Connections	60
5.3.1 RS-232 Configuration/Debug Port.....	61
5.3.2 RS-232	63

5.3.3	RS-422	65
5.3.4	RS-485	65
5.3.5	DB9 to RJ45 Adaptor (Cable 14).....	66
5.4	Status Data Definition	66
5.5	Configuration Error Word	68
6	SUPPORT, SERVICE & WARRANTY	69
6.1	How to Contact Us: Sales and Support	70
6.2	Return Material Authorization (RMA) Policies and Conditions	71
6.2.1	All Product Returns	71
6.3	Procedures for Return of Units Under Warranty	71
6.4	Procedures for Return of Units Out of Warranty	72
6.4.1	Un-repairable Units	72
6.4.2	Purchasing Warranty Extension	73
6.5	LIMITED WARRANTY	73
6.5.1	What Is Covered By This Warranty	73
6.5.2	What Is Not Covered By This Warranty	74
6.5.3	DISCLAIMER REGARDING HIGH RISK ACTIVITIES	75
6.5.4	DISCLAIMER OF ALL OTHER WARRANTIES.....	75
6.5.5	LIMITATION OF REMEDIES**.....	75
6.5.6	Time Limit for Bringing Suit	75
6.5.7	No Other Warranties	76
6.5.8	Intellectual Property	76
6.5.9	Additional Restrictions Relating To Software And Other Intellectual Property	76
6.5.10	Allocation of risks	77
6.5.11	Controlling Law and Severability	77
INDEX		79

Guide to the MVI56 GSC User Manual

Function		Section to Read	Details
Introduction (Must Do)	→	Start Here (page 9)	This Section introduces the customer to the module. Included are: package contents, system requirements, hardware installation, and basic configuration.
Verify Communication, Diagnostic and Troubleshooting	→	Verifying Communication (page 31) Diagnostics and Troubleshooting (page 31)	This section describes how to verify communications with the network. Diagnostic and Troubleshooting procedures.
Reference Product Specifications Functional Overview Glossary	→	Reference (page 45) Functional Overview (page 47) Product Specifications (page 45)	These sections contain general references associated with this product, Specifications, and the Functional Overview.
Support, Service, and Warranty Index	→	Support, Service and Warranty (page 69)	This section contains Support, Service and Warranty information. Index of chapters.

1 Start Here

In This Chapter

- System Requirements 9
- Package Contents 10
- Setting Jumpers 11
- Install the Module in the Rack 12
- Connect your PC to the Processor 13
- Download the Sample Program to the Processor 14
- Connect your PC to the Module 17

Installing the MVI56 GSC module requires a reasonable working knowledge of the Rockwell Automation hardware, the MVI56 GSC Module and the application in which they will be used.



Caution: It is important that those responsible for implementation can complete the application without exposing personnel, or equipment, to unsafe or inappropriate working conditions. Safety, quality and experience are key factors in a successful installation.

1.1 System Requirements

The MVI56 GSC module requires the following minimum hardware and software components:

- Rockwell Automation ControlLogix™ processor, with compatible power supply and one free slot in the rack, for the MVI56 GSC module. The module requires 800mA of available power.
- Rockwell Automation RSLogix 5000 programming software version 2.51 or higher.
- Rockwell Automation RSLinx communication software
- Pentium® II 450 MHz minimum. Pentium III 733 MHz (or better) recommended
- Supported operating systems:
 - o Microsoft Windows XP Professional with Service Pack 1 or 2
 - o Microsoft Windows 2000 Professional with Service Pack 1, 2, or 3
 - o Microsoft Windows Server 2003

- 128 Mbytes of RAM minimum, 256 Mbytes of RAM recommended
- 100 Mbytes of free hard disk space (or more based on application requirements)
- 256-color VGA graphics adapter, 800 x 600 minimum resolution (True Color 1024 × 768 recommended)
- CD-ROM drive
- HyperTerminal or other terminal emulator program.

Note: You can install the module in a local or remote rack. For remote rack installation, the module requires EtherNet/IP or ControlNet communication with the processor.

1.2 Package Contents

The following components are included with your MVI56 GSC module, and are all required for installation and configuration.

Important: Before beginning the installation, please verify that all of the following items are present.


Qty.	Part Name	Part Number	Part Description
1	MVI56 GSC Module	MVI56 GSC	Generic Serial Communication Module
1	Cable	RS232 Null Modem	For RS232 Connection to the CFG Port
3	Cable	Cable #14, RJ45 to DB9 Male Adapter	For DB9 Connection to Module's Port
2	Adapter	1454-9F	Two Adapters, DB9 Female to Screw Terminal. For RS422 or RS485 Connections to Port 1 and 2 of the Module
1	ProSoft Solutions CD		Contains sample programs, utilities and documentation for the MVI56 GSC module.

If any of these components are missing, please contact ProSoft Technology Support for replacement parts.

1.3 Setting Jumpers

If you use an interface other than RS-232 (default), you must change the jumper configuration to match the interface. There are three jumpers located at the bottom of the module.

The following illustration shows the MVI56 GSC jumper configuration:

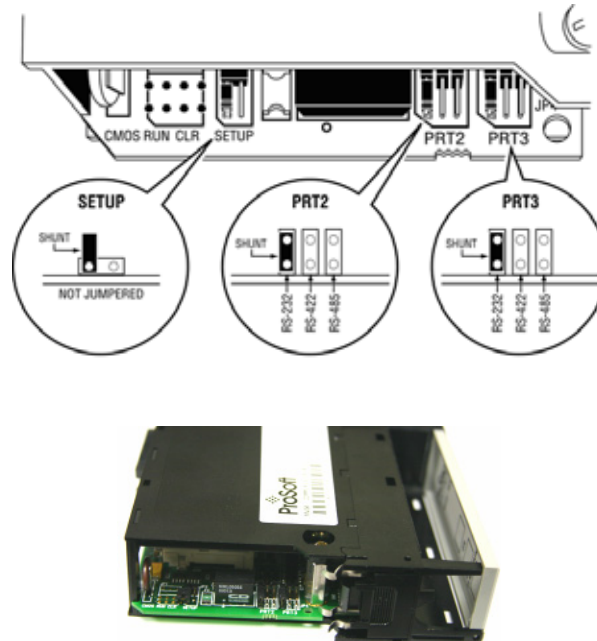

- 1 Set the PRT 2 (for application port 1) and PRT 3 (for application port 2) jumpers for RS232, RS422 or RS482 to match the wiring needed for your application. The default jumper setting for both application ports is RS-232.
- 2 The Setup Jumper acts as "write protection" for the module's flash memory. In "write protected" mode, the Setup pins are not connected, and the module's firmware cannot be overwritten. Do not jumper the Setup pins together unless you are directed to do so by ProSoft Technical Support.

1.4 Install the Module in the Rack


If you have not already installed and configured your ControlLogix processor and power supply, please do so before installing the MVI56 GSC module. Refer to your Rockwell Automation product documentation for installation instructions.

Warning: You must follow all safety instructions when installing this or any other electronic devices. Failure to follow safety procedures could result in damage to hardware or data, or even serious injury or death to personnel. Refer to the documentation for each device you plan to connect to verify that suitable safety procedures are in place before installing or servicing the device.

After you have checked the placement of the jumpers, insert MVI56 GSC into the ControlLogix chassis. Use the same technique recommended by Rockwell Automation to remove and install ControlLogix modules.

Warning: When you insert or remove the module while backplane power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Verify that power is removed or the area is non-hazardous before proceeding. Repeated electrical arcing causes excessive wear to contacts on both the module and its mating connector. Worn contacts may create electrical resistance that can affect module operation.

- 3 Turn power OFF.
- 4 Align the module with the top and bottom guides, and slide it into the rack until the module is firmly against the backplane connector.

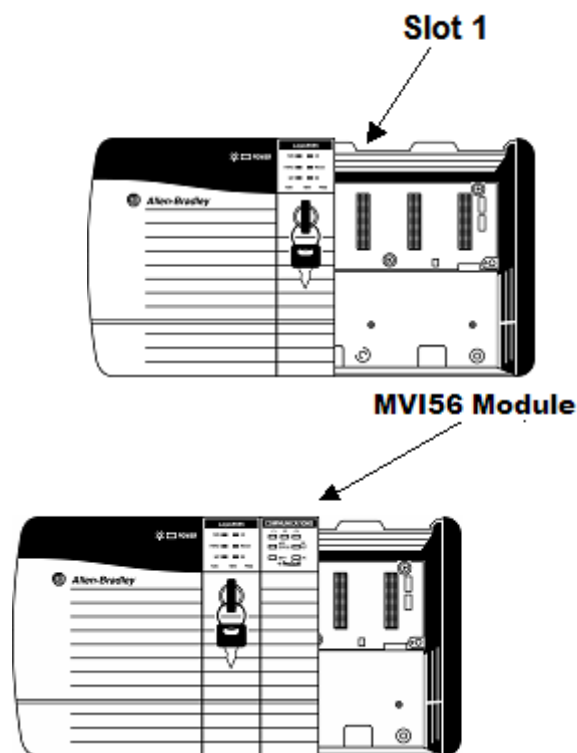


- 5 With a firm but steady push, snap the module into place.
- 6 Check that the holding clips on the top and bottom of the module are securely in the locking holes of the rack.
- 7 Make a note of the slot location. You will need to identify the slot in which the module is installed in order for the sample program to work correctly. Slot numbers are identified on the green circuit board (backplane) of the ControlLogix rack.
- 8 Turn power ON.

Note: If you insert the module improperly, the system may stop working, or may behave unpredictably.


Note: If you are installing MVI56 GSC with other modules connected to the PCI bus, the peripheral modules will not have holding clips. Make sure all of the modules are aligned with their respective slots before you snap them into place.

1.5 Connect your PC to the Processor

- 1 Connect the right-angle connector end of the cable to your controller at the communications port.

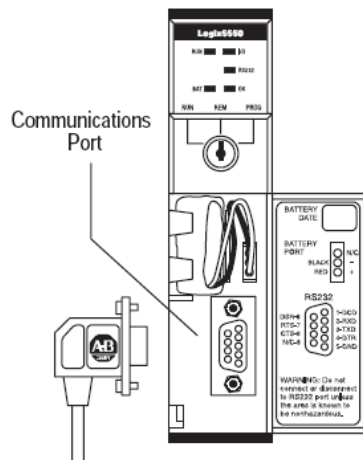

- 2 Connect the straight connector end of the cable to the serial port on your computer.

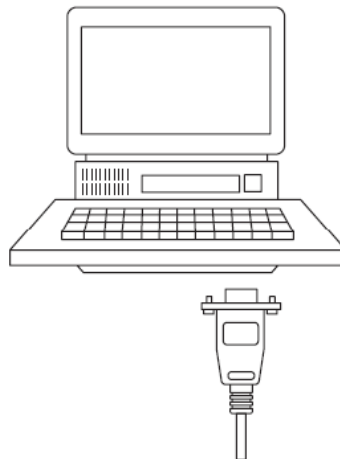


1.6 Download the Sample Program to the Processor


- *To download the sample program from RSLogix 5000 to the ControlLogix processor:*

Note: The key switch on the front of the ControlLogix module must be in the REM position.

- 1 If you are not already online to the processor, open the Communications menu, and then choose Download. RSLogix will establish communication with the processor.
- 2 When communication is established, RSLogix will open a confirmation dialog box. Click the Download button to transfer the sample program to the processor.

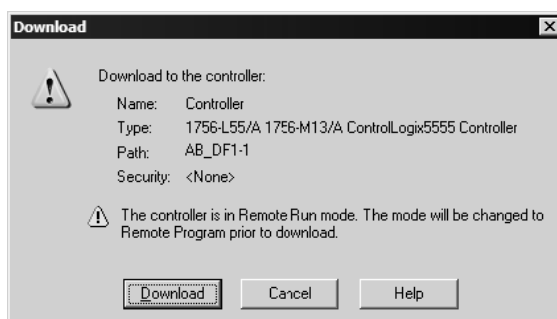

- 3 RSLogix will compile the program and transfer it to the processor. This process may take a few minutes.
- 4 When the download is complete, RSLogix will open another confirmation dialog box. Click OK to switch the processor from Program mode to Run mode.

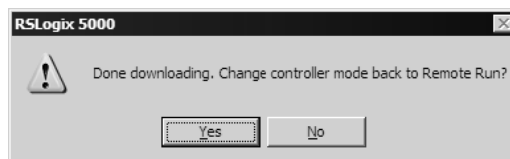


Note: If you receive an error message during these steps, refer to your RSLogix documentation to interpret and correct the error.


1.6.1 Configuring RSLinx

➤ *If RSLogix is unable to establish communication with the processor, follow these steps:*

- 1 Open RSLinx.
- 2 Open the Communications menu, and choose Configure Drivers.

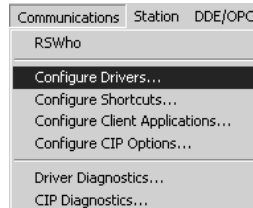

This action opens the Configure Drivers dialog box.

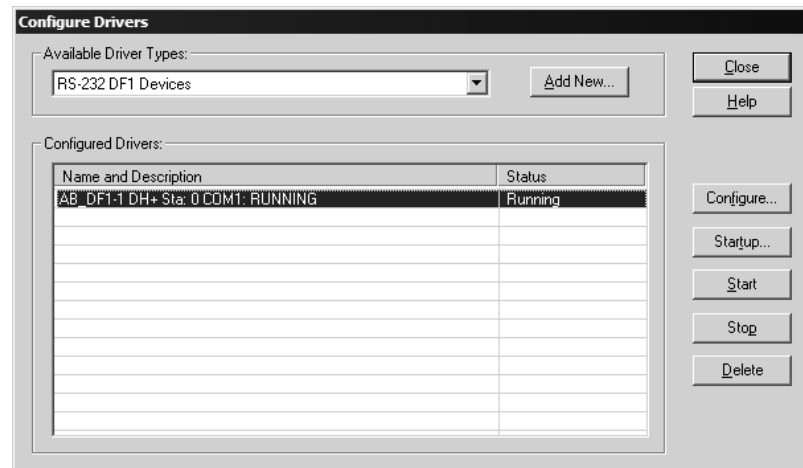

Note: If the list of configured drivers is blank, you must first choose and configure a driver from the Available Driver Types list. The recommended driver type to choose for serial communication with the processor is "RS-232 DF1 Devices".

- 3 Click to select the driver, and then click Configure. This action opens the Configure Allen-Bradley DF1 Communications Device dialog box.




- 4 Click the Auto-Configure button. RSLinx will attempt to configure your serial port to work with the selected driver.
- 5 When you see the message "Auto Configuration Successful", click the OK button to dismiss the dialog box.

Note: If the auto-configuration procedure fails, verify that the cables are connected correctly between the processor and the serial port on your computer, and then try again. If you are still unable to auto-configure the port, refer to your RSLinx documentation for further troubleshooting steps.

1.7 Connect your PC to the Module

With the module securely mounted, connect your PC to the **Configuration/Debug** port using an RJ45-DB-9 Serial Adapter Cable and a Null Modem Cable.

- 1 Attach both cables as shown.
- 2 Insert the RJ45 cable connector into the Configuration/Debug port of the module.
- 3 Attach the other end to the serial port on your PC or laptop.

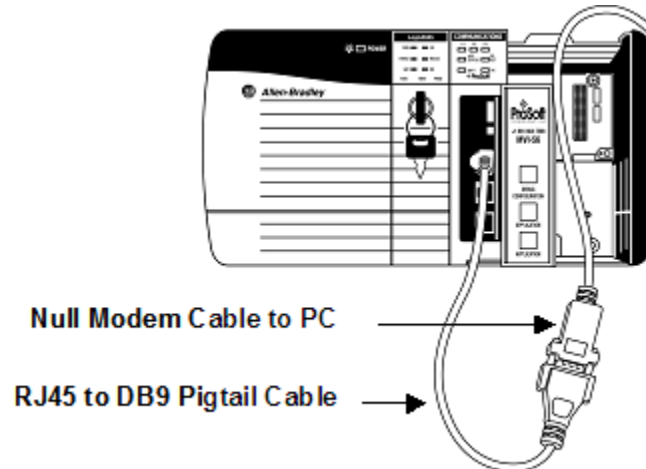

2 Installing and Configuring the Module

In This Chapter

- Module Configuration 23
- Module Data Object (GSCModule)..... 24
- Configuration Parameters 26

This chapter describes how to install and configure the module to work with your application. The configuration process consists of the following steps.

- 1 Use RSLogix 5000 to identify the module to the processor and add the module to a project.


Note: The RSLogix 5000 software must be in "offline" mode to add the module to a project.

- 2 Modify the example ladder logic to meet the needs of your application, and copy the ladder logic to the processor. Example ladder logic files are provided on the CD-ROM.


Note: If you are installing this module in an existing application, you can copy the necessary elements from the example ladder logic into your application.

The rest of this chapter describes these steps in more detail.


The first step in installing and configuring the module is to define the module to the system. Click the right mouse button on the I/O Configuration option in the Controller Organization list to open a shortcut menu. Select the New Module... option from the I/O Configuration menu.

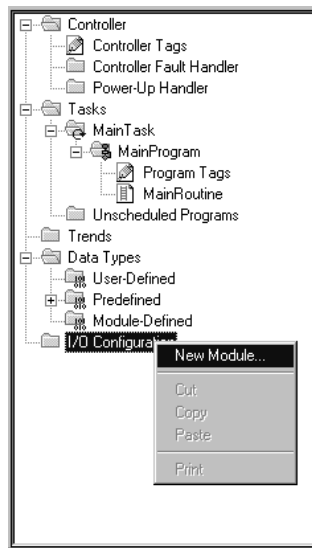


This action opens the following dialog box.

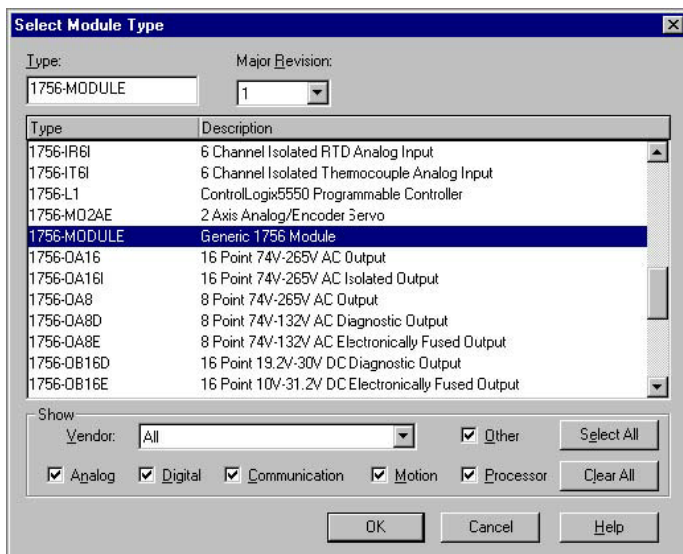

Select the 1756-Module (Generic 1756 Module) from the list and click OK. This action opens the following dialog box.

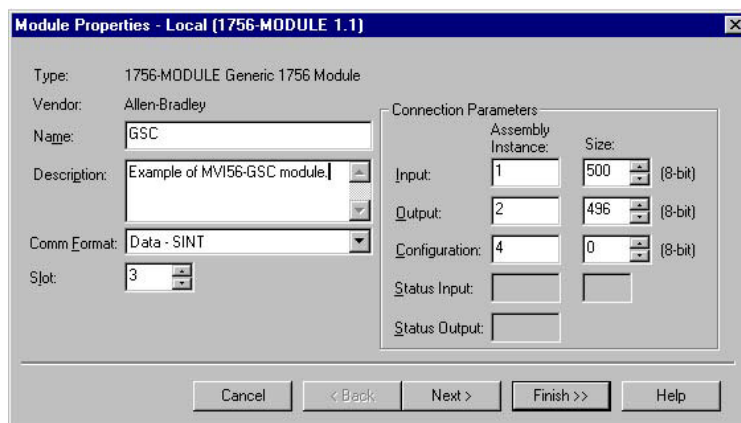


Fill in the dialog box as shown adjusting the Name, Description and Slot options for your application. You must select the **Comm Format** as **Data - SINT** in the dialog box. Failure to set the **Assembly Instance** and **Size** values correctly will result in a module that will not communicate over the backplane of the ControlLogix rack. Click Next to display the next dialog box.

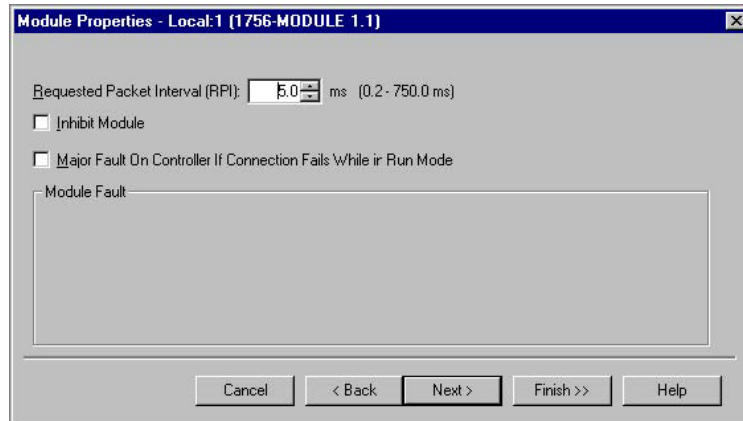


Select the Request Packet Interval value for scanning the I/O on the module. This value represents the minimum frequency that the module will handle scheduled events. This value should not be set to less than 1.0 milliseconds. Values between 1.0 and 10.0 milliseconds should work with most applications.


After completing the module setup, the Controller Organization list will display the module's presence. The data required for the module will be defined to the application, and objects will be allocated in the Controller Tags data area. An example of the Controller Organization list is shown below.

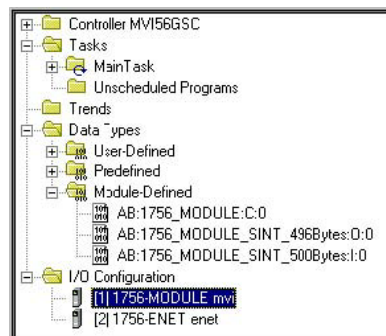

The next step in the module's setup is to define the User Defined Data Types to be used with the module. Copy these data types from the example ladder logic if you are not using the example. They will be defined if you are starting from the example ladder logic. The Controller Organization list should display the User Defined Data Types shown below:

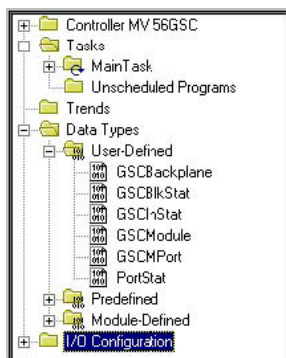


The next step in module setup is to define the data tag to be used to interface with the module and the ladder logic. Open the Controller Tags Edit Tags dialog box and enter the values shown in the following example. The MVI56 GSC module is defined in the example as GSC and has a type of GSCModule. The tag name can be set to any valid tag name desired. When using the example ladder logic, this step has already been performed.

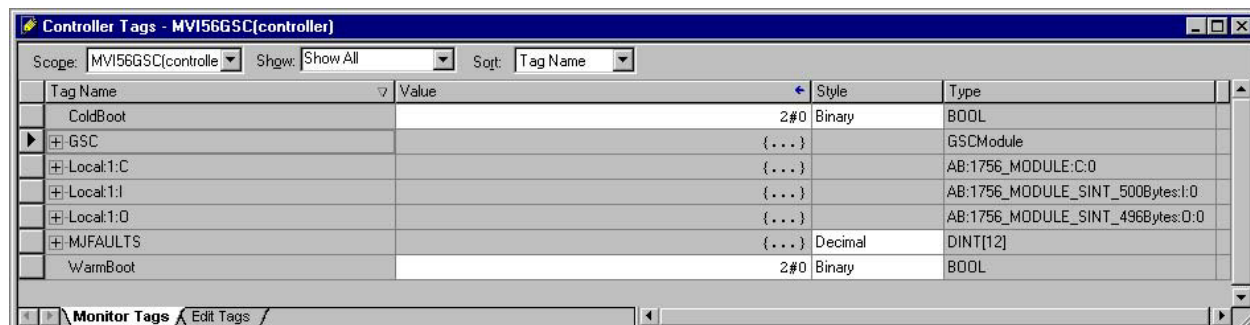

At this point, take the time to fill in the configuration values in the GSC data table. Refer to the Module Data Object section of this document for information on configuring the module.

The last step is to add the ladder logic. If the example ladder logic is used, adjust the ladder to fit the application. When the ladder example is not used, copy the ladder logic shown in the Controller Organization list below to the application.

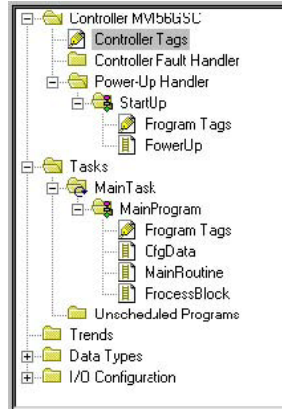

The module is now set up and ready to use with your application. Insert the module in the rack and attach the serial communication cables. Download the new application to the controller and place the processor in run mode. If all the configuration parameters are set correctly and the module is attached to a serial network, the module's Application LED (APP LED) should remain on and the backplane activity LED (BP ACT) should blink rapidly. Refer to the Diagnostics and Troubleshooting section if you encounter errors. If you encounter errors, refer to the **Diagnostics and Troubleshooting** (page 31) section for information on how to connect to the module's Config/Debug port to use its troubleshooting features.

2.1 Module Configuration

In order for the MVI56 GSC module to function, a minimum amount of configuration data must be transferred to the module. The following table provides an overview of the different types of configuration data that the module will require, depending on the operating modes to be supported.

Function	Name	Description
Data Transfer	General Module Configuration	This section of the configuration data contains the module Configuration configuration data that defines the data transfer between the module and the ControlLogix processor.
Serial Port	Port Configuration Drivers	These sections define the characteristics of each of the serial communication ports on the module. These parameters must be set correctly for proper module operation.

Refer to the Module Configuration section of this manual for a description of the module configuration. The MVI56 GSC module must be configured at least once when the card is first powered, and any time thereafter when the parameters must be changed.

2.1.1 Power Up

On power up, the module enters into a logical loop waiting to receive configuration data from the processor. Upon receipt and after the module is initialized, the module will begin communication on enabled ports.

2.1.2 Changing parameters during operation

In order to change any of the module's configuration information, a warm- or cold-boot operation is required. This will force the module to request the configuration information from the processor. A warm- or cold-boot request can be generated by the processor through the ladder logic or through the Configuration/Debug port of the module.

2.2 Module Data Object (GSCModule)

All data related to the MVI56 GSC is stored in a user defined data type. An instance of the data type is required before the module can be used. This is done by declaring a variable of the data type in the Controller Tags Edit Tags dialog box. The structure of the object is displayed in the following illustration:

Data Type: GSCModule

Warning: This structure is being referenced. Modifications will result in loss of data.

Name: Size: byte(s)

Description:

Members:

	Name	Data Type	Style	Description
	BPFail	INT	Decimal	Number of block failures before shutting down communications
+	Ports	GSCMPort[2]		Port configuration information
+	Stat	GSCInStat		Status data for module
+	Backplane	GSCBackplane		Backplane data transfer variables
*				

OK Cancel Apply Help

This object contains objects that define the configuration and status data related to the module. Each of these object types is discussed in the following topics of the document.

2.2.1 Configuration Objects

Configuration of the module is performed by filling in the values in the module object defined in the Controller Tags Edit Tags dialog. Each parameter required by the module has a defined location in the object. The tables and discussions below describe the parameters set in the dialog box. You can view these tables by opening the data type under the User Defined Data Type option in the Controller Organization list.

Block Failure Data Item (BPFail)

The BPFail parameter determines if the module should continue communicating on the serial communication network when the backplane transfer operation fails. A value of zero indicates that the module should continue communicating when the backplane is not operational. If the value is greater than zero, the backplane will be retried the entered number of times before a failure will be reported and communication will cease on the ports. When backplane communication is restored, the module will start communicating on the network. For example, if you enter a value of 10 for the parameter, the module will stop all serial communications if 10 successive backplane errors are recognized. When a successful transfer is recognized, the module will resume communications on the network.


Port Parameters (GSCMPort)

Name	Data Type	Style	Description
Enabled	INT	Decimal	0=Disable port, 1=Enable port
Type	INT	Decimal	Type of control used to flush data received on port
Baudrate	INT	Decimal	Baud rate for communications
Parity	INT	Decimal	Parity (0=None, 1=)
DataBits	INT	Decimal	Data bits (5, 6, 7, or 8)
StopBits	INT	Decimal	Stop bits (1 or 2)
RTSOn	INT	Decimal	RTS delay before sending data
RTSOff	INT	Decimal	RTS delay after sending message
Handshaking	INT	Decimal	Type of Handshaking (0=None, 1=RTSCTS, 2=DTDRSR, 3=XONXOFF)
RTermCnt	INT	Decimal	Number of termination characters for received message for control
RTermChar	SINT[12]	Hex	Characters for termination control
RPacketLen	INT	Decimal	Fixed packet length value
RTimeout	INT	Decimal	Message timeout value for control
RDelay	INT	Decimal	Intercharacter timeout for control
WTermCnt	INT	Decimal	Not used
WTermChar	SINT[12]	Hex	Not used
WPacketLen	INT	Decimal	Not used
WTimeout	INT	Decimal	Timeout for sending a message out the port
WDelay	INT	Decimal	Not used
WMinDelay	INT	Decimal	Minimum delay before transmitting message out port

This object defines the parameters for the operation of each of the serial ports on the module. Refer to Configuration Parameters (page 26) for the definition of each parameter.

2.2.2 Status Object (GSCInStat)

This object views the status of the module. The **GSCInStat** object shown below is updated each time a read block is received by the processor. Use this data to monitor the state of the module at a "real-time rate".

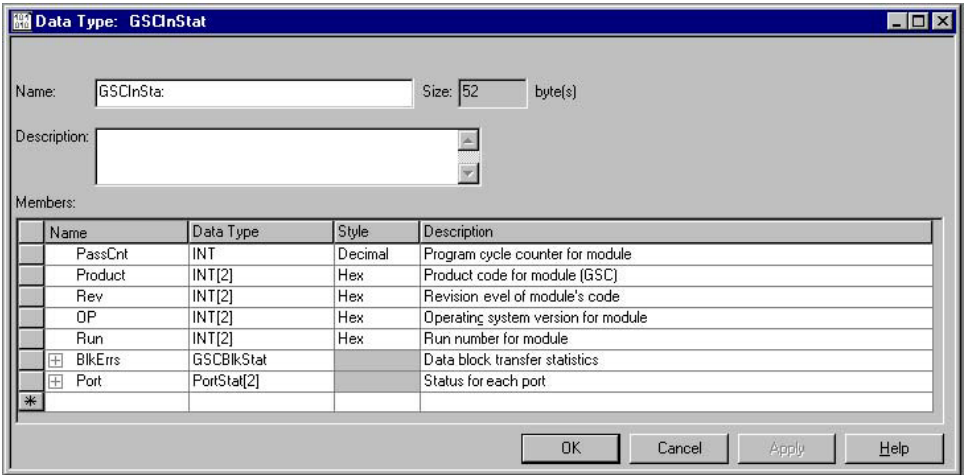

Within the GSCInStat objects are objects containing the status information for each port and the block transfer process. Refer to [Status Data Definition](#) (page 66) for a complete listing of the data stored in this object.

2.3 Configuration Parameters

This section contains a listing of all the parameters required to configure the MVI56 GSC module. These parameters are held in the module's controller tag of type GSCModule.

Backplane Setup

Parameter	Description
BPFail	This parameter specifies the number of successive transfer errors that must occur before the communication ports are shut down. If the parameter is set to zero, the communication ports will continue to operate under all conditions. If the value is set larger than 0 (1 to 65535), communications will cease if the specified number of failures occur.

Port 1 Setup

Content	Description
Port[0].Enabled	This parameter defines if this port will be utilized. If the parameter is set to 0, the port is disabled. A value of 1 will enable the port.
Port[0].Type	This parameter specifies the receive termination characteristics for the port. This value is bit mapped as follows: Bit 0 = Termination character(s) used, Bit1=Message timeout used, Bit2=Intercharacter delay timeout used and Bit3=Packet size limit used. If the parameter is set to zero, the port is placed in stream mode.
Port[0].Baudrate	This is the baud rate to be used on the port. Enter the baud rate as a value. For example, to select 19K baud, enter 19200. Valid entries for this field include: 110, 150, 300, 600, 1200, 2400, 4800, 9600, 19200, 28800, 38400, 57600 and 115.

Content	Description
Port[0].Parity	This is the Parity code to be used for the port. The coded values are as follows: 0=None, 1=Odd, 2=Even, 3=Mark and 4=Space.
Port[0].DataBits	This parameter sets the number of data bits for each word used by the protocol. Valid entries for this field are 5, 6, 7 and 8.
Port[0].StopBits	This parameter sets the number of stop bits to be used with each data value sent. Valid entries for this field are 1 and 2.
Port[0].RTSON	This parameter sets the number of milliseconds to delay after RTS is asserted before the data will be transmitted. Valid values are in the range of 0 to 65535.
Port[0].RTSOFF	This parameter sets the number of milliseconds to delay after the last byte of data is sent before the RTS modem signal will be set low. Valid values are in the range of 0 to 65535.
Port[0].Handshaking	This parameter specifies the handshaking used on the port. The code values are as follows: 0=No hardware or software handshaking, 1=RTS/CTS hardware handshaking, 2=DTR/DSR hardware handshaking and 3=XON/XOFF software handshaking.
Port[0].RTermCnt	This parameter is used if bit 0 of the Type parameter is set. This value (0 to 12) defines the number of termination characters used to define the end of received message.
Port[0].RTermChar	This array of 12 characters define the termination characters at the end of each received message. Each character occupies one position in the array. The number of characters to be used in the array is set in the RTermCnt parameter.
Port[0].RPacketLen	This parameter is used if bit 3 is set in the Type parameter. The parameter sets the length of data required to be received on the port before transferring the data to the processor. Port[0].RTimeout This parameter is used if bit 1 is set in the Type parameter. The parameter sets the number of milliseconds to wait after the first character is received on the port before automatically sending the data to the processor.
Port[0].RDelay	This parameter is used if bit 2 is set in the Type parameter. The parameter sets the number of milliseconds to wait between each character received on the port before sending the data to the processor.
Port[0].WTermCnt	Not used in current release of product.
Port[0].WTermChar	Not used in current release of product.
Port[0].WPacketLen	Not used in current release of product.
Port[0].WTimeout	This parameter specifies the timeout period to transmit a message out the port. A message must be transmitted out the port within the specified timeout period. Message transmission will be aborted if the timeout is exceeded.
Port[0].WDelay	Not used in current release of product.
Port[0].WMinDelay	This parameter specifies the minimum number of milliseconds to delay before transmitting a message out the port. This pre-send delay is applied before the RTS on time. This may be required when communicating with slow devices.

Port 2 Setup

Content	Description
Port[1].Enabled	This parameter defines if this port will be utilized. If the parameter is set to 0, the port is disabled. A value of 1 will enable the port.
Port[1].Type	This parameter specifies the receive termination characteristics for the port. This value is bit mapped as follows: Bit 0 = Termination character(s) used, Bit1=Message timeout used, Bit2=Intercharacter delay timeout used and Bit3=Packet size limit used. If the parameter is set to zero, the port is placed in stream mode.
Port[1].Baudrate	This is the baud rate to be used on the port. Enter the baud rate as a value. For example, to select 19K baud, enter 19200. Valid entries for this field include: 110, 150, 300, 600, 1200, 2400, 4800, 9600, 19200, 28800, 38400, 57600 and 115.
Port[1].Parity	This is the Parity code to be used for the port. The coded values are as follows: 0=None, 1=Odd, 2=Even, 3=Mark and 4=Space.
Port[1].DataBits	This parameter sets the number of data bits for each word used by the protocol. Valid entries for this field are 5, 6, 7 and 8.
Port[1].StopBits	This parameter sets the number of stop bits to be used with each data value sent. Valid entries for this field are 1 and 2.
Port[1].RTSON	This parameter sets the number of milliseconds to delay after RTS is asserted before the data will be transmitted. Valid values are in the range of 0 to 65535.
Port[1].RTSOFF	This parameter sets the number of milliseconds to delay after the last byte of data is sent before the RTS modem signal will be set low. Valid values are in the range of 0 to 65535.
Port[1].Handshaking	This parameter specifies the handshaking used on the port. The code values are as follows: 0=No hardware or software handshaking, 1=RTS/CTS hardware handshaking, 2=DTR/DSR hardware handshaking and 3=XON/XOFF software handshaking.
Port[1].RTermCnt	This parameter is used if bit 0 of the Type parameter is set. This value (0 to 12) defines the number of termination characters used to define the end of received message.
Port[1].RTermChar	This array of 12 characters define the termination characters at the end of each received message. Each character occupies one position in the array. The number of characters to be used in the array is set in the RTermCnt parameter.
Port[1].RPacketLen	This parameter is used if bit 3 is set in the Type parameter. The parameter sets the length of data required to be received on the port before transferring the data to the processor.
Port[1].RTimeout	This parameter is used if bit 1 is set in the Type parameter. The parameter sets the number of milliseconds to wait after the first character is received on the port before automatically sending the data to the processor.
Port[1].RDelay	This parameter is used if bit 2 is set in the Type parameter. The parameter sets the number of milliseconds to wait between each character received on the port before sending the data to the processor.
Port[1].WTermCnt	Not used in current release of product.
Port[1].WTermChar	Not used in current release of product.
Port[1].WPacketLen	Not used in current release of product.
Port[1].WTimeout	This parameter specifies the timeout period to transmit a message out the port. A message must be transmitted out the port within the specified timeout period. Message transmission will be aborted if the timeout is exceeded.
Port[1].WMinDelay	Not used in current release of product.
Port[1].WDelay	This parameter specifies the minimum number of milliseconds to delay before transmitting a message out the port. This pre-send delay is applied before the RTS on time. This may be required when communicating with slow devices.

3 Ladder Logic

Ladder logic is required for application of the MVI56 GSC module. Tasks that must be handled by the ladder logic are module data transfer, special block handling and status data receipt. Additionally, a power-up handler may be needed to handle the initialization of the module's data and to clear any processor fault conditions.

The sample ladder logic, on the ProSoft Solutions CD-ROM, is extensively commented, to provide information on the purpose and function of each rung. For most applications, the sample ladder will work without modification.

4 Diagnostics and Troubleshooting

In This Chapter

- Reading Status Data from the module 31
- LED Status Indicators 41
- Clearing a Fault Condition..... 42
- Troubleshooting 43

The module provides information on diagnostics and troubleshooting in the following forms:

- Status data values are transferred from the module to the processor.
- Data contained in the module can be viewed through the Configuration/Debug port attached to a terminal emulator.
- LED status indicators on the front of the module provide information on the module's status.

4.1 Reading Status Data from the module

The MVI56 GSC module returns three separate status data areas to the ControlLogix processor in each read block. This data is transferred to the ControlLogix processor continuously with each read block. For a complete listing of the status data object, refer to the Module Configuration section of this manual. This guide also includes example ladder logic showing how to extract this data from the input image and place it in the module's Controller Logic Tag. Refer to the Diagnostics and Troubleshooting section for a discussion of the features available through the use of this utility.

4.1.1 The Configuration/Debug Menu


The Configuration and Debug menu for this module is arranged as a tree structure, with the Main Menu at the top of the tree, and one or more sub-menus for each menu command. The first menu you see when you connect to the module is the Main menu.

Because this is a text-based menu system, you enter commands by typing the command letter from your computer keyboard in the terminal application (for example, HyperTerminal). The module does not respond to mouse movements or clicks. The command executes as soon as you press the command letter — you do not need to press **[Enter]**. When you type a command letter, a new screen will be displayed in your terminal application.

Navigation

All of the sub-menus for this module contain commands to redisplay the menu or return to the previous menu. You can always return from a sub-menu to the next higher menu by pressing **[M]** on your keyboard.

The organization of the menu structure is represented in simplified form in the following illustration:

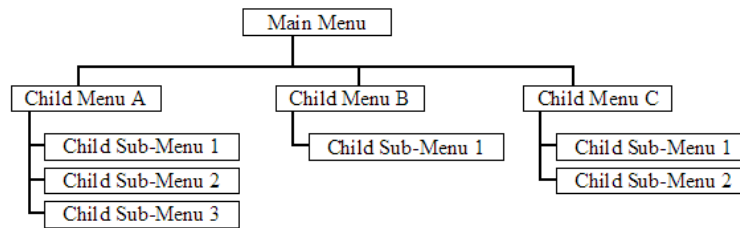

The remainder of this section shows you the menus available for this module, and briefly discusses the commands available to you.

Keystrokes

The keyboard commands on these menus are almost always non-case sensitive. You can enter most commands in lower case or capital letters.

The menus use a few special characters (**[?]**, **[-]**, **[+]**, **[@]**) that must be entered exactly as shown. Some of these characters will require you to use the **[Shift]**, **[Ctrl]** or **[Alt]** keys to enter them correctly. For example, on US English keyboards, enter the **[?]** command as **[Shift][/]**.

Also, take care to distinguish capital letter **[I]** from lower case letter **[i]** (L) and number **[1]**; likewise for capital letter **[O]** and number **[0]**. Although these characters look nearly the same on the screen, they perform different actions on the module.

4.1.2 Required Hardware

You can connect directly from your computer's serial port to the serial port on the module to view configuration information and perform maintenance.

ProSoft Technology recommends the following minimum hardware to connect your computer to the module:

- 80486 based processor (Pentium preferred)
- 1 megabyte of memory
- At least one serial communications port available
- A null modem serial cable.

4.1.3 Required Software

In order to send and receive data over the serial port (COM port) on your computer to the module, you must use a communication program (terminal emulator).

A simple communication program called HyperTerminal is pre-installed with recent versions of Microsoft Windows operating systems. If you are connecting from a machine running DOS, you must obtain and install a compatible communication program. The following table lists communication programs that have been tested by ProSoft Technology.

DOS	ProComm, as well as several other terminal emulation programs
Windows 3.1	Terminal
Windows 95/98	HyperTerminal
Windows NT/2000/XP	HyperTerminal

4.1.4 Using the Configuration/Debug Port

To connect to the module's Configuration/Debug port:

- 1 Connect your computer to the module's port using a null modem cable.
- 2 Start the communication program on your computer and configure the communication parameters with the following settings:

Baud Rate	57,600
Parity	None
Data Bits	8
Stop Bits	1
Software Handshaking	None

- 3 Open the connection. When you are connected, press the [?] key on your keyboard. If the system is set up properly, you will see a menu with the module name followed by a list of letters and the commands associated with them.


If there is no response from the module, follow these steps:

- 1 Verify that the null modem cable is connected properly between your computer's serial port and the module. A regular serial cable will not work.
- 2 Verify that RSLinx is not controlling the COM port. Refer to [Disabling the RSLinx Driver for the Com Port on the PC](#) (page 61).
- 3 Verify that your communication software is using the correct settings for baud rate, parity and handshaking.
- 4 On computers with more than one serial port, verify that your communication program is connected to the same port that is connected to the module.

If you are still not able to establish a connection, you can contact ProSoft Technology Technical Support for further assistance.

4.1.5 Main Menu

When you first connect to the module from your computer, your terminal screen will be blank. To activate the main menu, press the [?] key on your computer's keyboard. If the module is connected properly, the following menu will appear on your terminal screen:

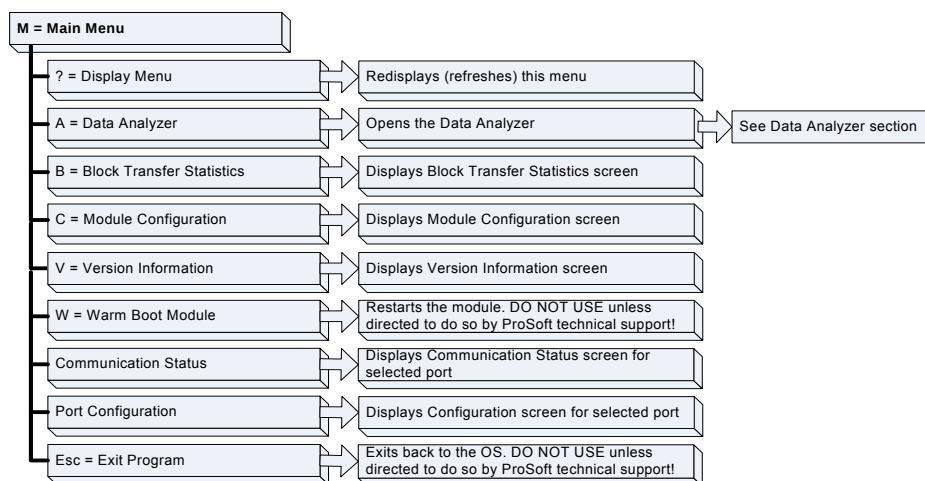

Caution: Some of the commands available to you from this menu are designed for advanced debugging and system testing only, and can cause the module to stop communicating with the processor or with other devices, resulting in potential data loss or other failures. Only use these commands if you are specifically directed to do so by ProSoft Technology Technical Support staff. Some of these command keys are not listed on the menu, but are active nevertheless. Please be careful when pressing keys so that you do not accidentally execute an unwanted command.

```

GENERIC SERIAL COMMUNICATION MODULE MENU
?=Display Menu
A=Data Analyzer
B=Block Transfer Statistics
C=Module Configuration
U=Version Information
W=Warm Boot Module
Communication Status : 1=Port 1   2=Port 2
Port Configuration   : 6=Port 1   7=Port 2

Esc=Exit Program
  
```

Opening the Data Analyzer Menu

Press [A] to open the Data Analyzer Menu. Use this command to view all bytes of data transferred on each port. Both the transmitted and received data bytes are displayed. Refer to Data Analyzer for more information about this menu.

Important: When in analyzer mode, program execution will slow down. Only use this tool during a troubleshooting session. Before disconnecting from the Config/Debug port, please press **[S]** to stop the data analyzer, and then press **[M]** to return to the main menu. This action will allow the module to resume its normal high speed operating mode.

Viewing Block Transfer Statistics

Press **[B]** from the Main Menu to view the Block Transfer Statistics screen.

Use this command to display the configuration and statistics of the backplane data transfer operations between the module and the processor. The information on this screen can help determine if there are communication problems between the processor and the module.

Tip: To determine the number of blocks transferred each second, mark the numbers displayed at a specific time. Then some seconds later activate the command again. Subtract the previous numbers from the current numbers and divide by the quantity of seconds passed between the two readings.

Viewing Module Configuration

Press **[C]** to view the Module Configuration screen.

Use this command to display the current configuration and statistics for the module.

Viewing Version Information

Press **[V]** to view Version information for the module.

Use this command to view the current version of the software for the module, as well as other important values. You may be asked to provide this information when calling for technical support on the product.

Values at the bottom of the display are important in determining module operation. The Program Scan Counter value is incremented each time a module's program cycle is complete.

Tip: Repeat this command at one-second intervals to determine the frequency of program execution.

Warm Booting the Module

Caution: Some of the commands available to you from this menu are designed for advanced debugging and system testing only, and can cause the module to stop communicating with the processor or with other devices, resulting in potential data loss or other failures. Only use these commands if you are specifically directed to do so by ProSoft Technology Technical Support staff. Some of these command keys are not listed on the menu, but are active nevertheless. Please be careful when pressing keys so that you do not accidentally execute an unwanted command.

Press **[W]** from the Main Menu to warm boot (restart) the module. This command will cause the program to exit and reload, refreshing configuration parameters that must be set on program initialization. Only use this command if you must force the module to re-boot.

Viewing Port Communication Status

Press **[1]** or **[2]** from the Main Menu to view the port communication status for Ports 1 and 2.

Use this command to view communication status and statistics for the selected port. This information can be informative when troubleshooting communication problems.

Viewing Port Configuration

Press **[6]** or **[7]** from the Main Menu to view configuration information for ports 1 and 2.

Use this command to display detailed configuration information for the selected port.

Exiting the Program

Caution: Some of the commands available to you from this menu are designed for advanced debugging and system testing only, and can cause the module to stop communicating with the processor or with other devices, resulting in potential data loss or other failures. Only use these commands if you are specifically directed to do so by ProSoft Technology Technical Support staff. Some of these command keys are not listed on the menu, but are active nevertheless. Please be careful when pressing keys so that you do not accidentally execute an unwanted command.

Press **[Esc]** to restart the module and force all drivers to be loaded. The module will use the configuration stored in the module's Flash ROM to configure the module.

4.1.6 Data Analyzer

The data analyzer mode allows you to view all bytes of data transferred on each port. Both the transmitted and received data bytes are displayed. Use of this feature is limited without a thorough understanding of the protocol.

Note: The Port selection commands on the Data Analyzer menu differs very slightly in different modules, but the functionality is basically the same. Use the illustration above as a general guide only - refer to the actual data analyzer menu on your module for the specific port commands to use.

Important: When in analyzer mode, program execution will slow down. Only use this tool during a troubleshooting session. Before disconnecting from the Config/Debug port, please press **[S]** to stop the data analyzer, and then press **[M]** to return to the main menu. This action will allow the module to resume its normal high speed operating mode.

Analyzing Data for the first application port

Press **[1]** to display I/O data for the first application port in the Data Analyzer. The following illustration shows an example of the Data Analyzer output.

[illegible]

Analyzing Data for the second application port

Press **[2]** to display I/O data for the second application port in the Data Analyzer.

Displaying Timing Marks in the Data Analyzer

You can display timing marks for a variety of intervals in the data analyzer screen. These timing marks can help you determine communication-timing characteristics.

Key	Interval
[5]	1 milliseconds ticks
[6]	5 milliseconds ticks
[7]	10 milliseconds ticks
[8]	50 milliseconds ticks
[9]	100 milliseconds ticks
[0]	Turn off timing marks

Removing Timing Marks in the Data Analyzer

Press **[0]** to turn off timing marks in the Data Analyzer screen.


Viewing Data in Hexadecimal Format

Press **[H]** to display the data on the current page in hexadecimal format.

Viewing Data in ASCII (Text) Format

Press **[A]** to display the data on the current page in ASCII format. This is useful for regions of the database that contain ASCII data.

Press **[B]** to start the data analyzer. After the key is pressed, all data transmitted and received on the currently selected port will be displayed. An example display is shown below:

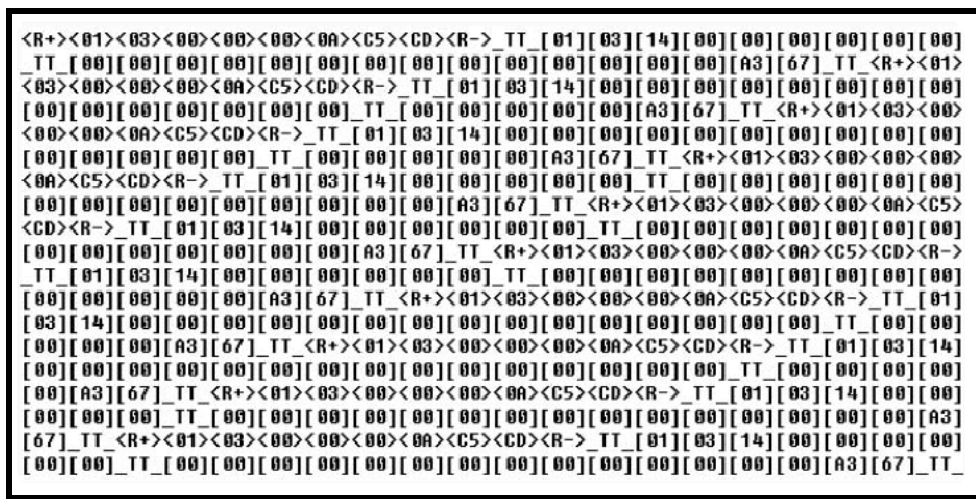

Character	Definition
[]	Data enclosed in these characters represent data received on the port.
< >	Data enclosed in these characters represent data transmitted on the port.
<R+>	These characters are inserted when the RTS line is driven high on the port.
<R->	These characters are inserted when the RTS line is dropped low on the port.
<CS>	These characters are displayed when the CTS line is recognized high.
TT	These characters are displayed when the timing mark interval has been reached. This parameter is user defined.


Press **[S]** to stop the data analyzer. Use this option to freeze the display so the data can be analyzed. To restart the analyzer, press **[B]**.

Important: When in analyzer mode, program execution will slow down. Only use this tool during a troubleshooting session. Before disconnecting from the Config/Debug port, please press **[S]** to stop the data analyzer, and then press **[M]** to return to the main menu. This action will allow the module to resume its normal high speed operating mode.

Press **[M]** to return to the Main Menu.

4.1.7 Data Analyzer Tips

From the main menu, press **[A]** for the "Data Analyzer". You should see the following text appear on the screen:



Data Analyzer Mode Selected

After the "Data Analyzer" mode has been selected, press **[?]** to view the Data Analyzer menu. You will see the following menu:



```
DATA ANALYZER VIEW MENU
?=Display Menu
1=Select Port 1
2=Select Port 2
5=1 mSec Ticks
6=5 mSec Ticks
7=10 mSec Ticks
8=50 mSec Ticks
9=100 mSec Ticks
0=No mSec Ticks
H=Hex Format
A=ASCII Format
B=Start
S=Stop
M=Main Menu


Port = 1, Format=HEX, Tick=10
```

From this menu, you can select the "Port", the "format", and the "ticks" that you can display the data in.


For most applications, HEX is the best format to view the data, and this does include ASCII based messages (because some characters will not display on HyperTerminal and by capturing the data in HEX, we can figure out what the corresponding ASCII characters are supposed to be).

The Tick value is a timing mark. The module will print a `_TT` for every xx milliseconds of no data on the line. Usually 10milliseconds is the best value to start with.

After you have selected the Port, Format, and Tick, we are now ready to start a capture of this data. The easiest way to do so is to go up to the top of your HyperTerminal window, and do a **Transfer / Capture Text** as shown below:

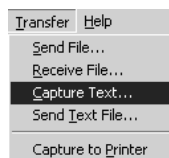

After selecting the above option, the following window will appear:

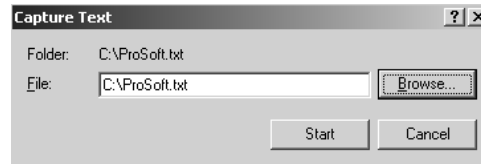

Next name the file, and select a directory to store the file in. In this example, we are creating a file ProSoft.txt and storing this file on our root C: drive. After you have done this, press the **Start** button.

Now you have everything that shows up on the HyperTerminal screen being logged to a file called ProSoft.txt. This is the file that you will then be able to email to ProSoft Technical Support to assist with issues on the communications network.

To begin the display of the communications data, you will then want to press 'B' to tell the module to start printing the communications traffic out on the debug port of the module. After you have pressed 'B', you should see something like the following:

```
[03][00][04][00][05][00][06][00][07][00][08][00][09][FB][B7]_TT_TT_<R+><01><02>
<00><00><00><0A><F8><0D><R->_TT_TT_TT_[01][02][02][00][00][B9][B8]_TT_TT_<R+>
<01><03><00><00><00><0A><C5><CD><R->_TT_TT_[01][03][14][00][00][00][01][00]_TT_
[02][00][03][00][04][00][05][00][06][00][07][00][08][00][09][CD][51]_TT_TT_<R+>
<01><01><00><00><00><0A><3C><72><R->_TT_TT_[01][01][14][00][00][01][00][02]_TT_
[00][03][00][04][00][05][00][06][00][07][00][08][00][09][00][B7][52]_TT_TT_<R+>
<01><04><00><00><00><0A><70><0D><R->_TT_TT_[01][04][14][00][00][00][01][00]_TT_
[02][00][03][00][04][00][05][00][06][00][07][00][08][00][09][FB][B7]_TT_TT_<R+>
<01><02><00><00><00><0A><F8><0D><R->_TT_TT_TT_[01][02][02][00][00][B9][B8]_TT_
TT_<R+><01><03><00><00><00><0A><C5><CD><R->_TT_TT_[01][03][14][00][00][00][01]
[00]_TT_[02][00][03][00][04][00][05][00][06][00][07][00][08][00][09][CD][51]_TT_
TT_<R+><01><01><00><00><00><0A><3C><72><R->_TT_TT_TT_[01][01][14][00][00][01]
[00][02]_TT_[00][03][00][04][00][05][00][06][00][07][00][08][00][09][B7][52]
TT_TT_<R+><01><04><00><00><00><0A><70><0D><R->_TT_TT_[01][04][14][00][00][00]
[01][00]_TT_[02][00][03][00][04][00][05][00][06][00][07][00][08][00][09][FB][B7]
TT_TT_<R+><01><02><00><00><00><0A><F8><0D><R->_TT_TT_[01][02][02][00][00][B9]
[B8]_TT_TT_<R+><01><03><00><00><00><0A><C5><CD><R->_TT_TT_[01][03][14][00][00]
[00][01][00]_TT_[02][00][03][00][04][00][05][00][06][00][07][00][08][00][09][CD]
[51]_TT_TT_<R+><01><00><00><00><0A><3C><72><R->_TT_TT_TT_[01][01][14][00]
[00][01][00][02]_TT_[00][03][00][04][00][05][00][06][00][07][00][08][00][09][00]
[B7][52]_TT_TT_<R+><01><04><00><00><00><0A><70><0D><R->_TT_TT_[01][04][14][00]
[00][00][01][00]_TT_[02][00][03][00][04][00][05][00][06][00][07][00][08][00][09]
[FB][B7]_TT_TT_<R+><01><02><00><00><00><0A><F8><0D><R->_TT_TT_TT_[01][02][02]
[00][00][B9][B8]_TT_TT_<R+><01><03><00><00><00><0A><C5><CD><R->_TT_TT_
```

The <R+> means that the module is transitioning the communications line to a transmit state.


All characters shown in <> brackets are characters being sent out by the module.

The <R-> shows when the module is done transmitting data, and is now ready to receive information back.

And finally, all characters shown in the [] brackets is information being received from another device by the module.

After taking a minute or two of traffic capture, you will now want to stop the "Data Analyzer". To do so, press the 'S' key, and you will then see the scrolling of the data stop.


When you have captured the data you want to save, open the Transfer menu and choose Capture Text. On the secondary menu, choose Stop.

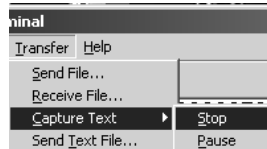

You have now captured, and saved the file to your PC. This file can now be used in analyzing the communications traffic on the line, and assist in determining communication errors.

4.2 LED Status Indicators

The LEDs indicate the module's operating status as follows:

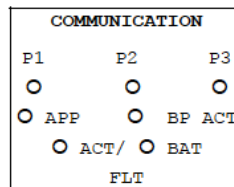

ProSoft Module	Color	Status	Indication
CFG	Green	On	Data is being transferred between the module and a remote terminal using the Configuration/Debug port.
		Off	No data is being transferred on the Configuration/Debug port.
P1	Green	On	Data is being transferred between the module and the serial network on its Port 1.
		Off	No data is being transferred on the port.
P2	Green	On	Data is being transferred between the module and the serial network on its Port 2.
		Off	No data is being transferred on the port.

ProSoft Module	Color	Status	Indication
APP	Amber	Off	The MVI56 GSC is working normally.
		On	This LED illuminates briefly if there is an error condition on one of its ports. Some possible error conditions are: - Too many messages are received on the serial ports and they cannot be sent fast enough over the backplane (port overflow error). This will occur if the ladder logic and module cannot send messages over the backplane as fast as they are received on the serial port(s). - The message received is greater than or equal to the maximum message permitted (4096 bytes) before the termination condition is present. - The CTS line is used and is not asserted before the send, the LED will illuminate. - The message is not transmitted out the serial port within the write timeout period
BP ACT	Amber	On	The LED is on when the module is performing a write operation on the backplane.
		Off	The LED is off when the module is performing a read operation on the backplane. Under normal operation, the LED should blink rapidly on and off.
OK	Red/ Green	Off	The card is not receiving any power and is not securely plugged into the rack.
		Green	The module is operating normally.
		Red	The program has detected an error or is being configured. If the LED remains red for over 10 seconds, the program has probably halted. Remove the card from the rack and re-insert the card to restart the module's program.
BAT	Red	Off	The battery voltage is OK and functioning.
		On	The battery voltage is low or battery is not present. Allow battery to charge by keeping module plugged into rack for 24 hours. If BAT LED still does not go off, contact the factory, as this is not a user serviceable item.

4.3 Clearing a Fault Condition

Typically, if the OK LED on the front of the module turns red for more than ten seconds, a hardware problem has been detected in the module, or the program has exited.

To clear the condition, follow these steps:

- 1 Turn off power to the rack
- 2 Remove the card from the rack
- 3 Verify that all jumpers are set correctly
- 4 If the module requires a Compact Flash card, verify that the card is installed correctly
- 5 Re-insert the card in the rack and turn the power back on
- 6 Verify the configuration data being transferred to the module from the ControlLogix processor.

If the module's OK LED does not turn green, verify that the module is inserted completely into the rack. If this does not cure the problem, contact ProSoft Technology Support.

4.4 Troubleshooting

Use the following troubleshooting steps if you encounter problems when the module is powered up. If these steps do not resolve your problem, please contact ProSoft Technology Technical Support.

Processor Errors

Problem Description	Steps to take
Processor Fault	Verify that the module is plugged into the slot that has been configured for the module. Verify that the slot in the rack configuration has been set up correctly in the ladder logic.
Processor I/O LED flashes	This indicates a problem with backplane communications. Verify that all modules in the rack are configured in the ladder logic.

Module Errors

Problem Description	Steps to take
BP ACT LED remains off or blinks slowly	This indicates that backplane transfer operations are failing. Connect to the module's Configuration/Debug port to check this. To establish backplane communications, verify the following items: ▪ The processor is in Run mode. ▪ The backplane driver is loaded in the module. ▪ The module is configured for read and write block data transfer. ▪ The ladder logic handles all read and write block situations. ▪ The module is configured in the processor.
OK LED remains red	The program has halted or a critical error has occurred. Connect to the Configuration/Debug port to see if the module is running. If the program has halted, turn off power to the rack, remove the card from the rack and re-insert the card in the rack, and then restore power to the rack.

5 Reference

In This Chapter

➤ Product Specifications.....	45
➤ Functional Overview.....	47
➤ Cable Connections.....	60
➤ Status Data Definition	66
➤ Configuration Error Word	68

5.1 Product Specifications

The MVI56 Generic ASCII Serial Interface Module is a fast and easy way to add two fully configurable ASCII communication ports to the ControlLogix platform without consuming the front port of the processor, or using valuable processing time.

5.1.1 Features and Benefits

The MVI56-GSC module is a single slot, backplane compatible solution for the ControlLogix platform. This module has two powerful and fully configurable ASCII communication ports, each supporting the sending and receiving of large ASCII character strings. With the implementation of some supporting ladder logic in the processor, the many different devices supporting ASCII communications can be integrated into the ControlLogix platform.

5.1.2 General Specifications

- Single Slot – 1756 backplane compatible
- Local or remote rack
- The module is recognized as an Input/Output module and has access to processor memory for data transfer between processor and module
- Ladder Logic is used for data transfer between module and processor.
- Configuration data obtained through user-defined ladder. Sample ladder file included

5.1.3 Hardware Specifications

Specification	Description
Backplane Current Load	800 mA @ 5 V DC; 3mA @ 24V DC
Operating Temperature	0 to 60°C (32 to 140°F)
Storage Temperature	–40 to 85°C (–40 to 185°F)
Shock	30g Operational 50g non-operational Vibration: 5 g from 10 to 150 Hz
Relative Humidity	5% to 95% (non-condensing)
LED Indicators	Module Status Backplane Transfer Status Application Status Serial Activity
Debug/Configuration port (CFG)	
CFG Port (CFG)	RJ45 (DB-9M with supplied cable) RS-232 only
Application ports (PRT1 & PRT2)	
Full hardware handshaking control, providing radio, modem and multi-drop support	
Software configurable communication parameters	Baud rate: 110 to 115,200 baud, depending on protocol RS-232 and 422 Parity: none, odd or even Data bits: 5, 6, 7, or 8 Stop bits: 1 or 2 RTS on/off delay: 0 to 65535 milliseconds
App Ports (P1,P2) (Serial modules)	RJ45 (DB-9M with supplied cable) RS-232 handshaking configurable 500V Optical isolation from backplane
Shipped with Unit	RJ45 to DB-9M cables for each port 6-foot RS-232 configuration cable

5.1.4 Functional Specifications

- ASCII Communication ports 1 & 2 (PRT1, PRT2)
 - o Both ports are capable of transmitting and/or receiving ASCII character strings
 - o Each port is individually configurable:
- Termination types: Stream mode, Termination character(s), Message timeout, Intercharacter timeout and/or Packet size limit
- Baud rate: 110 to 115.2K baud
- Parity: none, even, odd
- Stop bits: 1 or 2
- Data bits: 5 to 8
- RTS on/off timing: 0 to 65535 milliseconds
- Minimum response delay: 0 to 65535 milliseconds

- Handshaking (optional)
 - o Hardware: RTS/CTS, DTR/DSR
 - o Software: XON/XOFF
- Receive ASCII character strings up to 4096 characters in width
- Full hardware handshaking control provides radio, modem and multi-drop support
- Module error and status conditions returned to processor for diagnostic purposes
 - o Module status
 - o Port error status word (bit mapped)
 - o Port receive state
 - o Port receive character count
 - o Port receive block count
 - o Port transmit state
 - o Port transmit character count
 - o Port transmit block count
- All data related to the module is contained in a single controller tag with defined objects to simplify the configuration, monitoring and interfacing with the module
- Module configuration and communication configuration data is transferred to the module via a predefined user data type in the processor

5.2 Functional Overview

This section provides an overview of how the MVI56 GSC module transfers data using the protocol. You should understand the important concepts in this chapter before you begin installing and configuring the module.

5.2.1 General Concepts

The following discussion explains several concepts that are important for understanding the operation of the MVI56 GSC module.

Module Power Up


On power up the module begins performing the following logical functions:

- 1 Initialize hardware components
 - o Initialize ControlLogix backplane driver
 - o Test and Clear all RAM
 - o Initialize the serial communication ports
- 2 Wait for Module Configuration from ControlLogix processor
- 3 Initialize Communication ports
- 4 Set up the serial communication interface driver on the selected ports

After the module has received the Module Configuration Block from the processor and the module is configured, the module will begin receiving and transmitting messages with devices on the serial ports.

Main Logic Loop

Upon completing the power up configuration process, the module enters an infinite loop that performs the following functions:

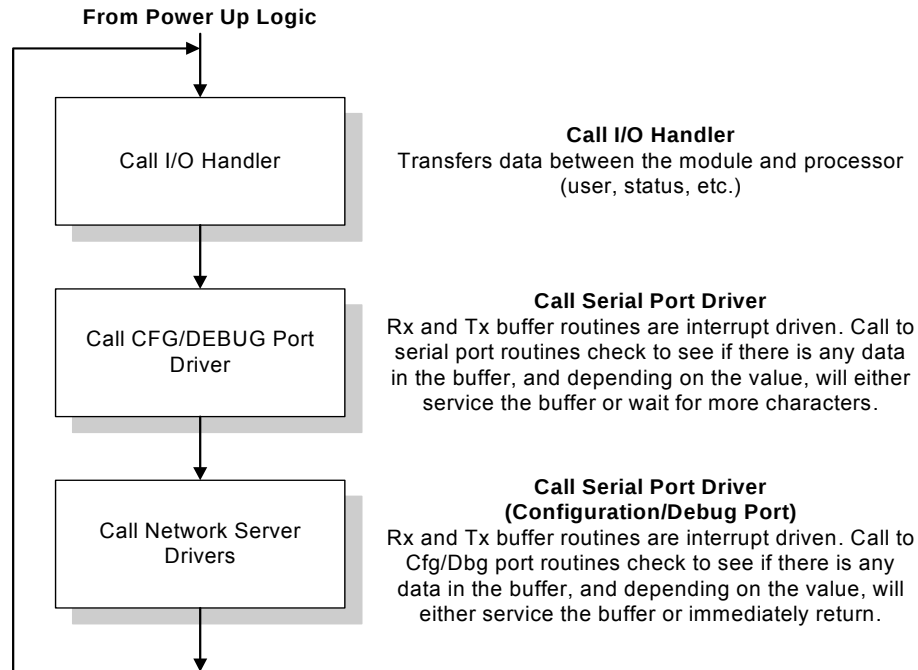

ControlLogix Processor Not in Run

Whenever the module detects that the processor has gone out of the Run mode (that is, Fault or PGM), the application ports can be shut down as prescribed in the user configuration. When the processor is returned to a running state, the module will resume communications on the serial networks.

Backplane Data Transfer


The MVI56 GSC module communicates directly over the ControlLogix backplane. Data travels between the module and the ControlLogix processor across the backplane using the module's input and output images. The update frequency of the images is determined by the scheduled scan rate defined by the user for the module and the communication load on the module. Typical updates are in the range of 1 to 10 milliseconds.

Data received on the application ports is placed in the module's input image. This data is processed by the ladder logic in the ControlLogix processor. The input image for the module is set to 500 bytes. This large data area permits fast throughput of data between the module and the processor.

The processor inserts data in the module's output image to transfer to the module. The module's program extracts the data and transmits the data out the communication ports. The output image for the module is set to 496 bytes. This large data area permits fast throughput of data from the processor to the module.

The following illustration shows the data transfer method used to move data between the ControlLogix processor, the MVI56 GSC module and the serial devices.

MVI56 GSC Module

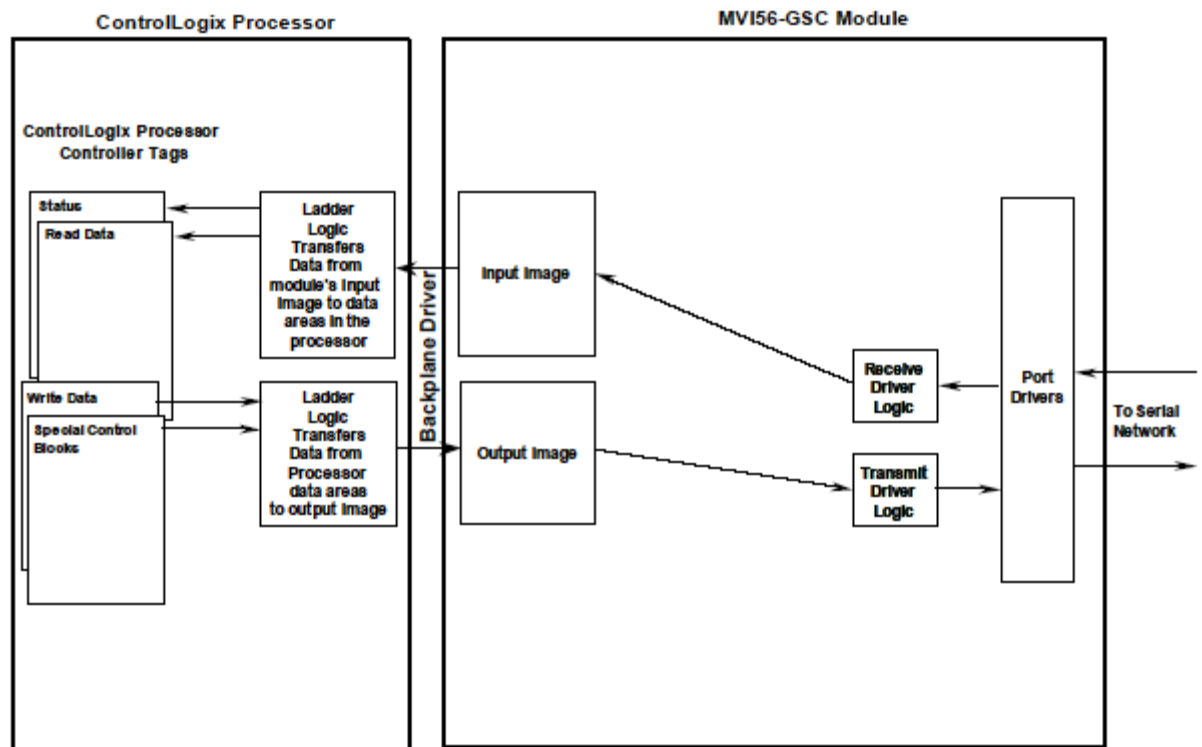

As shown in the diagram above, all data transferred between the module and the processor over the backplane is through the input and output images. Ladder logic must be written in the ControlLogix processor to interface the input and output image data with data defined in the Controller Tags. Your ladder logic must handle and interpret all data received on the application ports and transferred in the input image. you must also construct messages to be transferred out of the application ports by building the messages in the output image of the module.

5.2.2 Normal Data Transfer

Normal data transfer includes the transferring of data received or to be transmitted on the ports and the status data. These data are transferred through read (input image) and write (output image) blocks. Refer to [Module Configuration](#) (page 23) for a description of the data objects used with the blocks and the ladder logic required. The structure and function of each block is discussed below:

Read Block

These blocks of data transfer information from the module to the ControlLogix processor. The structure of the input image used to transfer this data is shown below: The Block Sequence Number (byte 499) is an index value used to signal to the ControlLogix processor that a new block is ready for processing. The ladder logic must recognize a change in this value and process the data encapsulated in the input image. The block contains the data received on each port and status data. The two word values at bytes 1 to 2 (port 1 receive length) and 251 to 252 (port 2 receive length) define the number of bytes to be processed by the ladder logic for each port. Receive data for the ports are found starting at byte 5 and 205 for port 1 and 2, respectively. The ladder logic handles all read data transferred from the communication ports to the processor. The simple example assumes the received data block is less than or equal to two hundred words.

	Byte Offset	Description
	0	Reserved
Port 1	1 to 2	Number of characters (0 to 200) in Port 1 receive block (5 to 204). If the receive data in the module is larger than 200 bytes, multiple blocks will be transferred. Any block with a value of -1 in this field represents the first or continuation block and the block contains 200 bytes of data. The last block of data will contain a positive number in this field that represents the number of characters in the last block.
	3 to 4	Number of characters transmitted (0 to 200) from last block write Port 1
	5 to 204	Port 1 data
	205 to 209	Reserved
Module Status	210 to 211	Program cycle counter
	212 to 215	Product name as ASCII string
	216 to 219	Revision level as ASCII string
	220 to 223	Operating system level as ASCII string
	224 to 227	Run number as ASCII string
	228 to 229	Number of blocks transferred from module to processor
	230 to 231	Number of blocks transferred from processor to module
	232 to 233	Number of blocks parsed by module
	234 to 235	Number of block errors in module

	Byte Offset	Description
Port 1 Status	236 to 237	Port 1 receive state: –1 = Listening for data 1 = Receiving Port Data 2 = Waiting for Backplane transfer
	238 to 239	Port 1 receive character count
	240 to 241	Port 1 receive block count
	242 to 243	Port 1 transmit state: 0 = Waiting for Data to Send 1 = RTS On 2 = RTS Timeout 3 = Sending data 4 = Waiting for RTS Off 5 = RTS turned off 30 = Intercharacter Delay 31 = Intercharacter Delay 32 = Intercharacter Delay 100 = Message Delay before Transmit 101 = Message Delay before Transmit
	244 to 245	Port 1 transmit character count
	246 to 247	Port 1 transmit block count
	248 to 249	Port 1 error word
	250	Reserved
	251 to 252	Number of characters (0 to 200) in Port 2 receive block (255 to 454). If the receive data in the module is larger than 200 bytes, multiple blocks will be transferred. Any block with a value of –1 in this field represents the first or continuation block and the block contains 200 bytes of data. The last block of data will contain a positive number in this field that represents the number of characters in the last block.
	253 to 254 255 to 454	Number of characters transmitted (0 to 200) from last block write Port 2 Port 2 data received
	455	Reserved
Port 2 Status	456 to 457	Port 2 receive state: –1 = Listening for data 1 = Receiving Port Data 2 = Waiting for Backplane transfer
	458 to 459	Port 2 receive character count
	460 to 461	Port 2 receive block count

Byte Offset	Description
462 to 463	Port 2 transmit state: 0 = Waiting for Data to Send 1 = RTS On 2 = RTS Timeout 3 = Sending data 4 = Waiting for RTS Off 5 = RTS turned off 30 = Intercharacter Delay 31 = Intercharacter Delay 32 = Intercharacter Delay 100 = Message Delay before Transmit 101 = Message Delay before Transmit
464 to 465	Port 2 transmit character count
466 to 467	Port 2 transmit block count
468 to 469	Port 2 error word
470 to 498	Reserved
499	Block Sequence Number (Bumped each scan by module)

The receive buffer in the module is set to 4096 bytes. This large size permits the buffering of a large amount of data before a transfer of the data to the controller is required. The ladder logic to use a buffer larger than 200 bytes is more complex. The module buffers the data in this buffer until one of the specified termination condition is recognized. The module will then transfer the received block of data to the controller. If the block of data received is larger than 200 bytes, multiple blocks will be used to transfer the data to the controller. The first block will contain a value of -1 in the Number of Characters Received data field. This indicates that there will be more blocks to follow and that the current block contains 200 bytes of data. If more than 200 bytes are present in the buffer being sent to the controller, the length field will be set to a value of -1. When 200 or fewer bytes remain in the buffer, the module will send the last block with a positive number in the length field. The value passed represents the number of bytes present in the data area. The ladder logic must recognize the presence of the positive number and end the packet received.

The two word values at bytes 3 to 4 (port 1 transmit count) and bytes 253 to 254 (port 2 transmit count) inform the processor of the number of bytes transferred in the last write block to the respective port transmit buffers. If a value of zero is returned in one of these words and data was sent in the last write block, the ladder logic must re-send the data in the next write block as the port is in a busy state and cannot buffer the new data. If a value is returned in one of these words, the value represents the number of bytes in the last write block moved into the port's transmit buffer.

The status information transferred in the read block can be used by the processor to determine the state and "health" of the module and the device(s) attached to each application port. An important member of the value in the status object is error word for each port. This value contains the configuration error flags for each port and the receive buffer overflow error flag.

Write Block

These blocks of data transfer information from the ControlLogix processor to the module. The structure of the output image used to transfer this data is shown below:

	Byte Offset	Description
Port 1	0	Block Sequence Number (Read block number as set by module)
	1 to 2	Intercharacter delay for this message (milliseconds between characters)
	3 to 4	Number of characters to transmit on Port 1 (0 to 200)
	5 to 204	Port 1 data to transmit
	205 to 250	Reserved
Port 2	251 to 252	Intercharacter delay for this message (milliseconds between characters)
	253 to 254	Number of characters to transmit on Port 2 (0 to 200)
	255 to 454	Port 2 data to transmit
	455 to 495	Reserved

The Block Sequence Number is that received on the last read block transfer through the input image on the module. The ladder logic should copy this value from byte 499 of the input image to byte 0 of output image in the ladder logic. This is the last operation performed when constructing the write block. The module's program will trigger the process write block function when a new value is recognized in byte 0 of the output image. If the number of characters to transmit in the write block is not set to zero (value in word at bytes 3 to 4 and 253 to 254), data to transmit is present in the block. If the selected port is not busy transmitting data, the data in the block will be moved to the port's transmit buffer and sent out the port.

In order to pace the characters for the write operation, an inter-character delay value is associated with each write message. For devices that do not buffer received data, when interfacing with a modem in command mode or when simulating keyboard or keypad entry, inter-character delays may be required. For example, if the port is tied to a device that expects input with delays of 200 milliseconds between each character, place the data to send to the buffer along with the length and set the inter-character word (bytes 1 and 2 or bytes 251 and 252) to a value of 200 in the module's output image in the processor's ladder logic program. The message will be transmitted with a 200-millisecond wait period between each character. Because this delay value is sent from the processor for each write message, the inter-character delay can be set independently for each message. For example, when writing AT commands to a dial-up modem, an inter-character delay of 100 may be required. But when the modem is in data mode, the inter-character delay can be set to 0. When the delay is set to 0, the whole packet of data will be placed in the module's transmit buffer at one time.

5.2.3 Configuration Data Transfer

When the module performs a restart operation, it will request configuration information from the ControlLogix processor. This data is transferred to the module in a specially formatted write block (output image). The module will poll for the block by setting the Block Sequence Number in the read block (input image) to a value of -1. Refer to the Module Configuration section of this manual for a description of the data objects used with the blocks and the ladder logic required. The format of the configuration block is shown below:

	Byte Offset	Description
Port 1	2 to 3	BPFail
	4 to 5	Enabled
	6 to 7	Termination Type
	8 to 9	Baud Rate
	10 to 11	Parity
	12 to 13	Data Bits
	14 to 15	Stop Bits
	16 to 17	RTS On Delay
	18 to 19	RTS Off Delay
	20 to 21	Handshaking
	22 to 23	Receive Termination Character Count
	24 to 35	Receive Termination Characters
	36 to 27	Receive Packet Length
	38 to 39	Receive Message Timeout
	40 to 41	Receive Intercharacter Delay Timeout
	42 to 43	Transmit Termination Character Count (Not Used)
	44 to 55	Transmit Termination Characters (Not Used)
	56 to 57	Transmit Packet Length (Not Used)
	58 to 59	Transmit Message Timeout
	60 to 61	Transmit Intercharacter Delay Timeout (Not Used)
	62 to 63	Minimum Message Transmit Delay
Port 2	64 to 65	Enabled
	66 to 67	Termination Type
	68 to 69	Baud Rate
	70 to 71	Parity
	72 to 73	Data Bits
	74 to 75	Stop Bits
	76 to 77	RTS On Delay
	78 to 79	RTS Off Delay
	80 to 81	Handshaking
	82 to 83	Receive Termination Character Count
	84 to 95	Receive Termination Characters
	96 to 97	Receive Packet Length

Byte Offset	Description
98 to 99	Receive Message Timeout
100 to 101	Receive Intercharacter Delay Timeout
102 to 103	Transmit Termination Character Count (Not Used)
104 to 115	Transmit Termination Characters (Not Used)
116 to 117	Transmit Packet Length (Not Used)
118 to 119	Transmit Message Timeout
120 to 121	Transmit Intercharacter Delay Timeout (Not Used)
122 to 123	Minimum Message Transmit Delay

5.2.4 Command Control Blocks

Command control blocks are special blocks used to control the module or request special data from the module. The current version of the software supports two command control blocks: warm boot and cold boot.

Warm Boot

This block is sent from the ControlLogix processor to the module (output image) when the module is required to perform a warm-boot (software reset) operation. This block is commonly sent to the module any time configuration data modifications are made in the controller tags data area. This will force the module to read the new configuration information and to restart. To warm boot the module, place a value of – 2 in the first byte of the output image.

Cold Boot

This block is sent from the ControlLogix processor to the module (output image) when the module is required to perform the cold boot (hardware reset) operation. This block is sent to the module when a hardware problem is detected by the ladder logic that requires a hardware reset. To cold boot the module, place a value of – 3 in the first byte of the output image.


5.2.5 Data Flow between MVI56 GSC Module and ControlLogix Processor

The following topics describe the flow of data between the two pieces of hardware (ControlLogix processor and MVI56 GSC module) and other devices attached to the application ports. Each application port on the module is configured independently to interface with serial communication devices. The sections below show the three possible types of communication devices that can be attached to the application ports: write-only, read-only and read-write.

Write-Only Devices


Write-only devices are those that only send data to the module. An example of this type of device is a barcode reader. The reader is programmed to only send data and is not expected to receive data. In this configuration, the application port on the MVI56 GSC module will never transmit data. All data received from the device will be passed from the module to the ControlLogix processor through the module's input image. Ladder logic in the processor must handle the data received from the module. The output image on the module will only be used to inform the module when the input image has been processed. This is accomplished by copying the byte 499 in the input image to byte 0 of the output image. The data flow diagram for a write-only device is shown below:

MVI56 GSC Module

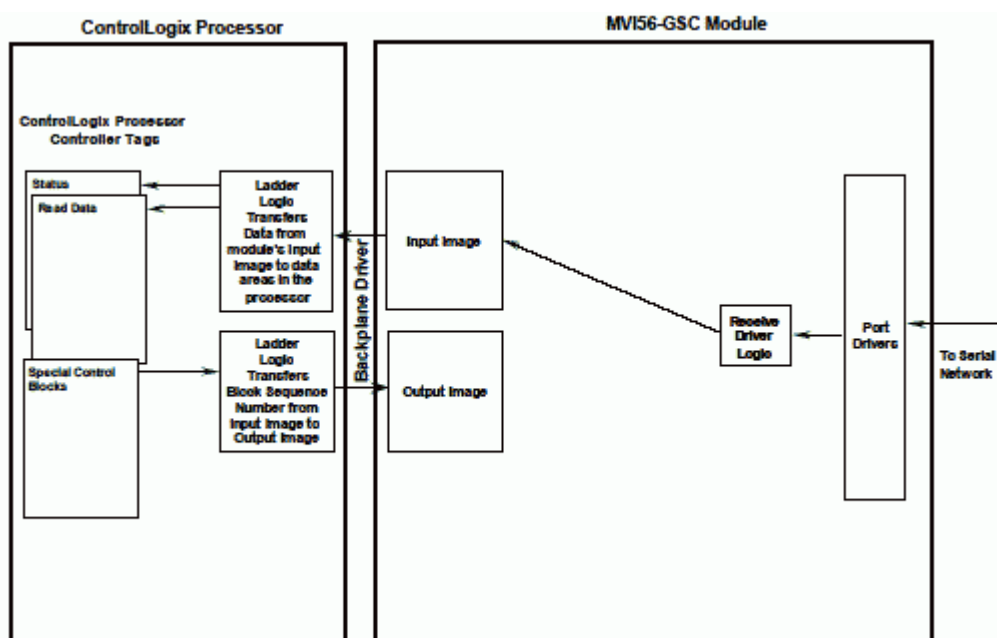


Read-Only Devices

Read-Only devices are those that only receive data from the module. An example of this type of device is a printer. The printer will generate output or be controlled based on the data it receives on its communication port. Ladder logic is used to construct the write blocks to be sent to the module. When the module receives a new write block containing data, it will transmit the data out the port. The Block Sequence Number used in the write block should be the one received on the last read block. The data flow diagram for a read-only device is shown below:

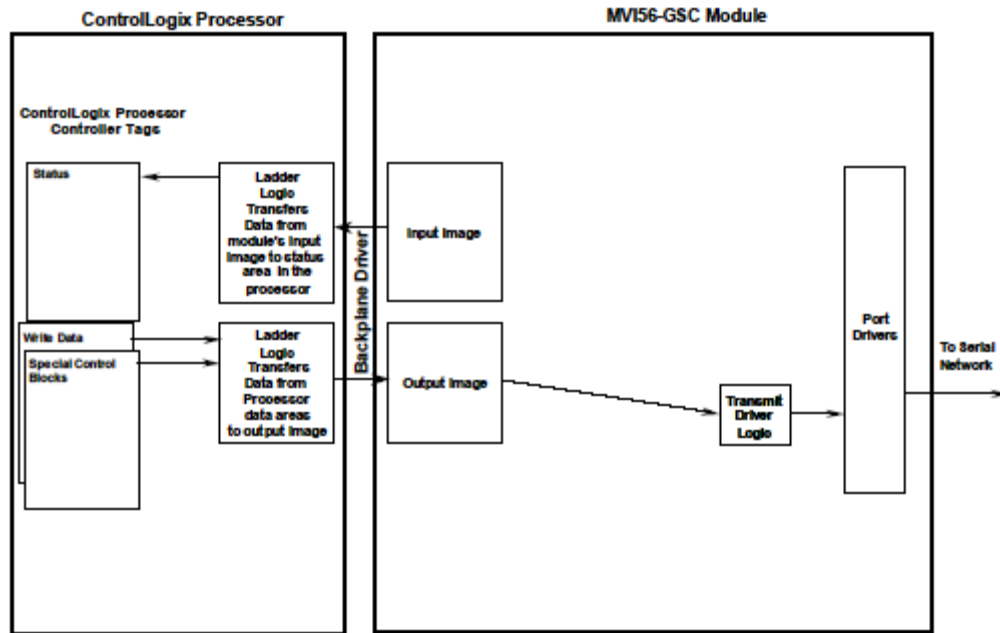MVI56 GSC Module**Read-Write Devices**

Read-write devices are those that both send and receive data. An example of this type of device is a terminal. A terminal will send data entered on the keyboard out its serial port and display any data received on its port on the monitor. All data received from the terminal will be routed to the ControlLogix processor through the MVI56 GSC's input image. Data to be written to the terminal will be sent to the module using the output image. The module will send new data in the output image out the application port to the terminal. The example shipped with the module (MVI56GSC.ACD) can be interfaced with a terminal to echo back all characters received. The data flow diagram for a read-write device is shown below:

MVI56 GSC Module

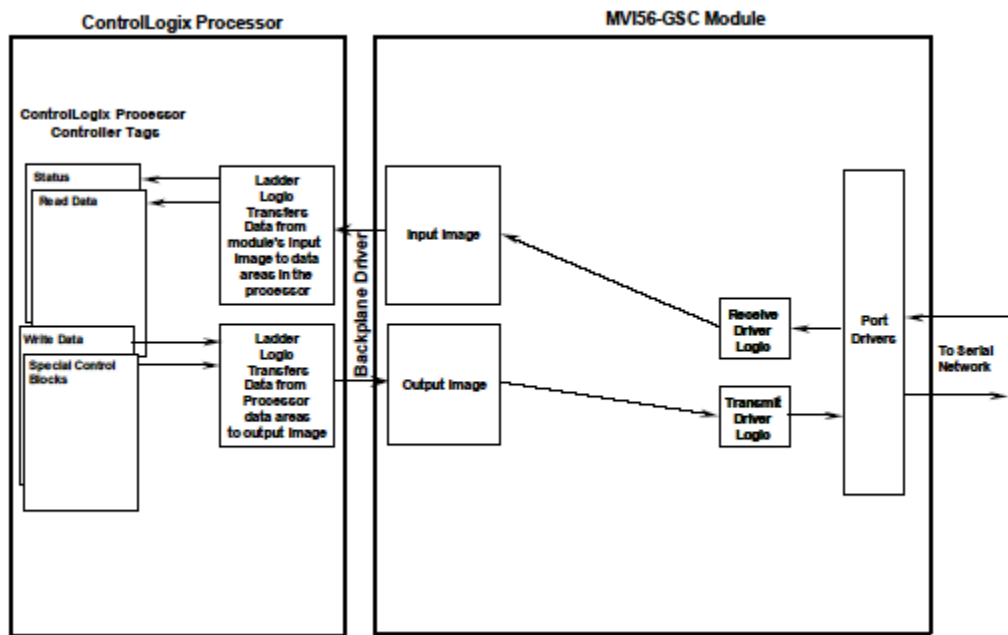

5.2.6 Termination of Received Data

When data is received on either of the application ports, you must define in the configuration when this data will be transferred to the ControlLogix processor. Within the module, this is known as the termination type for port. When the termination condition is met, the data will be sent from the port's receive buffer (data area of 4096 bytes) to the processor using the input image. This termination type is set in the bit mapped, Type field of the module object. The following illustration shows the bit map used for this parameter.

Bit(s)	4 to 7	3	2	1	0
Bit Value	–	8	4	2	1
Definition	Reserved	Packet size limit used	Intercharacter delay timeout used	Message timeout used	Termination character(s) used

Termination Type Field

If none of the bits are set (Type=0), the port will be configured for stream mode. Any characters received on the port are immediately sent to the processor. The processor must buffer and assemble a packet of information if this mode is selected as required by the application. If the data can be handled by the processor in this mode and it is appropriate for your application, this is the fastest method of communication between the device and the processor.

Any combination of bits is acceptable to the module and should be set to match the device on the specific port. An example of each termination type is given below.

Termination character(s) used

Settings:

Count = 1 (RTermCnt=1)

Termination on 0x0d (carriage return character) (RTermChar = 0d 00 00 00 ...)

Data Received on port:

A B C 0x0d D E


Comment: The characters "ABC" will be sent along with the 0x0d character to the controller after the 0x0d character is received. The characters "DE" will not be sent until the 0x0d character is received.

Message timeout used

Settings:

Message timeout = 1000 milliseconds (Rtimeout=1000)

Data Received on port:




Comment: After the 'A' character is received on the port, the message timeout is started. The characters "ABCDE" will be sent to the controller in one block. The characters "FG" will follow in the second block one second later.

Intercharacter delay timeout used

Settings:

Intercharacter delay timeout = 300 milliseconds (Rdelay=300)

Data Received on port:



Comment: After each character is received, the intercharacter delay timer is reset. The characters "ABCDEF" will be sent to the controller in one block because the delay timer expires. The characters "GH" will follow in the second block when the next time gap is recognized.

Packet size limit used

Settings:

Packet size = 4 (RPacketLen=4)

Data Received on port:

A B C D E F G H I J

Comment: The first block sent to the controller will contain the characters "ABCD", and the second block will contain the characters "EFGH". The characters "IJ" will not be sent until two more characters are received on the port.

The maximum size of a message that can be sent using the input image is 4096 bytes. This is the size of the receive buffer in the module. If this buffer is filled before the termination condition is present, the module will automatically transfer the received data to the controller. This will prevent the loss of data. The data will be paged using the input image 200 bytes at a time. The ladder logic must handle this condition if the configuration of the module would permit this situation.


5.3 Cable Connections

The application ports on the MVI56 GSC module support RS-232, RS-422, and RS-485 interfaces. Please inspect the module to ensure that the jumpers are set correctly to correspond with the type of interface you are using.

Note: When using RS-232 with radio modem applications, some radios or modems require hardware handshaking (control and monitoring of modem signal lines). Enable this in the configuration of the module by setting the UseCTS parameter to 1.

5.3.1 RS-232 Configuration/Debug Port


This port is physically an RJ45 connection. An RJ45 to DB-9 adapter cable is included with the module. This port permits a PC based terminal emulation program to view configuration and status data in the module and to control the module. The cable for communications on this port is shown in the following diagram:

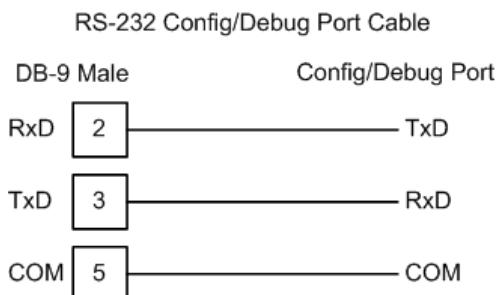


Disabling the RSLinx Driver for the Com Port on the PC

The communication port driver in RSLinx can occasionally prevent other applications from using the PC's COM port. If you are not able to connect to the module's configuration/debug port using HyperTerminal or a similar terminal emulator, follow these steps to disable the RSLinx Driver.

- 1 Open RSLinx and go to Communications>RSWho
- 2 Make sure that you are not actively browsing using the driver that you wish to stop. The following shows an actively browsed network:

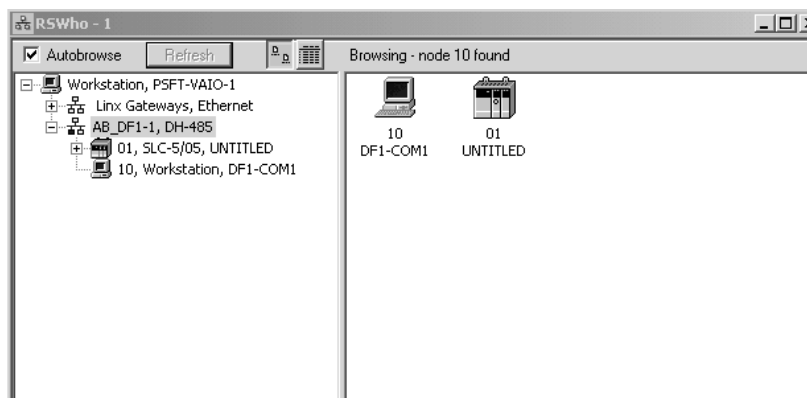

- Notice how the DF1 driver is opened, and the driver is looking for a processor on node 1. If the network is being browsed, then you will not be able to stop this driver. To stop the driver your RSWho screen should look like this:

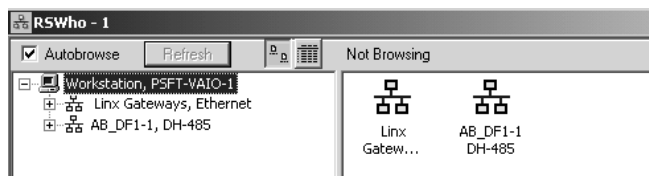


Branches are displayed or hidden by clicking on the or the icons.




- When you have verified that the driver is not being browsed, go to **Communications>Configure Drivers**


You may see something like this:

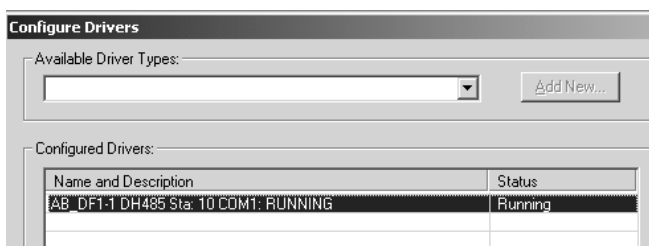

If you see the status as running, you will not be able to use this com port for anything other than communication to the processor. To stop the driver press the "Stop" on the side of the window:



- After you have stopped the driver you will see the following:

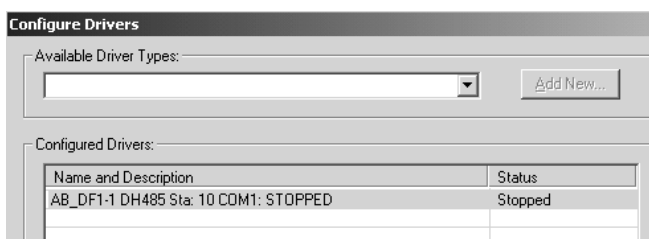


- 6 Upon seeing this, you may now use that com port to connect to the debug port of the module.

Note: You may need to shut down and restart your PC before it will allow you to stop the driver (usually only on Windows NT machines). If you have followed all of the above steps, and it will not stop the driver, then make sure you do not have RSLogix open. If RSLogix is not open, and you still cannot stop the driver, then reboot your PC.


5.3.2 RS-232

When the RS-232 interface is selected, the use of hardware handshaking (control and monitoring of modem signal lines) is user definable. If no hardware handshaking will be used, the cable to connect to the port is as shown below:

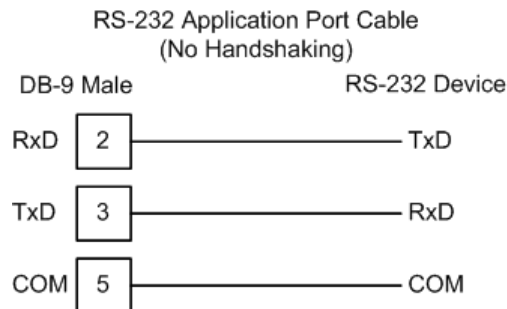

RS-232: Modem Connection


This type of connection is required between the module and a modem or other communication device.

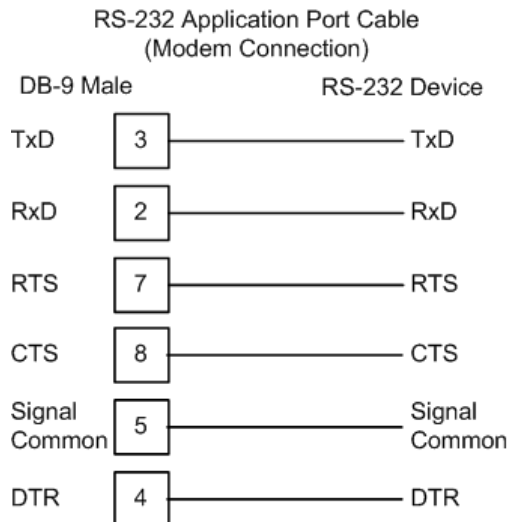

The "Use CTS Line" parameter for the port configuration should be set to 'Y' for most modem applications.


RS-232: Null Modem Connection (Hardware Handshaking)

This type of connection is used when the device connected to the module requires hardware handshaking (control and monitoring of modem signal lines).

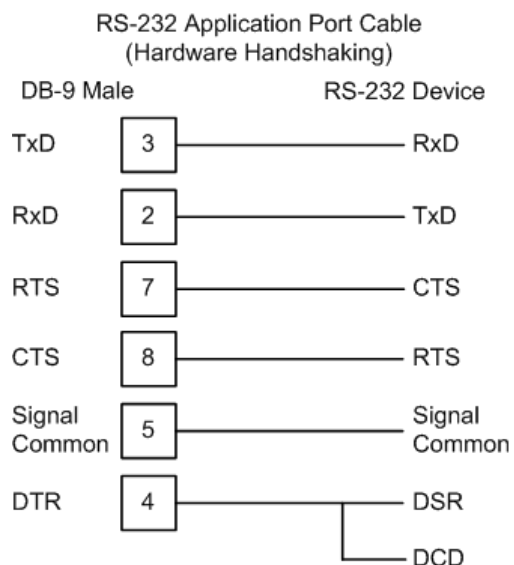


RS-232: Null Modem Connection (No Hardware Handshaking)

This type of connection can be used to connect the module to a computer or field device communication port.

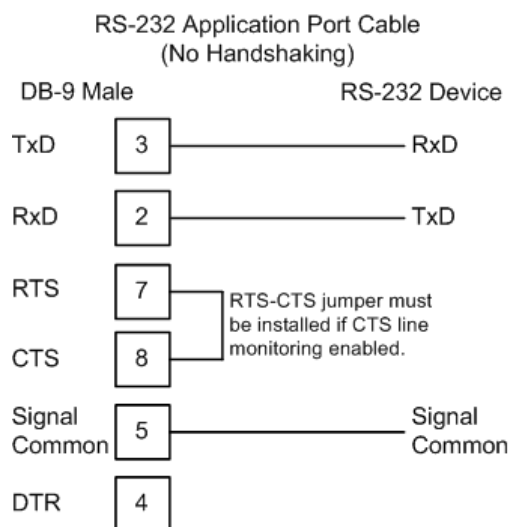


Note: If the port is configured with the "Use CTS Line" set to 'Y', then a jumper is required between the RTS and the CTS line on the module connection.

5.3.3 RS-422

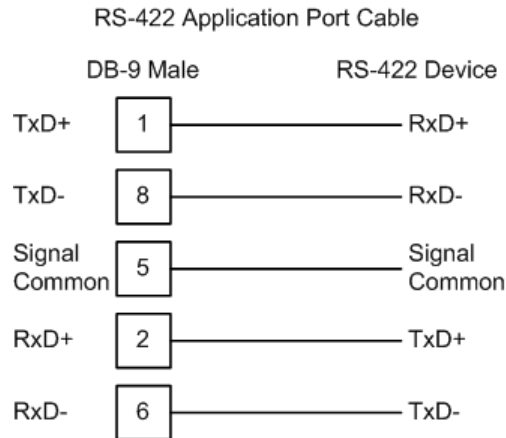

5.3.4 RS-485


The RS-485 interface requires a single two or three wire cable. The Common connection is optional and dependent on the RS-485 network. The cable required for this interface is shown below:

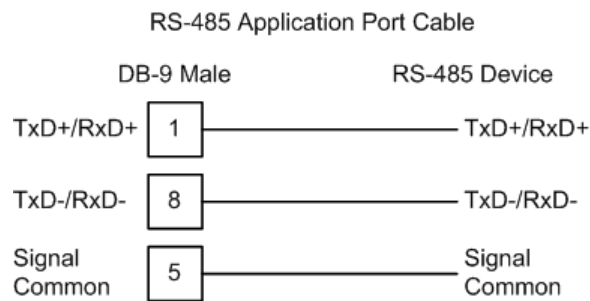

RS-485 and RS-422 Tip

If communication in the RS-422/RS-485 mode does not work at first, despite all attempts, try switching termination polarities. Some manufacturers interpret +/- and A/B polarities differently.

5.3.5 DB9 to RJ45 Adaptor (Cable 14)

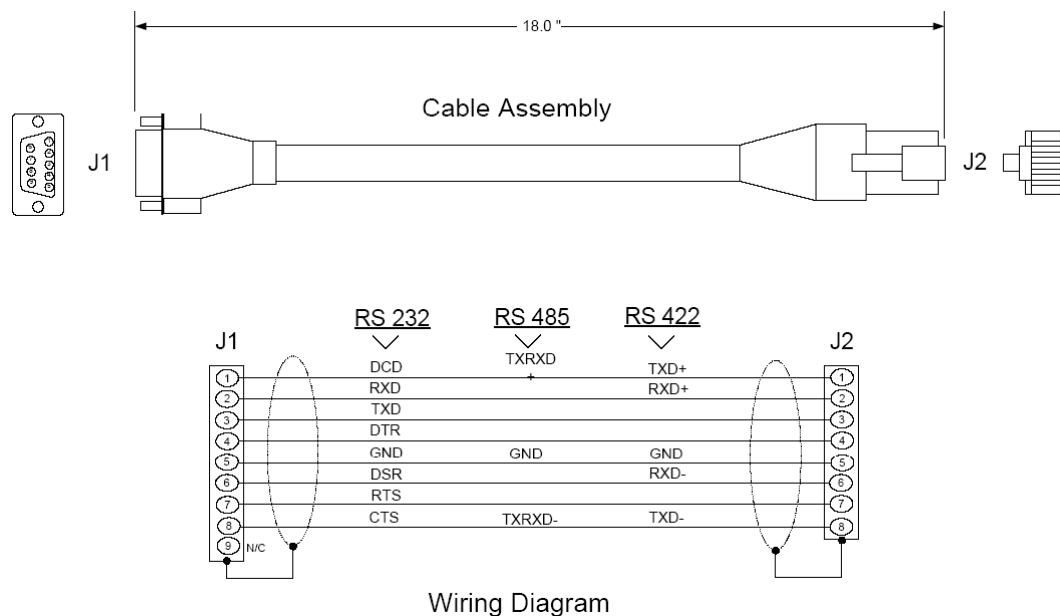

5.4 Status Data Definition

This section contains a description of the members present in the **GSCInStat** object. This data is transferred from the module to the processor as part of each read block.

MVI56 GSC Status Data Object in GSCInStat	Block Offset	Description
PassCnt	210 to 211	Program cycle counter
Product	212 to 215	Product name as ASCII string
Rev	216 to 219	Revision level as ASCII string
OP	220 to 223	Operating system level as ASCII string
Run	224 to 227	Run number as ASCII string
BlkErrs.Read	228 to 229	Number of blocks transferred from module to processor
BlkErrs.Write	230 to 231	Number of blocks transferred from processor to module
BlkErrs.Parse	232 to 233	Number of blocks parsed by module
BlkErrs.Err	234 to 235	Number of block errors in module
Port[0].RxState	236 to 237	Port 1 receive state: -1 = Listening for data 1 = Receiving Port Data 2 = Waiting for Backplane transfer
Port[0].RXCharCnt	238 to 239	Port 1 receive character count
Port[0].RxMsgCnt	240 to 241	Port 1 receive block count

MVI56 GSC Status Data Object in GSCInStat	Block Offset	Description
Port[0].TxState	242 to 243	Port 1 transmit state: 0 = Waiting for Data to Send 1 = RTS On 2 = RTS Timeout 3 = Sending data 4 = Waiting for RTS Off 5 = RTS turned off 30 = Intercharacter Delay 31 = Intercharacter Delay 32 = Intercharacter Delay 100 = Message Delay before Transmit 101 = Message Delay before Transmit
Port[0].TxCharCnt	244 to 245	Port 1 transmit character count
Port[0].TxMsgCnt	246 to 247	Port 1 transmit block count
Port[1].RxState	456 to 457	Port 2 receive state: -1 = Listening for data 1 = Receiving Port Data 2 = Waiting for Backplane transfer
Port[1].RXCharCnt	458 to 459	Port 2 receive character count
Port[1].RxMsgCnt	460 to 461	Port 2 receive block count
Port[1].TxState	462 to 463	Port 2 transmit state: 0 = Waiting for Data to Send 1 = RTS On 2 = RTS Timeout 3 = Sending data 4 = Waiting for RTS Off 5 = RTS turned off 30 = Intercharacter Delay 31 = Intercharacter Delay 32 = Intercharacter Delay 100 = Message Delay before Transmit 101 = Message Delay before Transmit
Port[1].TxCharCnt	464 to 465	Port 2 transmit character count
Port[1].TxMsgCnt	466 to 467	Port 2 transmit block count

5.5 Configuration Error Word

If the module is configured correctly, the configuration error word should have a value of zero. Any other value indicates a configuration error. Use the value in the configuration error word to determine which set of parameters are invalid in the driver configuration area. The following table lists the bits associated with each configuration error in the word:

Bit	Code	Description
0	0x0001	Invalid Cfg_type
1	0x0002	Invalid Cfg_Baud
2	0x0004	Invalid Cfg_Parity
3	0x0008	Invalid Cfg_DataBits
4	0x0010	Invalid Cfg_StopBits
5	0x0020	Invalid Cfg_Handshake
6	0x0040	Invalid Cfg_RTermcount
7	0x0080	Invalid Cfg_RPacketLen
8	0x0100	Invalid Cfg_RTimeout
9	0x0200	Invalid Cfg_RDelay
10	0x0400	Invalid Cfg_WTimeout
11	0x0800	Invalid Resv_Bit11
12	0x1000	Invalid Resv_Bit12
13	0x2000	Invalid Resv_Bit13
14	0x4000	Invalid Resv_Bit14
15	0x8000	Invalid Err_ROverflow

6 Support, Service & Warranty

In This Chapter

- How to Contact Us: Sales and Support..... 70
- Return Material Authorization (RMA) Policies and Conditions 71
- Procedures for Return of Units Under Warranty..... 71
- Procedures for Return of Units Out of Warranty..... 72
- LIMITED WARRANTY 73

Be sure and read the full Warranty that can be found on our web site at www.prosoft-technology.com for details and other terms and conditions. The content in this summary is subject to change without notice. The content is current at date of publication.

ProSoft Technology, Inc. strives to provide meaningful support to its customers. Should any questions or problems arise, please feel free to contact us at:

Internet	Web Site: http://www.prosoft-technology.com/support E-mail address: support@prosoft-technology.com
-----------------	---

Those of us at ProSoft Technology, Inc. want to provide the best and quickest support possible, so before calling please have the following information available. You may wish to fax this information to us prior to calling.

- 1 Product Version Number
- 2 System architecture
- 3 Network details

In the case of hardware, we will also need the following information:

- 1 Module configuration and contents of file
- 2 Module Operation
- 3 Configuration/Debug status information
- 4 LED patterns
- 5 Information about the processor and user data files as viewed through the development software and LED patterns on the processor
- 6 Details about the networked devices interfaced, if any

For technical support calls within the United States, an after-hours answering system allows pager access to one of our qualified technical and/or application support engineers at any time to answer your questions.

6.1 How to Contact Us: Sales and Support

All ProSoft Technology Products are backed with full technical support. Contact our worldwide Technical Support team and Customer Service representatives directly by phone or email:

USA / Latin America (excluding Brasil) (Office in California)

+1(661) 716-5100
+1(661) 716-5101 (Fax)
1675 Chester Avenue, 4th Floor
Bakersfield, California 93301
U.S.A.
+1.661.716.5100, support@prosoft-technology.com
Languages spoken include: English, Spanish

Asia Pacific (office in Malaysia)

+603.7724.2080
+603.7724.2090 (Fax)
C210, Damansara Intan,
1 Jalan SS20/27, 47400 Petaling Jaya
Selangor, Malaysia
+603.7724.2080, asiapc@prosoft-technology.com
Languages spoken include: Chinese, Japanese, English

China Pacific (office in China)

+86.21.64518356 x 8011
+86.21.64756957 (Fax)
4/F, No. 16 Hongcao Road
Shanghai, China 200233
China
+86.21.64518356 x 8011, zhang@prosoft-technology.com
Languages spoken include: Chinese, English

Europe / Middle East / Africa (office in Toulouse, France)

+33 (0) 5.34.36.87.20
+33 (0) 5.61.78.40.52 (Fax)
Zone d'activité de Font Grasse
17, rue des Briquetiers
F-31700 Blagnac
France
+33 (0) 5.34.36.87.20. support. EMEA@prosoft-technology.com
Languages spoken include: French, English

Brasil (office in Sao Paulo)

+55-11-5084-5178
+55-11-5083-3776 (Fax)
Rua Vergueiro, 2949 - sala 182 - Edifício Vergueiro Work Center
Vila Mariana - São Paulo
Cep: 04101-300 – Brasil
+55-11-5084-5178, eduardo@prosoft-technology.com
Languages spoken include: Portuguese, English

6.2 Return Material Authorization (RMA) Policies and Conditions

The following RMA Policies and Conditions apply to any returned product. These RMA Policies are subject to change by ProSoft without notice. For warranty information, see Section C below entitled "Limited Warranty". In the event of any inconsistency between the RMA Policies and the Warranty, the Warranty shall govern.

6.2.1 All Product Returns

- 1** In order to return a Product for repair, exchange or otherwise, the Customer must obtain a Returned Material Authorization (RMA) number from ProSoft and comply with ProSoft shipping instructions.
- 2** In the event that the Customer experiences a problem with the Product for any reason, Customer should contact ProSoft Technical Support at one of the telephone numbers listed above in Section A. A Technical Support Engineer will request several tests in an attempt to isolate the problem. If after these tests are completed, the Product is found to be the source of the problem, ProSoft will issue an RMA.
- 3** All returned Products must be shipped freight prepaid, in the original shipping container or equivalent, to the location specified by ProSoft, and be accompanied by proof of purchase. The RMA number is to be prominently marked on the outside of the shipping box. Customer agrees to insure the Product or assume the risk of loss or damage in transit. Products shipped to ProSoft without an RMA number will be returned to the Customer, freight collect. Contact ProSoft Technical Support for further information.
- 4** Out of warranty returns are not allowed on RadioLinx accessories such as antennas, cables, and brackets.

The following policy applies for Non-Warranty Credit Returns:

- A** 10% Restocking Fee if Factory Seal is *not* broken
- B** 20% Restocking Fee if Factory Seal is broken

ProSoft retains the right, in its absolute and sole discretion, to reject any non-warranty returns for credit if the return is not requested within three (3) months after shipment of the Product to Customer, if the Customer fails to comply with ProSoft's shipping instructions, or if the Customer fails to return the Product to ProSoft within six (6) months after Product was originally shipped.

6.3 Procedures for Return of Units Under Warranty

- 1** A Technical Support Engineer must pre-approve all product returns.
- 2** Module is repaired or replaced after a Return Material Authorization Number is entered and a replacement order is generated.
- 3** Credit for the warranted item is issued within 10 business days after receipt of product and evaluation of the defect has been performed by ProSoft. The credit will only be issued provided the product is returned with a valid Return Material Authorization Number and in accordance with ProSoft's shipping instructions.

- a) If no defect is found, a credit is issued.
- b) If a defect is found and is determined to be customer generated or if the defect is otherwise not covered by ProSoft's Warranty, or if the module is not repairable, a credit is not issued and payment of the replacement module is due.

6.4 Procedures for Return of Units Out of Warranty

- 1 Customer sends unit in for evaluation.
- 2 If no defect is found, Customer will be charged the equivalent of US \$100 plus shipping, duties and taxes that may apply. A new Purchase Order will be required for this evaluation fee.
If the unit is repaired the charge to the Customer will be 30%* of the list price plus any shipping, duties and taxes that may apply. A new Purchase Order will be required for a product repair.
- 3 For an immediate exchange, a new module may be purchased and sent to Customer while repair work is being performed. Credit for purchase of the new module will be issued when the new module is returned in accordance with ProSoft's shipping instructions and subject to ProSoft's policy on non-warranty returns. This is in addition to charges for repair of the old module and any associated charges to Customer.
- 4 If, upon contacting ProSoft Customer Service, the Customer is informed that unit is believed to be unrepairable, the Customer may choose to send unit in for evaluation to determine if the repair can be made. Customer will pay shipping, duties and taxes that may apply. If unit cannot be repaired, the Customer may purchase a new unit.

6.4.1 Un-repairable Units

- 3150-All
- 3750
- 3600-All
- 3700
- 3170-All
- 3250
- 1560 can be repaired, if defect is the power supply
- 1550 can be repaired, if defect is the power supply
- 3350
- 3300
- 1500-All

*** 30% of list price is an estimated repair cost only. The actual cost of repairs will be determined when the module is received by ProSoft and evaluated for needed repairs.**

6.4.2 Purchasing Warranty Extension

As detailed below in ProSoft's Warranty, the standard Warranty Period is one year (or in the case of RadioLinx modules, three years) from the date of delivery. The Warranty Period may be extended for an additional charge, as follows:

- Additional 1 year = 10% of list price
- Additional 2 years = 20% of list price
- Additional 3 years = 30% of list price

6.5 LIMITED WARRANTY

This Limited Warranty ("Warranty") governs all sales of hardware, software and other products (collectively, "Product") manufactured and/or offered for sale by ProSoft, and all related services provided by ProSoft, including maintenance, repair, warranty exchange, and service programs (collectively, "Services"). By purchasing or using the Product or Services, the individual or entity purchasing or using the Product or Services ("Customer") agrees to all of the terms and provisions (collectively, the "Terms") of this Limited Warranty. All sales of software or other intellectual property are, in addition, subject to any license agreement accompanying such software or other intellectual property.

6.5.1 What Is Covered By This Warranty

- A** *Warranty On New Products:* ProSoft warrants, to the original purchaser only, that the Product that is the subject of the sale will (1) conform to and perform in accordance with published specifications prepared, approved, and issued by ProSoft, and (2) will be free from defects in material or workmanship; provided these warranties only cover Product that is sold as new. This Warranty expires one year (or in the case of RadioLinx modules, three years) from the date of shipment (the "Warranty Period"). If the Customer discovers within the Warranty Period a failure of the Product to conform to specifications, or a defect in material or workmanship of the Product, the Customer must promptly notify ProSoft by fax, email or telephone. In no event may that notification be received by ProSoft later than 15 months (or in the case of RadioLinx modules, 39 months) from the date of delivery. Within a reasonable time after notification, ProSoft will correct any failure of the Product to conform to specifications or any defect in material or workmanship of the Product, with either new or used replacement parts. Such repair, including both parts and labor, will be performed at ProSoft's expense. All warranty service will be performed at service centers designated by ProSoft. If ProSoft is unable to repair the Product to conform to this Warranty after a reasonable number of attempts, ProSoft will provide, at its option, one of the following: a replacement product, a full refund of the purchase price or a credit in the amount of the purchase price. All replaced product and parts become the property of ProSoft. These remedies are the Customer's only remedies for breach of warranty.
- B** *Warranty On Services:* Material and labor used by ProSoft to repair a verified malfunction or defect are warranted on the terms specified above

- for new Product, provided said warranty will be for the period remaining on the original new equipment warranty or, if the original warranty is no longer in effect, for a period of 90 days from the date of repair.
- C** The Warranty Period for RadioLinx accessories (such as antennas, cables, brackets, etc.) are the same as for RadioLinx modules, that is, three years from the date of shipment.

6.5.2 What Is Not Covered By This Warranty

- A** ProSoft makes no representation or warranty, expressed or implied, that the operation of software purchased from ProSoft will be uninterrupted or error free or that the functions contained in the software will meet or satisfy the purchaser's intended use or requirements; the Customer assumes complete responsibility for decisions made or actions taken based on information obtained using ProSoft software.
- B** With the exception of RadioLinx accessories referenced in paragraph 1(c) this Warranty does not cover any product, components, or parts not manufactured by ProSoft.
- C** This Warranty also does not cover the failure of the Product to perform specified functions, or any other non-conformance, defects, losses or damages caused by or attributable to any of the following: (i) shipping; (ii) improper installation or other failure of Customer to adhere to ProSoft's specifications or instructions; (iii) unauthorized repair or maintenance; (iv) attachments, equipment, options, parts, software, or user-created programming (including, but not limited to, programs developed with any IEC 61131-3 programming languages, or "C") not furnished by ProSoft; (v) use of the Product for purposes other than those for which it was designed; (vi) any other abuse, misapplication, neglect or misuse by the Customer; (vii) accident, improper testing or causes external to the Product such as, but not limited to, exposure to extremes of temperature or humidity, power failure or power surges outside of the limits indicated on the product specifications; or (viii) disasters such as fire, flood, earthquake, wind or lightning.
- D** The information in this Agreement is subject to change without notice. ProSoft shall not be liable for technical or editorial errors or omissions made herein; nor for incidental or consequential damages resulting from the furnishing, performance or use of this material. The user guides included with your original product purchased by you from ProSoft, contains information protected by copyright. No part of the guide may be duplicated or reproduced in any form without prior written consent from ProSoft.

6.5.3 *DISCLAIMER REGARDING HIGH RISK ACTIVITIES*

PRODUCT MANUFACTURED OR SUPPLIED BY PROSOFT IS NOT FAULT TOLERANT AND IS NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE IN HAZARDOUS ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE (INCLUDING, WITHOUT LIMITATION, THE OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OF COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL, DIRECT LIFE SUPPORT MACHINES OR WEAPONS SYSTEMS), IN WHICH THE FAILURE OF THE PRODUCT COULD LEAD DIRECTLY OR INDIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK ACTIVITIES"). PROSOFT SPECIFICALLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR HIGH RISK ACTIVITIES.

6.5.4 *DISCLAIMER OF ALL OTHER WARRANTIES*

THE WARRANTIES SET FORTH IN PARAGRAPH 1 ABOVE ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

6.5.5 *LIMITATION OF REMEDIES***

IN NO EVENT WILL PROSOFT (OR ITS DEALER) BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES BASED ON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL THEORY. DAMAGES THAT PROSOFT AND ITS DEALER WILL NOT BE RESPONSIBLE FOR INCLUDE, BUT ARE NOT LIMITED TO: LOSS OF PROFITS; LOSS OF SAVINGS OR REVENUE; LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT; LOSS OF DATA; COST OF CAPITAL; COST OF ANY SUBSTITUTE EQUIPMENT, FACILITIES, OR SERVICES; DOWNTIME; THE CLAIMS OF THIRD PARTIES, INCLUDING CUSTOMERS OF THE PURCHASER; AND INJURY TO PROPERTY.

** Some areas do not allow time limitations on an implied warranty, or allow the exclusion or limitation of incidental or consequential damages. In such areas the above limitations may not apply. This Warranty gives you specific legal rights, and you may also have other rights which vary from place to place.

6.5.6 *Time Limit for Bringing Suit*

Any action for breach of warranty must be commenced within 15 months (or in the case of RadioLinx modules, 39 months) following shipment of the Product.

6.5.7 No Other Warranties

Unless modified in writing and signed by both parties, this Warranty is understood to be the complete and exclusive agreement between the parties, suspending all oral or written prior agreements and all other communications between the parties relating to the subject matter of this Warranty, including statements made by salesperson. No employee of ProSoft or any other party is authorized to make any warranty in addition to those made in this Warranty. The Customer is warned, therefore, to check this Warranty carefully to see that it correctly reflects those terms that are important to the Customer.

6.5.8 Intellectual Property

- A** Any documentation included with Product purchased from ProSoft is protected by copyright and may not be photocopied or reproduced in any form without prior written consent from ProSoft.
- B** ProSoft's technical specifications and documentation that are included with the Product are subject to editing and modification without notice.
- C** Transfer of title shall not operate to convey to Customer any right to make, or have made, any Product supplied by ProSoft.
- D** Customer is granted no right or license to use any software or other intellectual property in any manner or for any purpose not expressly permitted by any license agreement accompanying such software or other intellectual property.
- E** Customer agrees that it shall not, and shall not authorize others to, copy software provided by ProSoft (except as expressly permitted in any license agreement accompanying such software); transfer software to a third party separately from the Product; modify, alter, translate, decode, decompile, disassemble, reverse-engineer or otherwise attempt to derive the source code of the software or create derivative works based on the software; export the software or underlying technology in contravention of applicable US and international export laws and regulations; or use the software other than as authorized in connection with use of Product.

6.5.9 Additional Restrictions Relating To Software And Other Intellectual Property

In addition to complying with the Terms of this Warranty, Customers purchasing software or other intellectual property shall comply with any license agreement accompanying such software or other intellectual property. Failure to do so may void this Warranty with respect to such software and/or other intellectual property.

6.5.10 Allocation of risks

This Warranty allocates the risk of product failure between ProSoft and the Customer. This allocation is recognized by both parties and is reflected in the price of the goods. The Customer acknowledges that it has read this Warranty, understands it, and is bound by its Terms.

6.5.11 Controlling Law and Severability

This Warranty shall be governed by and construed in accordance with the laws of the United States and the domestic laws of the State of California, without reference to its conflicts of law provisions. If for any reason a court of competent jurisdiction finds any provisions of this Warranty, or a portion thereof, to be unenforceable, that provision shall be enforced to the maximum extent permissible and the remainder of this Warranty shall remain in full force and effect. Any cause of action with respect to the Product or Services must be instituted in a court of competent jurisdiction in the State of California.

Index

A

Additional Restrictions Relating To Software
And Other Intellectual Property • 76
All Product Returns • 71
Allocation of risks • 77
Analyzing Data for the first application port •
37
Analyzing Data for the second application
port • 37

B

Backplane Data Transfer • 48
Block Failure Data Item (BPFail) • 25

C

Cable Connections • 60
Changing parameters during operation • 24
Clearing a Fault Condition • 42
Cold Boot • 55
Command Control Blocks • 55
Configuration Data Transfer • 54
Configuration Error Word • 68
Configuration Objects • 24
Configuration Parameters • 25, 26
Configuring RSLinx • 15
Connect your PC to the Module • 17
Connect your PC to the Processor • 13
Controlling Law and Severability • 77
ControlLogix Processor Not in Run • 48

D

Data Analyzer • 36
Data Analyzer Tips • 39
Data Flow between MVI56 GSC Module and
ControlLogix Processor • 55
DB9 to RJ45 Adaptor (Cable 14) • 66
Diagnostics and Troubleshooting • 7, 23, 31
Disabling the RSLinx Driver for the Com Port
on the PC • 33, 61
DISCLAIMER OF ALL OTHER
WARRANTIES • 75
DISCLAIMER REGARDING HIGH RISK
ACTIVITIES • 75
Displaying Timing Marks in the Data
Analyzer • 37
Download the Sample Program to the
Processor • 14

E

Exiting the Program • 36

F

Features and Benefits • 45
Functional Overview • 7, 47
Functional Specifications • 46

G

General Concepts • 47
General Specifications • 45
Guide to the MVI56 GSC User Manual • 7

H

Hardware Specifications • 46
How to Contact Us
Sales and Support • 70

I

Install the Module in the Rack • 12
Installing and Configuring the Module • 19
Intellectual Property • 76
Intercharacter delay timeout used • 59

K

Keystrokes • 32

L

Ladder Logic • 29
LED Status Indicators • 41
LIMITATION OF REMEDIES** • 75
LIMITED WARRANTY • 73

M

Main Logic Loop • 48
Main Menu • 34
Message timeout used • 59
Module Configuration • 23, 50
Module Data Object (GSCModule) • 24
Module Power Up • 47
MVI56 GSC Module • 49, 56, 57, 58

N

Navigation • 32
No Other Warranties • 76
Normal Data Transfer • 50

O

Opening the Data Analyzer Menu • 34

P

Package Contents • 10
Packet size limit used • 60
Please Read This Notice • 2
Port Parameters (GSCMPort) • 25
Power Up • 24
Procedures for Return of Units Out of
Warranty • 72
Procedures for Return of Units Under
Warranty • 71
Product Specifications • 7, 45
Purchasing Warranty Extension • 73

R

Read Block • 50
Reading Status Data from the module • 7, 31
Read-Only Devices • 56
Read-Write Devices • 57
Reference • 7, 45
Removing Timing Marks in the Data
Analyzer • 37
Required Hardware • 32
Required Software • 33
Return Material Authorization (RMA) Policies
and Conditions • 71
Returning to the Main Menu • 38
RS-232 • 63
 Modem Connection • 63
 Null Modem Connection (Hardware
 Handshaking) • 64
 Null Modem Connection (No Hardware
 Handshaking) • 64
RS-232 Configuration/Debug Port • 61
RS-422 • 65
RS-485 • 65
RS-485 and RS-422 Tip • 65

S

Setting Jumpers • 11
Start Here • 7, 9
Starting the Data Analyzer • 38
Status Data Definition • 26, 66
Status Object (GSCInStat) • 26
Stopping the Data Analyzer • 38
Support, Service & Warranty • 7, 69
System Requirements • 9

T

Termination character(s) used • 59
Termination of Received Data • 58
Termination Type Field • 58

The Configuration/Debug Menu • 31
Time Limit for Bringing Suit • 75
Troubleshooting • 43

U

Un-repairable Units • 72
Using the Configuration/Debug Port • 33

V

Viewing Block Transfer Statistics • 35
Viewing Data in ASCII (Text) Format • 37
Viewing Data in Hexadecimal Format • 37
Viewing Module Configuration • 35
Viewing Port Communication Status • 36
Viewing Port Configuration • 36
Viewing Version Information • 35

W

Warm Boot • 55
Warm Booting the Module • 35
Warnings • 2
What Is Covered By This Warranty • 73
What Is Not Covered By This Warranty • 74
Write Block • 53
Write-Only Devices • 56

Y

Your Feedback Please • 3