

GC-001

Parts List

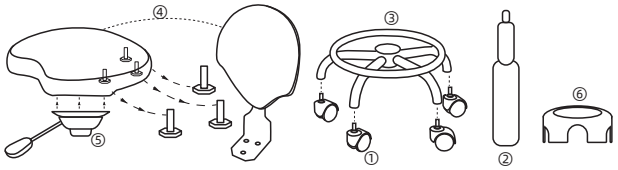


No.	Model	Item Name	Qty
①	GC-P003	Regular Casters	5
②	GC-P005	160K Hydraulic Pump	1
③	GC-P007	805 Star Base	1
④	GC-P009	Seat & Backrest Set	1
⑤	GC-P010	Control Mechanism with Lever	1
⑥	GC-P011	Gas Lift Cover	1


① Insert the hydraulic pump vertically downward into the base, and press down firmly to secure it.

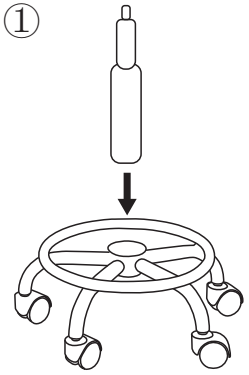


② Slide the decorative cover down onto the base.

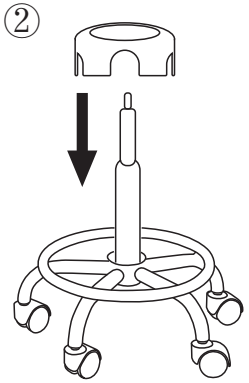

③ Remove the three fixing screws from the back of the seat cushion.

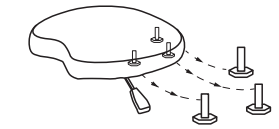


The handle tray has been pre-installed onto the seat cushion before leaving the factory.

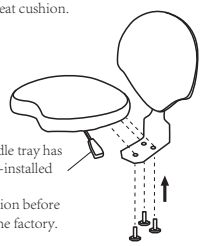


Secure the backrest tightly using the fixing screws.

④ Insert the seat cushion vertically downward onto the hydraulic pump.

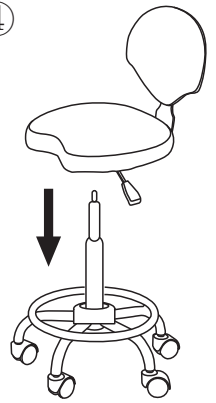


⑤ Note: After assembly is complete, please sit on the chair and raise/lower it repeatedly to ensure a secure connection between the pump, seat cushion, and base.

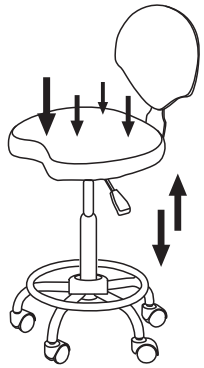


GC-001S

Parts List

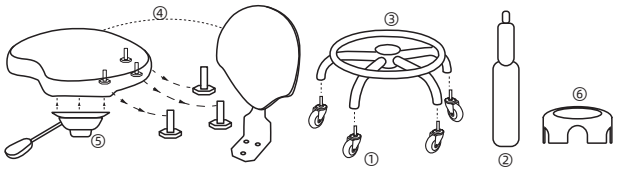


No	Model	Item Name	Qty
①	GC-P002	Anti-Tangle Casters	5
②	GC-P005	160K Hydraulic Pump	1
③	GC-P007	805 Star Base	1
④	GC-P009	Seat & Backrest Set	1
⑤	GC-P010	Control Mechanism with Lever	1
⑥	GC-P011	Gas Lift Cover	1


① Insert the hydraulic pump vertically downward into the base, and press down firmly to secure it in place.

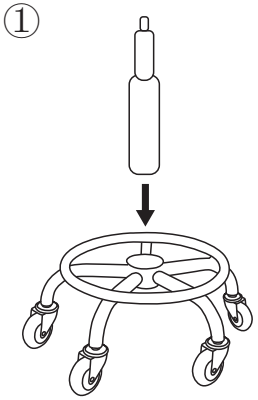


② Slide the decorative cover downward over the base.

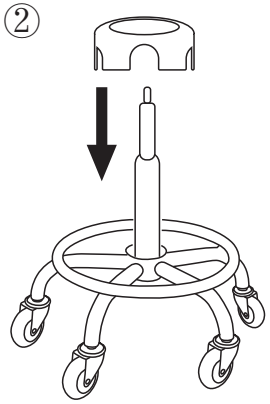

③ Remove the three fixing screws from the back of the seat cushion.

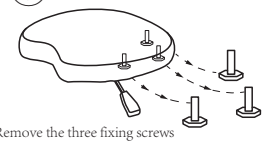


The seat mechanism comes pre-installed on the seat cushion.

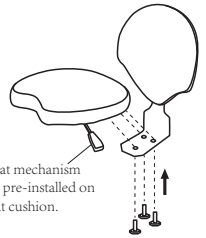


Secure the backrest tightly using the fixing screws.

④ Insert the seat cushion vertically downward onto the hydraulic pump.

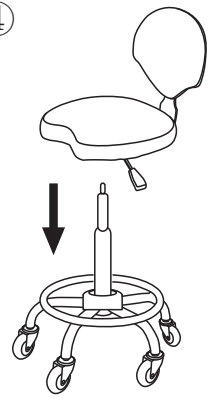


⑤ Note: After assembly is complete, please sit on the chair and raise/lower it repeatedly to ensure a secure connection between the pump, seat cushion, and base.

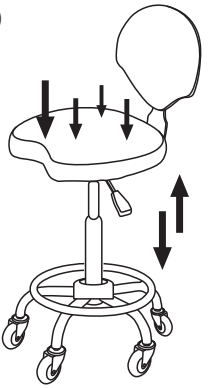


GC-001SW

Parts List

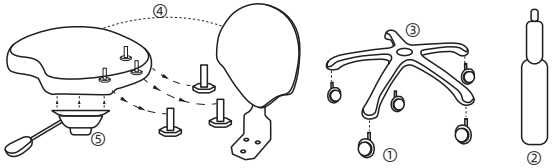


No	Model	Item Name	Qty
①	GC-P001	Planet Casters	5
②	GC-P004	160K Hydraulic Pump	1
③	GC-P006	801 Star Base	1
④	GC-P009	Seat & Backrest Set	1
⑤	GC-P010	Control Mechanism with Lever	1
⑥	GC-P011	Gas Lift Cover	1


① Insert the hydraulic pump vertically downward into the base, and press down firmly to secure it in place.

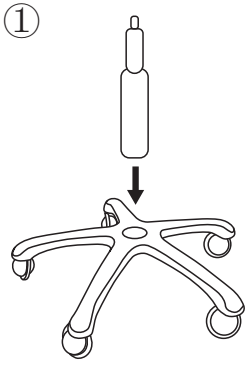


② Slide the decorative cover downward over the base.

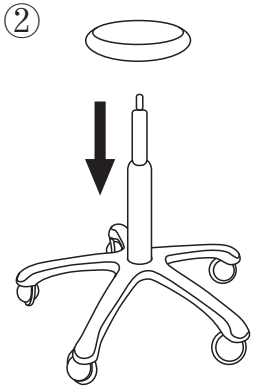

③ Remove the three fixing screws from the back of the seat cushion.

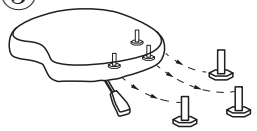


The seat mechanism comes pre-installed on the seat cushion.

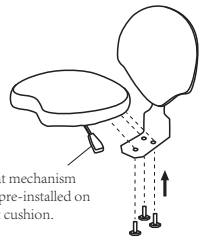


Secure the backrest tightly using the fixing screws.

④ Insert the seat cushion vertically downward onto the hydraulic pump.

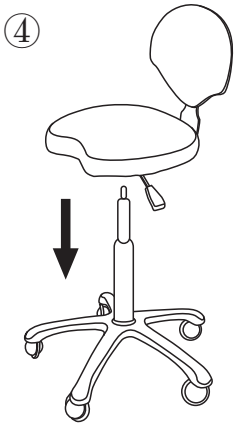


⑤ Note: After assembly is complete, please sit on the chair and raise/lower it repeatedly to ensure a secure connection between the pump, seat cushion, and base.

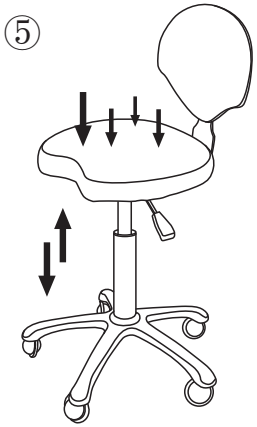


GC-002

附件清单

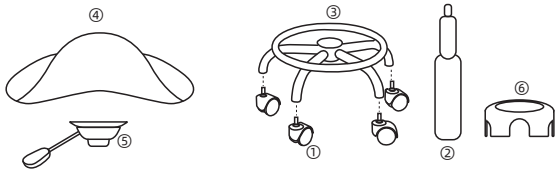


No	Model	Item Name	Qty
①	GC-P003	Regular Casters	5
②	GC-P005	160K Hydraulic Pump	1
③	GC-P007	805 Star Base	1
④	GC-P008	Saddle Seat Cushion	1
⑤	GC-P010	Control Mechanism with Lever	1
⑥	GC-P011	Gas Lift Cover	1

①

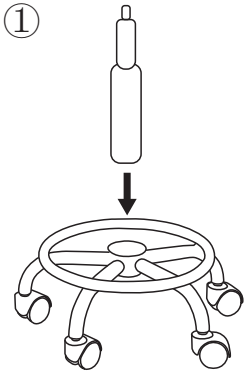


Insert the hydraulic pump vertically downward into the base, and press down firmly to secure it in place.

②

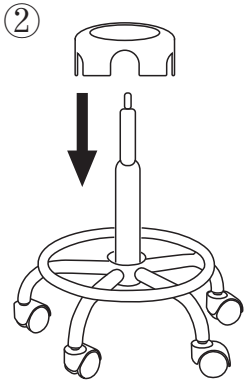


Slide the decorative cover downward over the base.

③

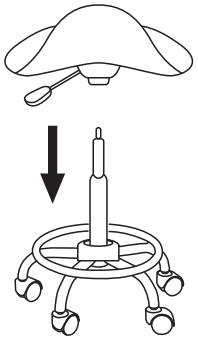

Insert the seat cushion vertically downward onto the hydraulic pump.


④

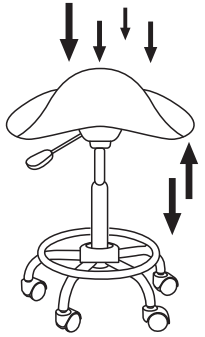

Note: After assembly is complete, please sit on the chair and raise/lower it repeatedly to ensure a secure connection between the pump, seat cushion, and base.


GC-002S

Parts List

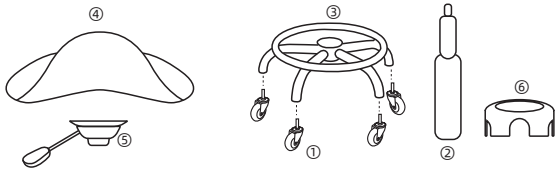


No	Model	Item Name	Qty
①	GC-P002	Anti-Tangle Casters	5
②	GC-P005	160K Hydraulic Pump	1
③	GC-P007	805 Star Base	1
④	GC-P008	Saddle Seat Cushion	1
⑤	GC-P010	Control Mechanism with Lever	1
⑥	GC-P011	Gas Lift Cover	1

①

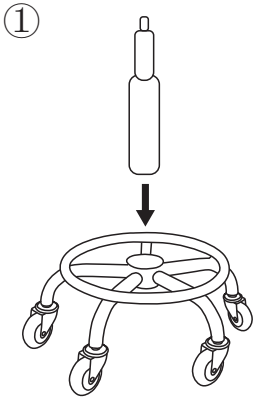


Insert the hydraulic pump vertically downward into the base, and press down firmly to secure it in place.

②

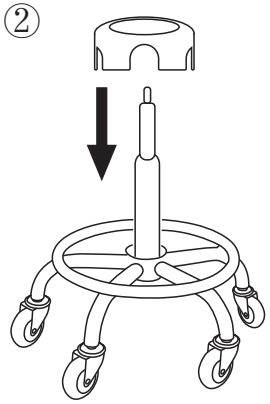


Slide the decorative cover downward over the base.

③

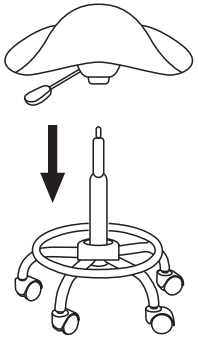

Insert the seat cushion vertically downward onto the hydraulic pump.


④

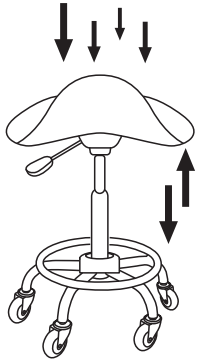

Note: After assembly is complete, please sit on the chair and raise/lower it repeatedly to ensure a secure connection between the pump, seat cushion, and base.


GC-002SW

Parts List

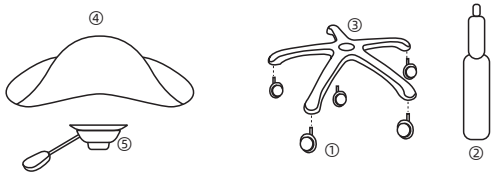


No	Model	Item Name	Qty
①	GC-P001	Planet Casters	5
②	GC-P004	160K Hydraulic Pump	1
③	GC-P006	801 Star Base	1
④	GC-P008	Saddle Seat Cushion	1
⑤	GC-P010	Control Mechanism with Lever	1
⑥	GC-P011	Gas Lift Cover	1

①

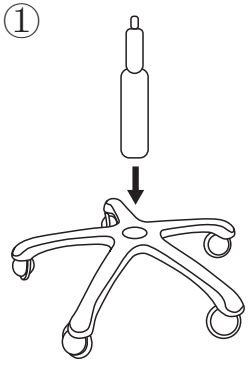


Insert the hydraulic pump vertically downward into the base, and press down firmly to secure it in place.

②

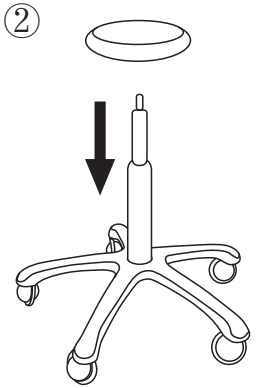


Slide the decorative cover downward over the base.

③

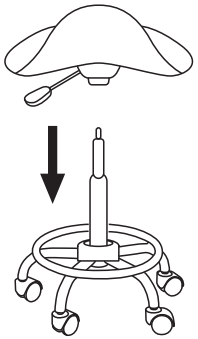

Insert the seat cushion vertically downward onto the hydraulic pump.

④

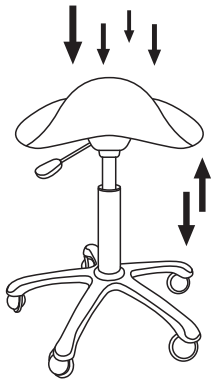

Note: After assembly is complete, please sit on the chair and raise/lower it repeatedly to ensure a secure connection between the pump, seat cushion, and base.