说明书：140*90mm 放在信封里面

shernbao

WUHAN SHERNBAO PET PRODUCTS MANUFACTURING CO., LTD.
Room 1608, Unit A, No. 38, Minyuan Road, Wuhan, Hubei Province, China
+86 27 59300080 / 15500080
WWW.SHERNBAO.COM

shernbao

PGC-901

Cord / Cordless Pet Clipper

User Manual

Clipper Specifications

Model	PGC-901	**Charge Time**	3 hours
Input	5V ⎓ 2A 10W Max	**Run Time**	4 hours
Lithium Battery	3.6V 2600mAh		2600/1900 RPM
Package Includes	Clipper / Charging Station / USB Type-C Cable / 4 #4-7 Metal / Cleaning Brush / Lubricant Oil - 8ml & 28ml / Manual		

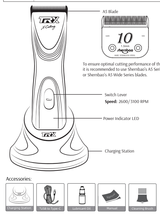

To ensure optimal cutting performance of the unit, we recommend using only A1 Blades, A5 Series Blades or Shernbao's A1 Wide Series Blades.

Charging

CORDLESS

1. Push the lever switch and adjust it to the desired speed position to use the clipper.
2. When the battery level is sufficient, the clipper can be operated in cordless mode.

⚠ When the last battery indicator segment starts flashing, please charge the device promptly or use it while connected to the power cable. This prevents potential damage to the battery lifespan caused by excessively low power levels.

CORDED

1. When the battery level is very low or there is no time to charge the clipper, get the power connected to the wall outlet.
2. Push the switch lever and adjust it to the desired speed position to use it.

* The battery will be charged simultaneously when the clipper operated with a cord.
* The charging time will be longer if the clipper is operating.

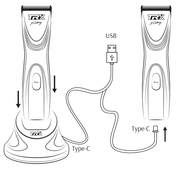

Power / Speed Indicator LED

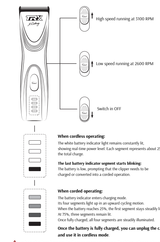

When cordless operating:
The white battery indicator light remains constantly lit, showing real time power level. Each segment represents about 25% of the total charge.

The last battery indicator segment starts blinking:
The battery is low, prompting that the clipper needs to be charged or converted into a corded operation.

When corded operating:
The battery indicator enters charging mode:
Its four segments light up in an upward cycling motion.
When the battery reaches 25%, the first segment stays steadily lit.
At 75%, three segments remain lit.
Once fully charged, all four segments are steadily illuminated.

Once the battery is fully charged, you can unplug the cable and use it in cordless mode.

⚠ When the last battery indicator segment starts flashing, please charge the device promptly or use it while connected to the power cable. This prevents potential damage to the battery lifespan caused by excessively low power levels.

Blade Installation/Removal

BLADE INSTALLATION

Insert the blade slot into the blade latch, and fold it on to the switched on clipper by light pressure, press the blade down and hear a "click".



BLADE REMOVAL

Push the release button to the end, at the same time, fold the blade backward
Pull the blade out of the latch with another hand to take off the blade.



Maintaining Blades

⚠ CAUTION:
Turn OFF the clipper and disconnect from outlet before performing maintenance.

BLADE REMOVAL ⚠

If the blade latch is accidentally closed, please use a flat screwdriver, insert into the latch gap and pry it up as figure suggests.

CAUTION is advised to not damage any components while conducting the suggested method above.



BLADE MAINTENANCE

1. Blade cleaning: Move the shear blade within a short range and use the brush to remove hair that is stuck between the shear blade and the comb blade.

Maintaining Blades

2. Blade oiling: The blades must be oiled before, during and after every use. When the blades of the clipper are leaving stripes, this is a signal that oil is required.

Place 1-2 drops of lubricating oil ahead and laterally on the blade shown below. Wipe off the excessive oil with a smooth, dry cloth.

In order to achieve optimal clipping performance and enhance the longevity of both the clipper and the blade, it is important to apply a thin coat of oil between the top and bottom blades.

⚠ If the blade is not adequately lubricated, it can cause heating and decrease the durability of the clipper, blades and may reduce the battery runtime

Lubricate the blades sufficiently during the clipping (at least every 15 minutes) or battery drainage can occur.
*Only use shernbao special lubricant oil. See shernbao.com for details.

Available Blade Options

SHERNBAO A5 SERIES BLADE

FITS SHERNBAO PGC-901 & MOST SNAP-ON A5 STYLE CLIPPERS

SHERNBAO A5 Series blades are engineered and calibrated for precision cutting.
State of the art manufacturing technologies and processes are utilized to ensure optimal performance and durability. A special proprietary coating is applied to ensure these blades will run cooler and get through any heavy duty job with ease.

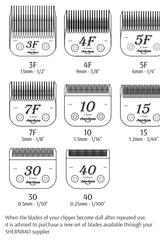

When the blades of your clipper become dull after repeated use, it is advised to purchase a new set of blades available through your SHERNBAO supplier.

Available Blade Options

SHERNBAO AW SERIES BLADE

FITS SHERNBAO PGC-901 & MOST SNAP-ON A5 STYLE CLIPPERS

SHERNBAO AW Series blades are engineered and calibrated for precision cutting.
State of the art manufacturing technologies and processes are utilized to ensure optimal performance and durability. A special proprietary coating is applied to ensure these blades will run cooler and get through any heavy duty job with ease.

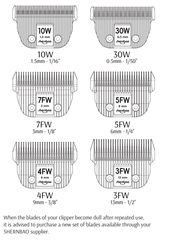

When the blades of your clipper become dull after repeated use, it is advised to purchase a new set of blades available through your SHERNBAO supplier.

Available Attachment Comb Options

8 PIECE STAINLESS STEEL COMB SET

8 sizes stainless steel metal comb set specially designed for SHERNBAO A5 series blades, or other A5 blades for additional cutting lengths.

For more product information please visit www.shernbao.com.

***Use comb attachments with #10, #15, or #30 blades only.**

FOR BEST RESULTS USE ON UNTANGLED BRUSHED HAIR.

Available Attachment Comb Options

8 PIECE STAINLESS STEEL WIDE COMB SET

8 sizes stainless steel metal comb set specially designed for SHERNBAO AW SERIES WIDE BLADES.

For more product information please visit www.shernbao.com.

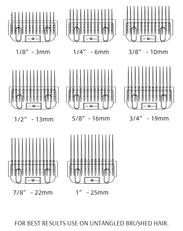

FOR BEST RESULTS USE ON UNTANGLED BRUSHED HAIR.

Safety Information

NOTE:

Whenever using an electrical appliance, it is vital to follow basic safety precautions, including the following:
Read and understand all instructions before using the appliance.

SAFETY:

Neglecting the safety instructions and regulations mentioned in this manual may result in equipment malfunctions or serious personal injury.

1.1 Personal
Only individuals experienced in handling the animals to be clipped should operate the clipper.
Children are not permitted to operate the equipment.
Only reliable personnel are permitted to operate the clipper. Individuals whose reactivity is impacted by drugs, alcohol or pharmaceuticals should not operate the equipment.

1.2 Symbols and Warning Notes
The operating instructions contain various symbols indicating possible hazards or technical information that, if not followed, may result in personal injury, material damage, or uneconomical operations.

HAZARD SYMBOLS:

⚠ WARNING/DANGER!
Avoid a possibly hazardous situation. Not avoiding such situations can result in severe injury and even death.

INFORMATION SYMBOLS:

NOTE! IF NOT FOLLOWED, CAN RESULT IN OPERATIONAL STOPPAGES OR DAMAGE.

1.3 Intended Usage
The equipment is exclusively designed and intended for the specific use described in this manual.
The equipment is intended for use only on dogs, cats, cattle, and horses.
Compliance with all instructions in this manual is part of the intended use.
Any other use of the equipment is not recommended.

The clipper must only be operated with the provided power supply unit.
The clipper is not designed to be use on humans.

1.4 Personal Protective Equipment
Anti-slip sleeve are included to prevent slipping.

1.5 Power Supply

Safety Information

⚠ DANGER!
To reduce the risk of electric shock:
Do not touch the device if it falls into water. Immediately unplug it from the outlet.
Do not use while bathing or showering.
Do not place or store the device where it may fall or be pulled into a tub or sink.
Do not place it in or drop it into water or other liquids.
Always unplug the adapter from the outlet immediately after use, except when charging. Unplug the adapter before cleaning.

⚠ WARNING!
To reduce the risk of burns, fire, electric shock, or injury to persons:
Never leave the clipper unattended when it is plugged in.
This clipper is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the clipper by a person responsible for their safety. Children should be supervised to ensure that they do not play with the equipment.
Use the clipper only for its intended use as described in this manual.
Do not use attachments not specified by the manufacturer.
Never use the clipper if the cable or outlet is damaged or if it does not work properly after falling, sustaining damage or landing in water.
Take the clipper to a service center for inspection and repair.

Keep the cord away from heated surfaces.
Keep the air openings free of lint, hair, and similar objects.
Never drop or insert any object into any opening.
Do not use outdoors or operate while aerosol (spray) products are being used.
Do not use this appliance with a damaged or broken comb, as it has the potential to result in injury.
First, insert the plug into the device before plugging it into the outlet. To disconnect, turn all controls to the off position and then remove the plug from the outlet.

⚠ WARNING! KEEP THE DEVICE DRY.

1.6 Animals
The appliance is intended for trimming purposes only.

Safety Information

⚠ WARNING!
The noise of the clipper might disturb some sensitive animals.
A kick, attack, or weight of the animal can cause serious injuries. Therefore:
Only individuals experienced in handling animals should clip them.
The animal should be fixed and secured sufficiently before clipping.
Work carefully.
Unauthorized individuals are not allowed to approach the clipping area.
Do not charge, install or leave the device in places where it may be exposed to damage from an animal or weather effects.

1.7 Clipping Blades

⚠ WARNING!
Moving blades and sharp edges of the blades can cause injuries to the skin. Therefore:
Work carefully.
Avoid any contact with the moving blades.

1.8 Battery and Charging Station

⚠ WARNING!
Do not crush, heat, incinerate, short circuit or immerse in any liquid or the battery may weld or rupture.
Do not insert metallic objects into the battery cavities of the charging station.
To clean external parts of the charging station, use a soft brush or damp cloth.
Do not use harsh abrasives, detergents, or solvents.
Do not use the power adapter designed for the SHERNBAO A series clipper to attempt to charge any other battery.
The battery contains an overload protection feature. In extreme cases, overload protection may cause the battery to become inoperable.
Do not attempt to power any product other than the SHERNBAO A series clipper with this lithium-ion battery.
For maximum battery life, do not store clipper, charging station under 50°F or over 104°F.
Do not expose the clipper, charging station to excessively damp conditions.
Take care not to drop the clipper, charging station. Do not attempt to use a damaged charging station or clipper.

Safety Information

1.9 Children
⚠ WARNING!
Never leave the clipper unsupervised and use it very carefully when children or individuals who cannot assess the dangers are nearby.
Children are not permitted to operate the equipment.
Children should be supervised to ensure that they do not play with the clipper.

GENERAL

This manual is designed to help you handle the machine safely and efficiently.
Before operating the equipment, carefully read and understand these instructions.
The safe operation of the equipment requires compliance with all safety and operating information in this manual.
Keep this manual at all times. If you hand over the equipment to other individuals, provide them with this manual.

The manufacturer assumes no liability for disadvantages due to:
Non-compliance with the instruction manual.
Operation of the clipper for unintended use.
Use of unauthorized personnel.
Unauthorized modifications.
Use of unauthorized spare parts.
The actual scope of delivery may differ from specially designed models, additional ordering options, or due to the latest state of the art from the annotations and illustrations described here.

This product has been developed and assembled using the best individual components available. It is designed to provide longevity and high performance.

If spare parts are used during the life of this product, please ensure that they are genuine SHERNBAO parts. Failure to use genuine SHERNBAO spares may reduce the performance of this precision-engineered product and will void any warranty claim.