More clipping tips and video demo,
please visit our website.

WWW.SHERNBAO.COM
Ver. 1.0 EN
WUHAN SHERNBAO PET PRODUCTS MANUFACTURING CO., LTD.

Model: PGC-660S

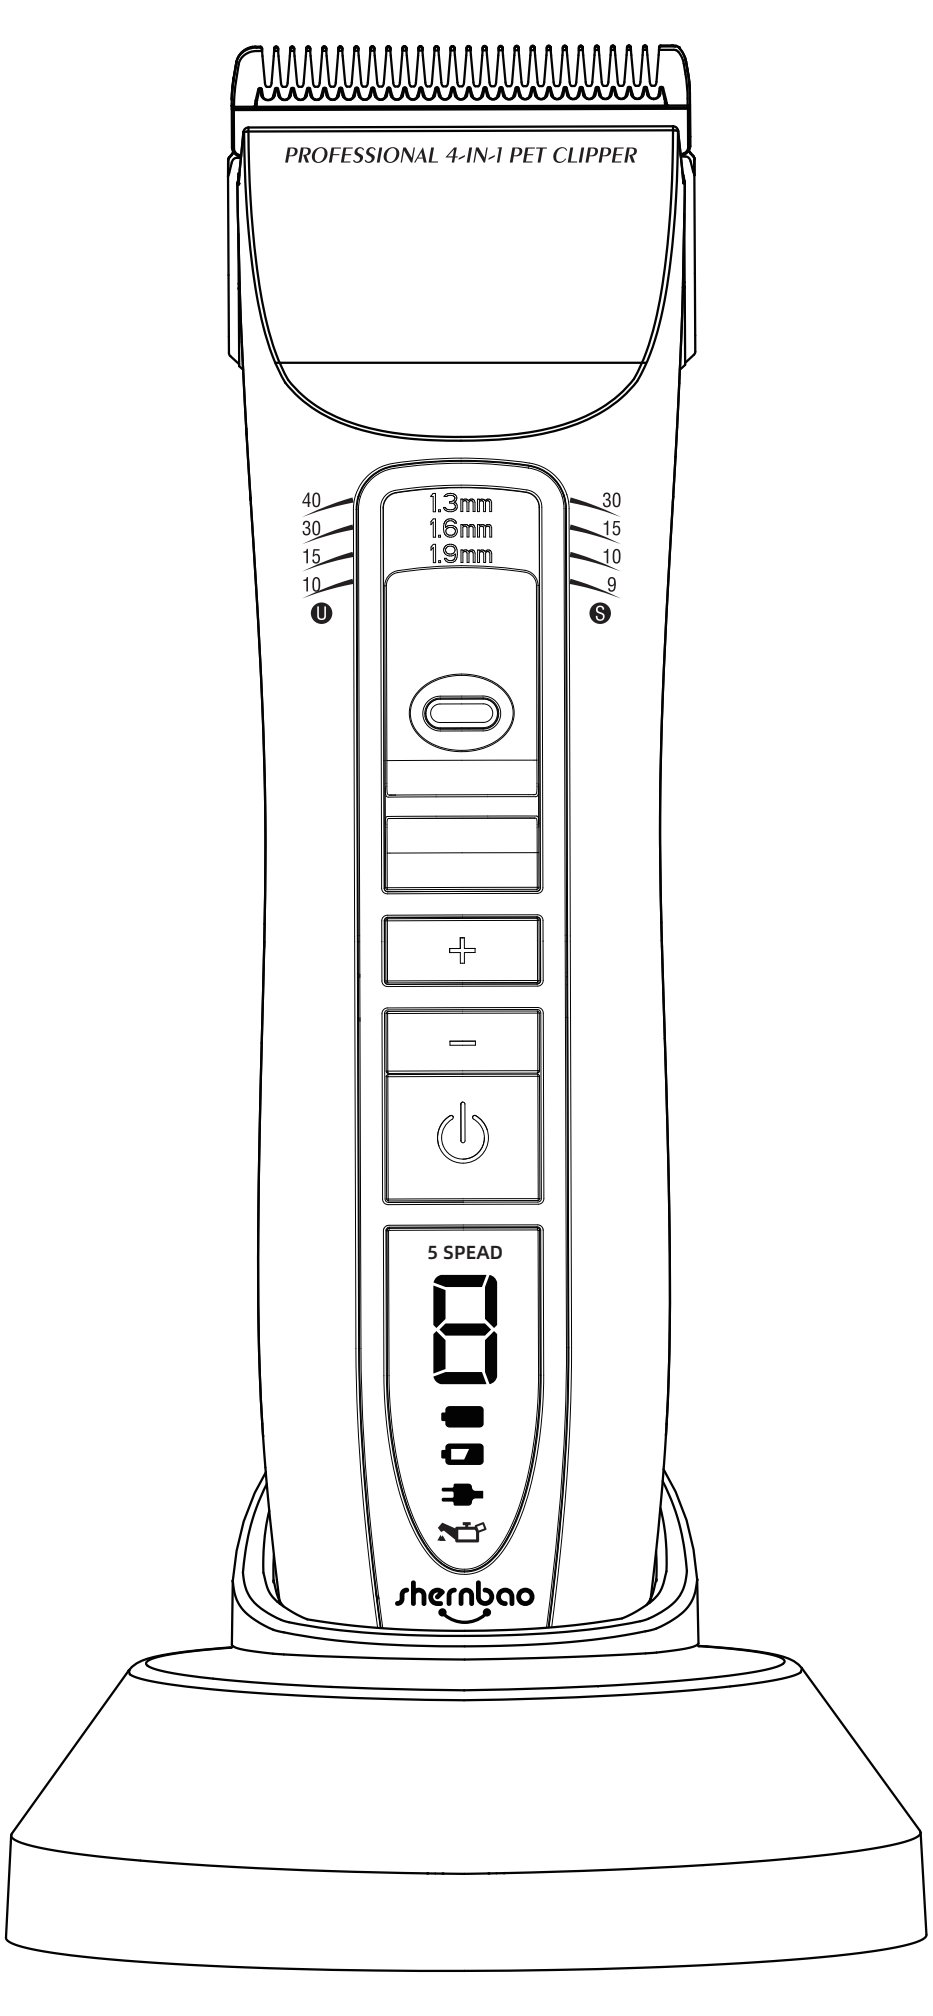

Pet Clipper

Description

PGC-660S is an almighty pet clipper, especially after works with Shernbao 4-in-1 series blade and attachment guide combs.

It can complete the clipping of the whole body and detail trimming of pets, which is suitable for the business use of groomers. It is also suitable for daily use by high-demand home users.

◆ Features:

·Ergonomic design.
·Light weight: 215g (7.6oz).
·Noise as low as 65dB, reduces pets anxiety.
·Cord/cordless universal USB charging use.
·Run 210 minutes after 180 minutes quick charge.
·Precision-machined blades designed for cutting pet hair.
·Made of stainless steel Comb Blade and ceramic Shear Blade.
·Hard and sharp blade, wear-resisting, safty, long lifespan.
·Works with Shernbao 4-in-1 series blade.
·Compatible with Shernbao or other brands ' 5-in-1' attachment guide combs to achieve better grooming results.

Notice

1. Violent bumping or dropping can easily break the ceramic shear blade.
2. Please clean and oil the blade frequently to keep it sharp and less noisy.
3. If you have to groom for long time or groom a few pets, better to take a break to clean and oil the blade instead of continuous use.
4. It will be easier to blunt the blade if groom dirty pets.
5. Replace a new blade if the blade is still blunt after cleaning and oiling.
6. Only use the original parts.

One Year Warranty

1. The clipper is warranted against defects in materials and workmanship for one year from the original date of purchase.
2. Warranty does not cover consumable parts like blades, USB charging cable, lubrication oil, brushes, etc.
3. Warranty does not cover abuse, damage from improper of maintenance, accidents, acts of war, acts of nature, transportation damages, etc.
4. For products beyond the warranty period, the seller may charge a certain maintenance fee.
5. Please ship PREPAID to Shenbao Company or the designated after-sales service supplier.
   Warranty does not cover shipping or transportation costs and any other indirect losses.
6. Due to the continuous upgrading of products, Shernbao reserves the right to variate and modify products without prior notice.
7. For more after-sales service policies and service provider information, please contact us: info@shernbao.com or visit Http://www.shernbao.com

◆ If proof of purchase date cannot be provided, the warranty validates from ex-factory date.

Parts and Functions

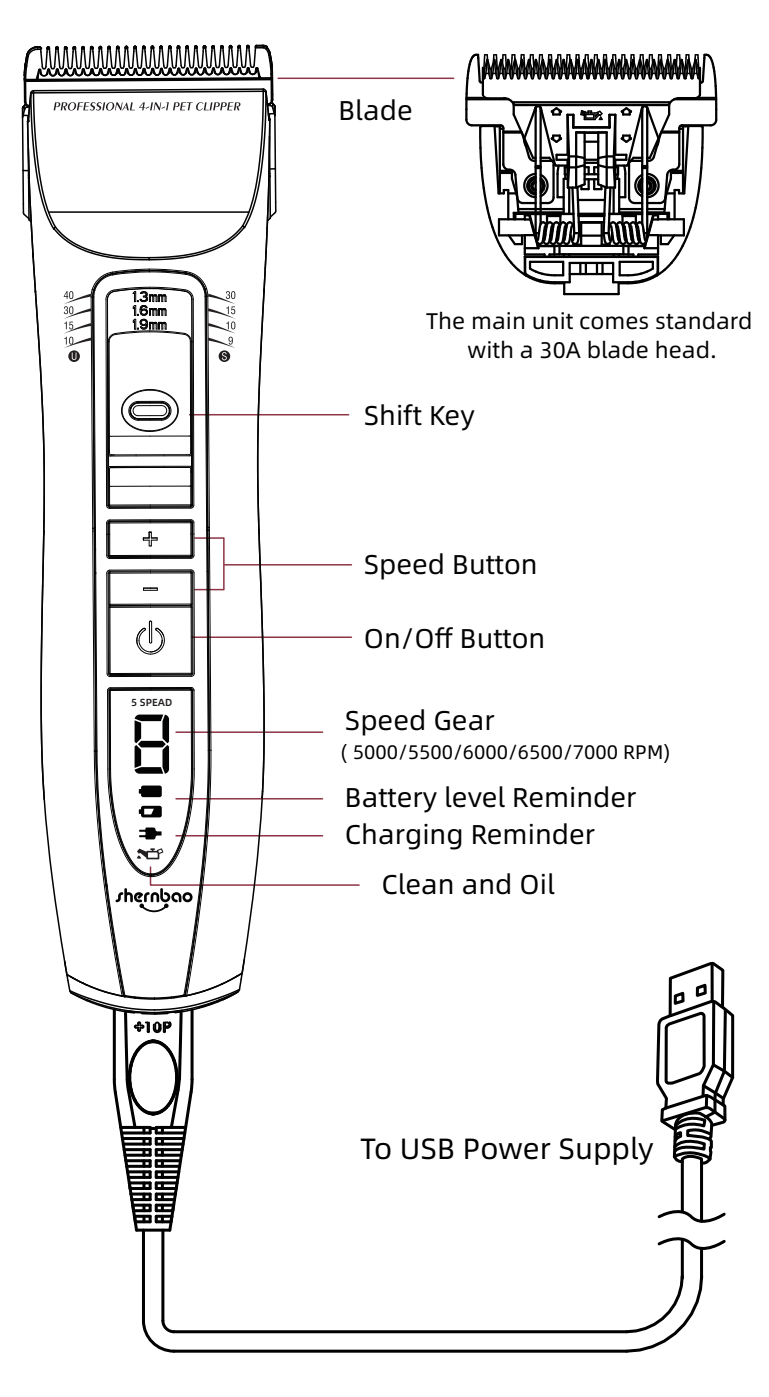

Accesssories

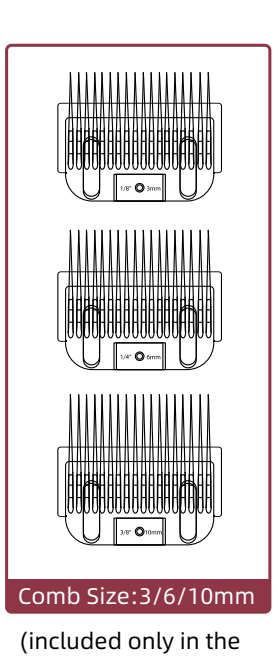
Comb Size:3/6/10mm
(included only in the deluxe edition.)

Cleaning Brush

Lubricating oil bottle

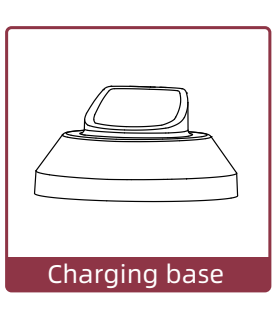
Charging base

Charging Indicator Light Instruction

▮ • ON: Sufficient power, normal operation.

▯ • Flashing: Low power, needs charging.

🔌 • ON: Clipper is charging

Length Adjustment Function

Shift key adjustment method:
Push upward (to reduce hair length); lightly press the red button during adjustment (the gear button will rebound to the initial position), then use your thumb to push it directly to the corresponding length setting.

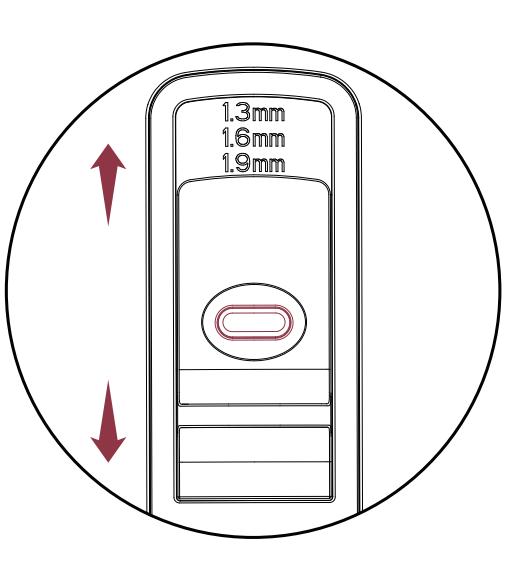

Note: The length adjustment function is only available when work with blade 10A or 30A.

Function and Handling Methods With Combs

The comb is used to trim hair to retain different lengths, each with a comb in the hair-cutting attachmentare designated length, such as (3mm, 6mm, 10mm).

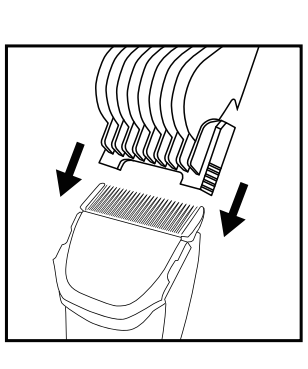
STEP1.
Simply slide the comb on the blade as shown in the above figure.

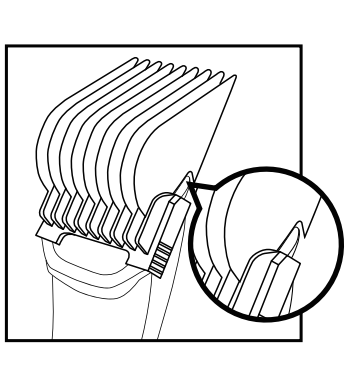
STEP2.
Make sure the point of the blade is touching the inner side of the comb as shown in the above figure

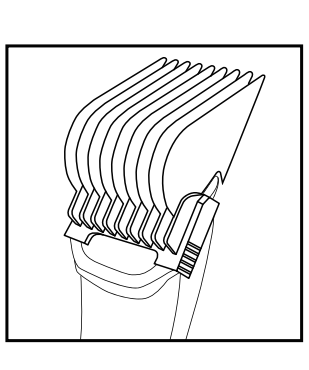
STEP 3.
Installation complete and ready to use.

Go in the Right Direction

1. Trim with the growth of the dog's hair for a smooth, natural looking coat as the direction of the arrows shown.
2. Always clean the residual hair around the comb attachments and the blades.

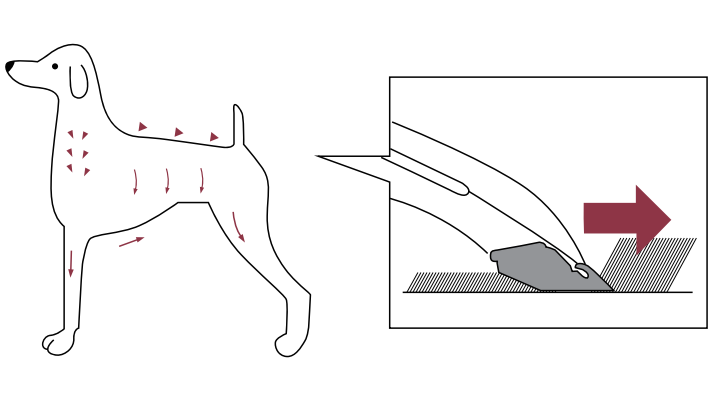

Cleaning and Removal of Head Method

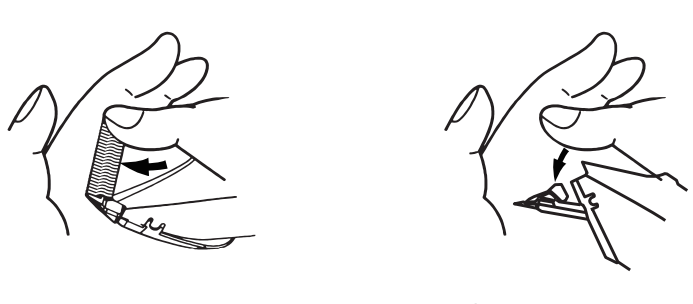

Use your thumb to push the blade of the clipper outwards.

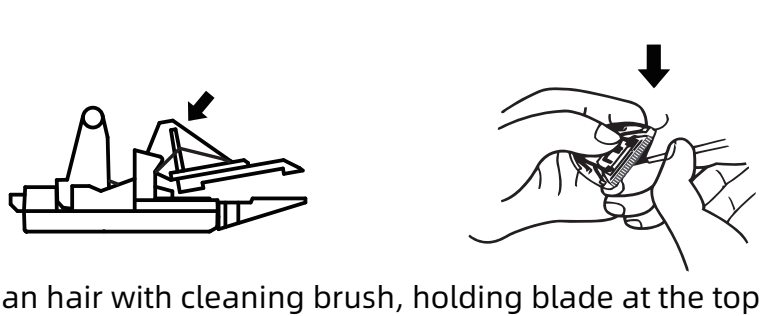

Clean hair with cleaning brush, holding blade at the top left between the upper and lower blade as shown in the picture above.
(Disassembling will cause malfunction. Do not attempt to disassernble.)

After cleaning, use 2-3 drops of lubricating oil on the 5 points shown below.
Tilt clipper head toward the floor to avoid oil seeping into motor.

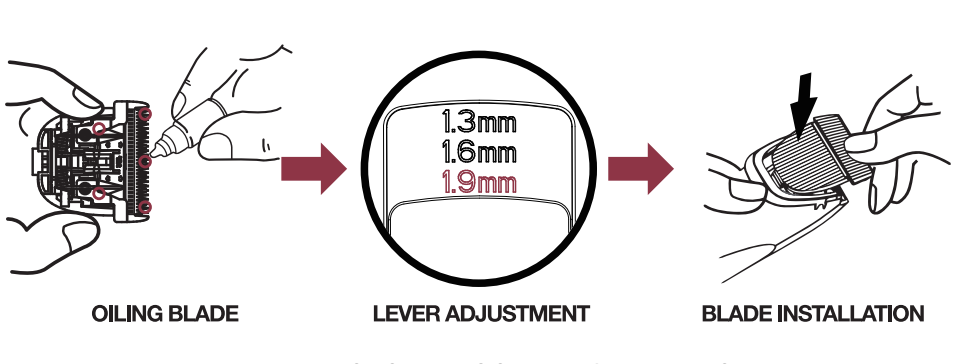

NOTE: Please put 1.9mm tip in position before loading.

Clipping Guide

Take the 10A blade standard on the clipper as an example, the blade lengths can be adjusted by 4 sizes, convenient for whole and partial trimming:

Blade Length	Usage
2.0mm	Suitable for an all-over groom to long-haired breeds, such as cocker spaniel's head and back, Schnauzer's front chest, back and outside of hind legs
1.6mm	Suitable for an all-over groom or partial trimming to all dog breeds, which can get close to the natural coat and not hurt the skin, such as the top of Schnauzer's head, ears, and cocker spaniel's ears.
1.3mm	Suitable for detailing, to trim on pet 's face and ears, sanitary area, feet and paws.
1.0mm	

Note: When using a 10A or 30A blade with short blade length position setting (15/30/40) for partial clipping, the clippers should be run according to the direction of the coat on the dog which can effectively prevent skin allergies. Except for some dog breeds or special parts that can be clipped in the opposite direction.

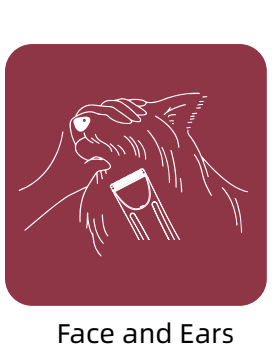
Face and Ears

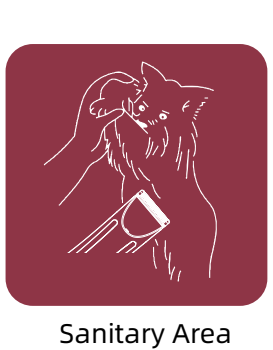
Sanitary Area

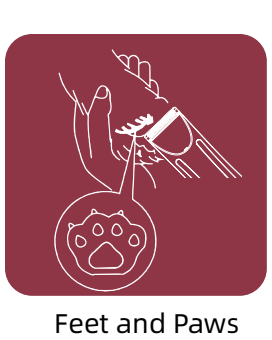
Feet and Paws

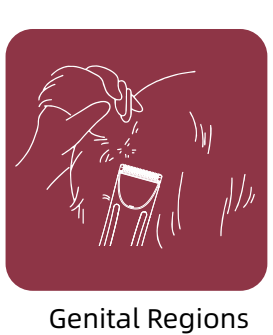
Genital Regions

Initial Inspection

CONDITIONS	INSPECTIONS	SOLUTIONS
Stuck with hair while running	Check if the blade is blunt.	Replace a new blade.
Hot blade	Check if it works continuously too long.	Take a break, cool it down and apply oil.
Loud noise	Check if the blade is lack of lubrication or stuck with too much hair.	Clean the blade and apply oil.
LED indicators do not work and the battery can't be charged	Check your USB power supply output and if the USB charging cable is damaged.	Try another USB power supply or replace a new USB charging cable.
Other malfunctions		Send to Authorized Service Center for service.

Works with Shernbao 4-in-1 series blades

Titanium coating on ceramic shear blade and high carbon steel fixed blade.
These blades are super hard & sharp and offer superior cutting performance.

Thin blades (Adjustable)

10A
1.0mm 1.3mm 1.6mm 2.0mm
(Same as: 15# 10# 9# 8#)
(Item: 6614)

30A
Best for detailing & surgical prep work.
0.3mm 0.6mm 1.0mm 1.5mm
(Same as: 40# 30# 15# 10#)
(Item: 9813)

Thick blades (Not Adjustable)

3F
12mm
(Item: 9960)

4F
9mm
(Item: 9844)

5F
6mm
(Item: 9837)

6F
4.5mm
(Item: 0094)

7F
3mm
(Item: 9820)

Works with Shernbao ACK-002 attachment combs

8 sizes stainless steel combs specially designed for PGC-660S clipper for additional cutting lengths.

Stainless Steel Attachment Guide Combs Kit (Item #: 6645)

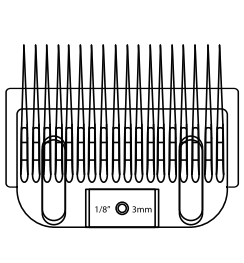
1/8" - 3mm

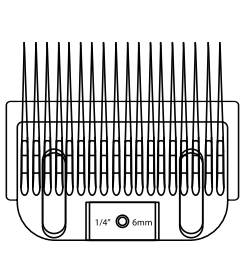
1/4" - 6mm

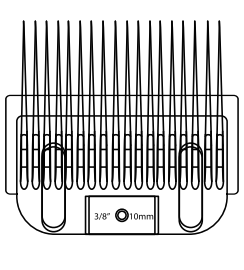
3/8" - 10mm

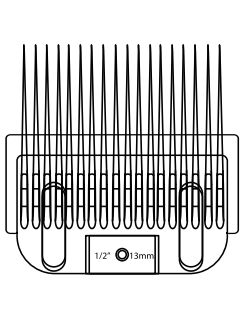
1/2" - 13mm

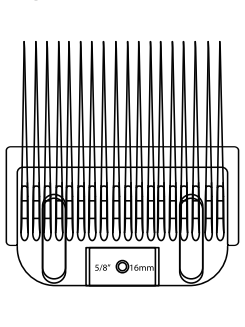
5/8" - 16mm

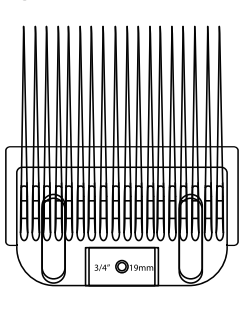
3/4" - 19mm

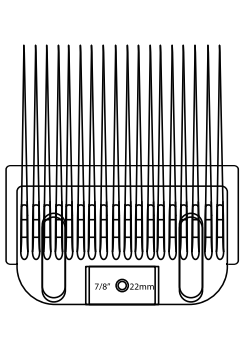
7/8" - 22mm

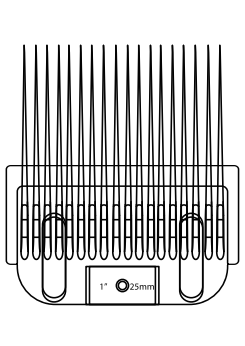
1" - 25mm

*** These combs are only available when work with blade 10A or 30A.**
*** For best results use on untangled brushed hair.**

Safety Information

IMPORTANT SAFETY INFORMATION

When using an electrical appliance, basic precautions should always be followed, including the following:
Read all instructions before using your SHERNBAO product.

DANGER: To reduce the risk of electric shock

1. Avoid placing or storing clipper near water or other liquids.
2. Do not use if clipper, plug, or charging base has been immersed in water or other liquid.
3. Unplug immediately if clipper falls into water or another emergency occurs.
4. Unplug cord from outlet and clipper except when charging.
5. Turn clipper off and unplug cord from outlet before cleaning or changing parts. The appliance must only be supplied at SELV.

WARNING: To reduce the risk of fire, electric shock, or personal injury

1. Clipper should never be left unattended when plugged in.
2. Supervision is necessary when used by, on, or near children or individuals with certain disabilities.
3. Use this clipper only for its intended use. Do not use attachments not recommended by SHERNBAO.
4. Do not use this trimmer if cord or plug is damaged, if it is not working properly, if it has been dropped, or immersed in any liquid, return to SHERNBAO for repair.
5. Do not use an extension cord with this trimmer.
6. Keep the cord away from heated surfaces.
7. Detach the hand-held part from the supply cord before cleaning it in water.
8. The product is intended for animal grooming purpose only.
9. For indoor use only. Do not use around aerosol products or where flammable gases, such as oxygen, are in use.
10. To avoid injury: never use this clipper with a damaged or broken blade or comb.
11. To disconnect: turn control to OFF then remove plug from outlet.
12. Use only the charging base supplied by SHERNBAO to recharge.
13. The blade is structural part, do not disassemble the blade spring by yourself.
14. Store the trimmer at -10℃-40℃ (14°F - 104°F), otherwise may damage the battery.
15. The batteries of this product is non-replaceable. Remove battery before disposing of product, dispose of battery properly and safely.
16. KEEP OUT OF REACH OF CHILDREN!
    Children under 3 years old or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, can only use this product under supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Warranty Card

Purchase Date: _

Point of Sale Phone: _

Sales Point Address: _

* The blade is not covered by the warranty. If the blade becomes dull and cannot be used, please purchase the original blade to replace.

产品描述

PGC-660S是一款全能型宠物电推剪，特别是在配套使用神宝4-in-1系列不同尺寸的刀头后，可以很好的完成对宠物的全身及细部的修剪造型，适用于美容师营业使用，也适用于高要求的家庭用户日常使用。

◆ 产品特点：

·人体工程学设计。
·重量轻：215g（7.6盎司）。
·低至65dB的噪音，减轻宠物的焦虑感。
·通用USB充电，充电/带线两用。
·充电约180分钟，可运行约210分钟。
·特别为修剪宠物毛发而精密加工的刀头，由不锈钢定刀片和陶瓷动刀片制成，坚硬锋利，耐磨，安全，寿命长。
·可适用于神宝4-in-1系列刀头，或配合神宝不锈钢"5-in-1"刀头限位梳使用，这两种方式都能帮您为宠物修剪时，精准的控制宠物毛发的留毛长度，达到更理想的宠物美容效果。

主机机构名称

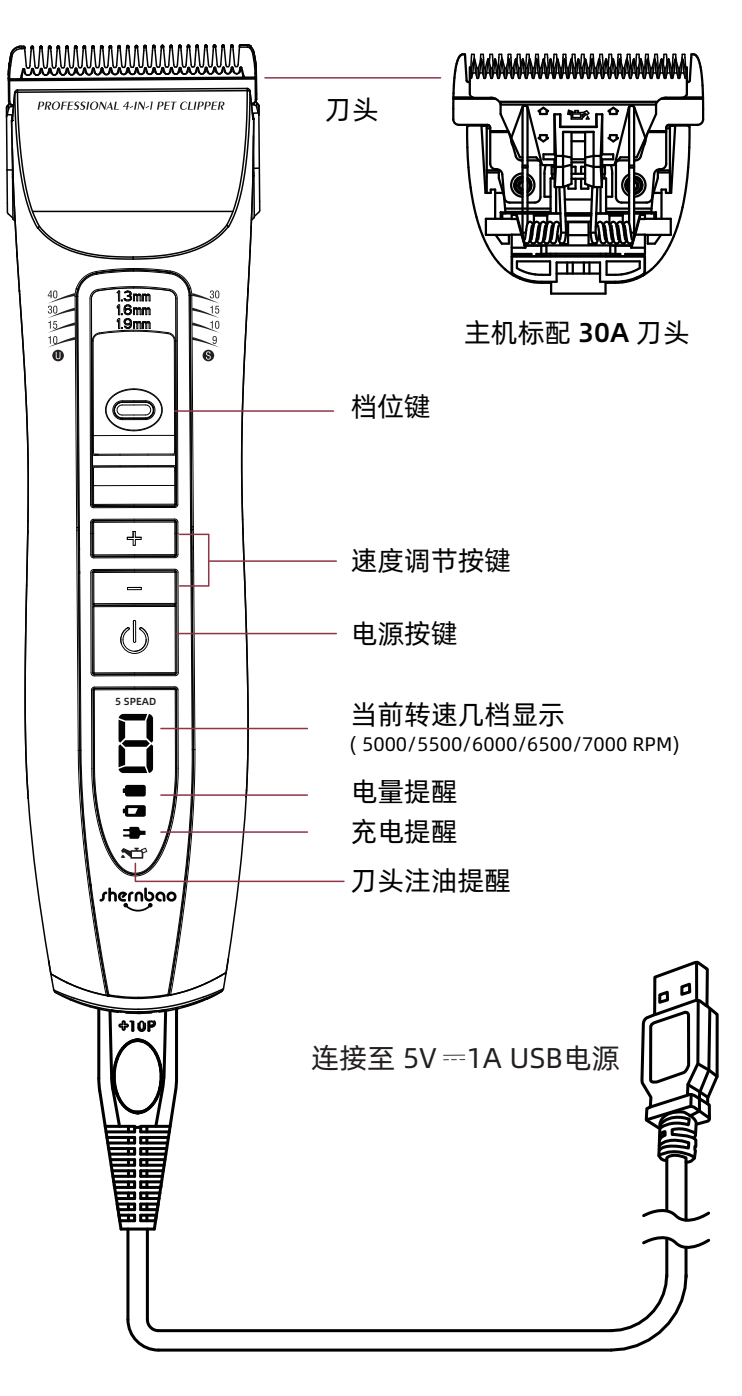

附属配件

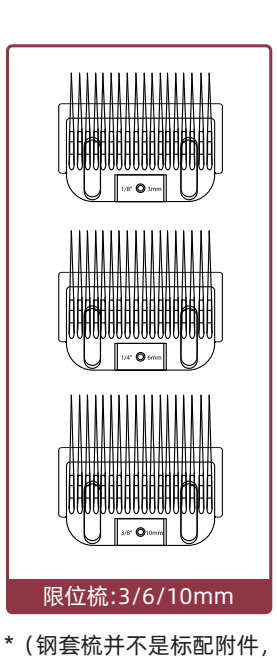
限位梳:3/6/10mm
*（钢套梳并不是标配附件，仅限豪华版）

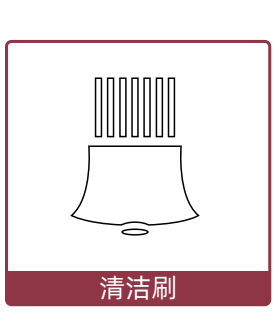
清洁刷

润滑油

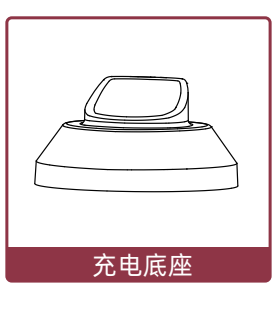
充电底座

充电指示灯说明

▮ •图标常亮，表示电量充足，可正常工作。

▯ •图标闪烁，表示电量不足，需要充电。

🔌 •图标常亮，表示正在充电。

长度调节功能

往上方向推动（留毛长度更短）；调节时轻按红色按钮（档位键回弹至初始位置）；然后可再用拇指直推到相应长度位置。

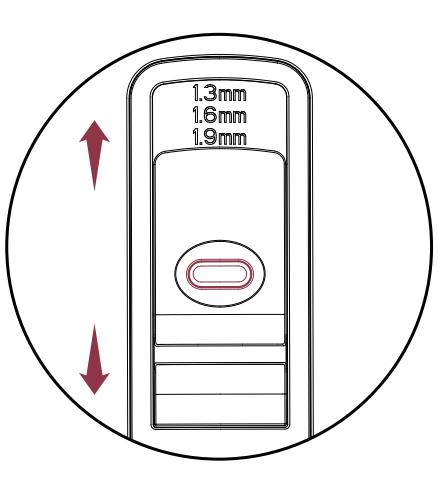

注：长度调节功能仅在使用10A或30A可调节刀头时，才能使用调节功能。

使用限位梳时修剪的方向

1. 按图示箭头方向顺着毛发生长的方向反复修剪。
2. 经常清理限位梳周围及与刀头之间的残留毛发。

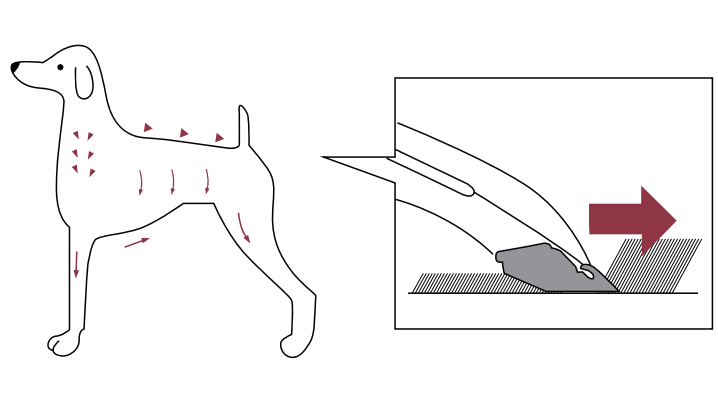

清洁及拆卸刀头方法

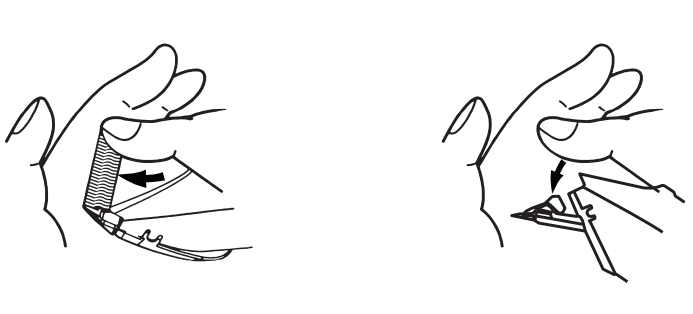

如图所示，用右手大拇指向后推动刀头，左手保护以免刀头跌落并损坏。

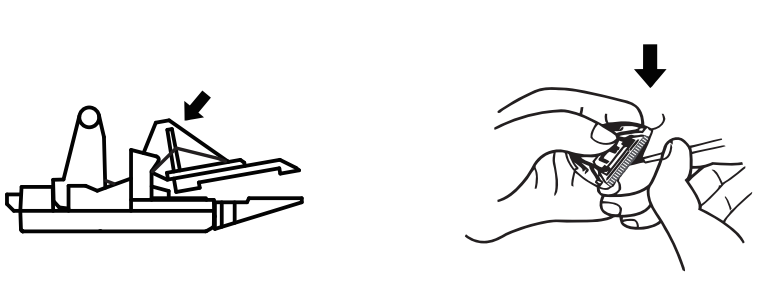

如图所示用清洁刷清洁刀头，按住动刀片顶部机构，清洁上下刀片之间残留的毛发。
（请不要分解刀头弹簧，可能会引起故障。）

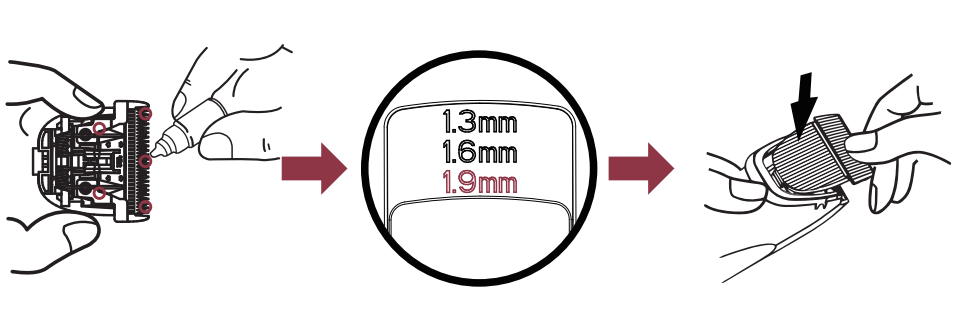

清洁完后如图所示在刀头5个位置注入1-2滴润滑油，然后重新装入刀头。
（对准槽位在装入时必须听到"咔哒"声才能确定完全装上。）

注意：装入刀头之前请先把调节按钮调到1.9mm位置。

修剪指南

以标配刀头10A为例，调节剪毛长度有四档尺寸变换，方便的用于全身和局部修剪：

留毛长度	修剪功能举例
2.0mm	长毛犬的轮廓修剪，如可卡的头部和背部、雪纳瑞的前胸、 背部和后腿外侧等
1.6mm	各犬种的全身修剪或局部修剪，可接近自然毛色且不易伤及皮肤， 如雪纳瑞的头顶、耳朵和可卡的耳朵等
1.3mm	各犬种的脚底、下腹、肛门及贵宾犬造型使用 (脸部、脖颈、脚面、尾根等)
1.0mm	

注意：当使用1.0mm或超薄刀头做局部修剪时，因修剪后留毛很短，除某些犬种或特殊部位可逆着毛发生长的方向修剪外，大多数情况下，建议顺着毛发生长的方向紧贴皮肤修剪，可有效防止皮肤过敏现象产生。

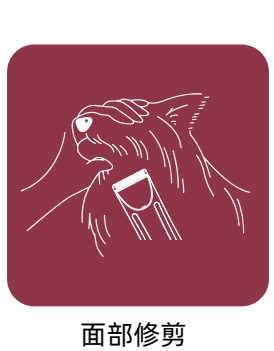
面部修剪

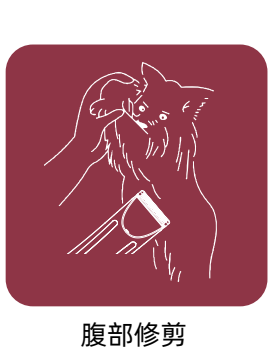
腹部修剪

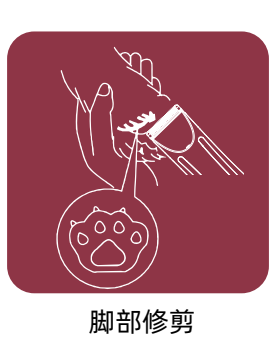
脚部修剪

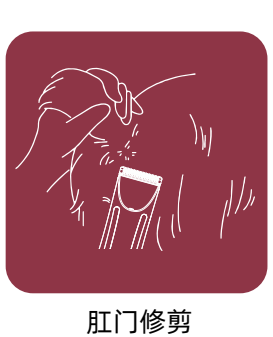
肛门修剪

简易故障排除

状 况	检查部位	处理方法
使用时夹毛、卡毛	刀片锋利度是否已磨耗	更换新刀头
刀片发烫	是否单次连续工作时间太长	暂停使用，冷却并加润滑油
噪音明显偏大	刀头是否夹杂很多毛发或干涩	清洁毛发碎屑，加润滑油
充电指示灯不亮 电池未被充电	USB供电端是否正常 USB充电线是否断裂	尝试其它USB供电端 更换新的USB充电线
仍有其它故障		请送修

PGC-660S可适用神宝4-in-1系列刀头

神宝4-in-1系列刀头，配备镀钛陶瓷动刀片，高碳钢定刀片，锋利、耐磨、耐用，为您带来更加舒适便捷高效率的使用体验。

可调节系列刀头

10A
1.0mm 1.3mm 1.6mm 2.0mm
(对应型号: 15# 10# 9# 8#)
(Item: 6614)

30A
可用于局部修剪或术前毛发剃光使用
0.3mm 0.6mm 1.0mm 1.5mm
(对应型号: 40# 30# 15# 10#)
(Item: 9813)

加厚刀头系列 (不可调节留毛长度)

3F
12mm
(Item: 9960)

4F
9mm
(Item: 9844)

5F
6mm
(Item: 9837)

6F
4.5mm
(Item: 0094)

7F
3mm
(Item: 9820)

限位梳安装方式

每个限位梳有不同的长度，在使用电剪为宠物修剪毛发时，不同部位使用不同尺寸的限位梳，可以达到更好的修剪效果。

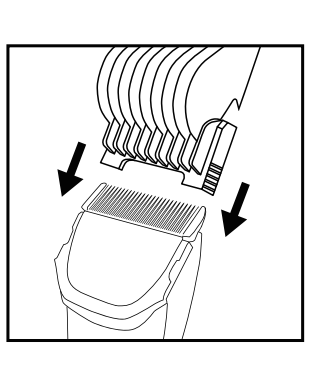
1.
如图所示，将限位梳卡槽对准刀头刀齿部分，向下滑动至底部。

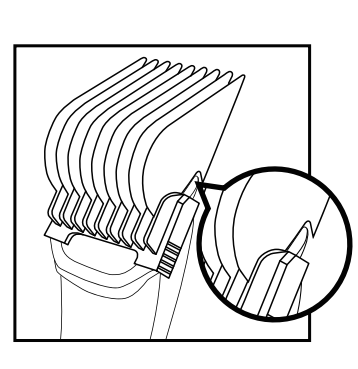
2.
确保安装的限位梳刀齿部分，与刀头刀齿紧贴，即安装到位。

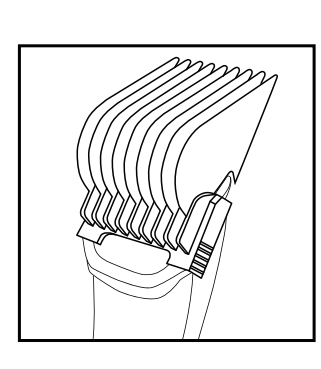
3.
确保安装到位后，即可使用。

PGC-660S电剪可搭配神宝 ACK-002 钢套梳使用

8种不同尺寸钢套梳，搭配神宝PGC-660S电推剪，可满足宠物美容的所有工作需求，效率更高，效果更好。

神宝ACK-002钢套梳 (Item #: 6645)

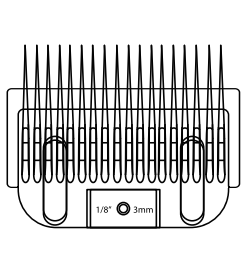
1/8" - 3mm

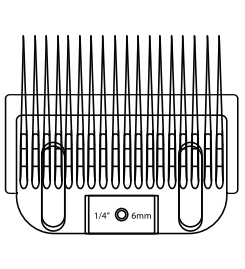
1/4" - 6mm

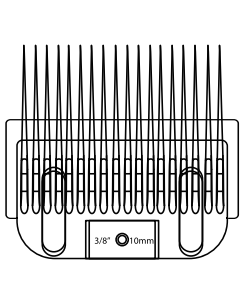
3/8" - 10mm

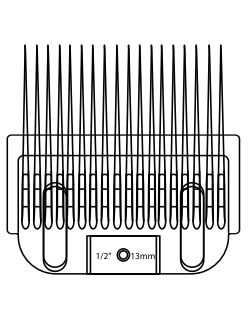
1/2" - 13mm

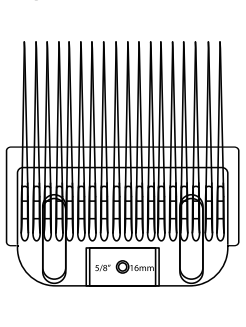
5/8" - 16mm

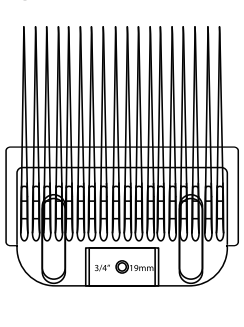
3/4" - 19mm

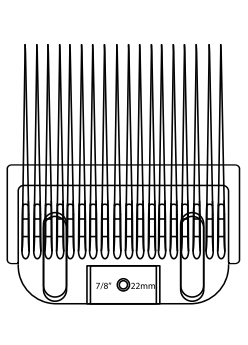
7/8" - 22mm

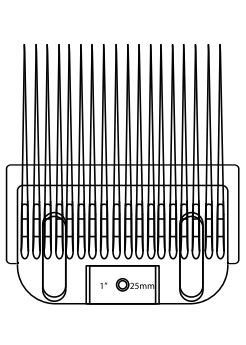
1" - 25mm

* 钢套梳仅在使用10A或30A刀头时可使用。
* 使用前，请将宠物毛发梳理顺畅后使用，效果更佳。

刀头的使用寿命

- ◆ 为确保刀头的锋利度及维持低噪音，请务必经常清洁及润滑。
- ◆ 若保养得当，且每次都是修剪洁净顺滑的毛发，以每次都做完整的全身修剪计，全新刀头约可使用30次。
- ◆ 刀片变钝，即使清洁和润滑也不能变锋利时，表示刀头使用寿命已尽，请更换新刀头。

注意：刀头属于易磨损消耗品，不在保修范围之内，如出现变钝造成无法顺畅修剪，请及时购买并更换新刀头。请认准原厂配件！

特别注意事项

1. 剧烈的磕碰或跌落都容易造成陶瓷动刀片的破碎；
2. 为确保刀头的锋利度及维持低噪音，请务必经常清洁及润滑；
3. 一次剃较长时间或要剃几只宠物，也要注意适时关机清理刀片和加油后再继续使用；
4. 如果修剪比较脏的宠物，极有可能导致刀头迅速变钝；
5. 刀片变钝，即使清洁和润滑也不能恢复锋利时，表示刀头使用寿命已尽，请更换新刀头；
6. 请认准原厂配件。

安全注意事项

1. 请不要用本产品去修剪其他物品，仅用于修剪人类及宠物毛发；
2. 如在使用过程中不小心将电推剪掉入水中或者碰到化学药品，请立即拔掉充电线，关机并清理干净主机；
3. 请使用原厂USB充电线，如发现USB充电线有破损请不要继续使用，并请及时更换原装配件；
4. 主机内配置充电电池，此电池不能被扭曲、拆解或者戳破，否则可能导致线路短路烧坏机器。请不要设法自行拆解本机，如需修理请到指定服务点维修；
5. 本产品刀头可能伤到小孩，小孩也有可能吞咽小的配件，请将本产品保存时置于远离小孩能接触到的位置；
6. 刀头配件属于结构件，所以请勿自行拆解刀头弹簧；
7. 不要长时间将本机置于 -10℃ 以下或 40℃ 以上的温度环境下保存，否则可能损伤电池。

保修条例

1. 在正常使用、保养状态下，主机保修一年；
2. 消耗性产品或零件如刀头、USB充电线、润滑油、毛刷等不在保修之列；
3. 在保修期内，若有下列状况之一，恕不免费修理：
   ① 未按使用说明书要求使用、维护、保养而造成故障或损坏的；
   （如跌落、浸水、自行拆装等人为损坏等）。
   ② 因自然灾害等不可抗力因素、购买后运输、保管不当等所造成之损坏；
4. 本保修卡为重要保修凭证，请勿遗失，恕不补发，请妥为保存；
5. 对于无保修卡或超过保修期的产品，本公司实行合理的收费修理；
6. 需修理（含保修）时请将产品直接送至神宝公司或指定售后服务点，本公司及销售商不承担任何因送修产生的交通及运输费用，也不承担任何其它间接损失；
7. 由于产品的不断跟新换代，本公司保留在没有事先通知的情况下，对产品进行变动、修改的权利。

保修登记

购买日期：
客户姓名：
联系电话：

销售单位印章

如未填写购买日期或无指定经销商印章，保修期以出厂日期为起始日！

No. 81 Fengyi Road, Lanjiang Street, Yuyao City,Ningbo City, Zhejiang Province
浙江省宁波余姚市兰江街道凤仪路81号
☎ 400-658-8428