Technical data of the fast counter

The fast counter of the module does not work if the module is connected to a

– *FBP interface module*
– *CS31 bus module*
– *CANopen communication interface module*

Parameter	Value
Used inputs	I24 / I25
Used outputs	None
Counting frequency	Max. 50 kHz


Ordering data

Part no.	Description	Product life cycle phase *)
1SAP 240 000 R0001	DI524, digital input module, 32 DI, 24 V DC, 1-wire	Active
1SAP 440 000 R0001	DI524-XC, digital input module, 32 DI, 24 V DC, 1-wire, XC version	Active

**) Modules in lifecycle Classic are available from stock but not recommended for planning and commissioning of new installations.*

1.6.1.2.5 DO524 - Digital output module

- 32 digital outputs 24 V DC / 0.5 A in 4 groups (1.0...4.7) with short circuit and overload protection
- Module-wise galvanically isolated
- XC version for use in extreme ambient conditions available

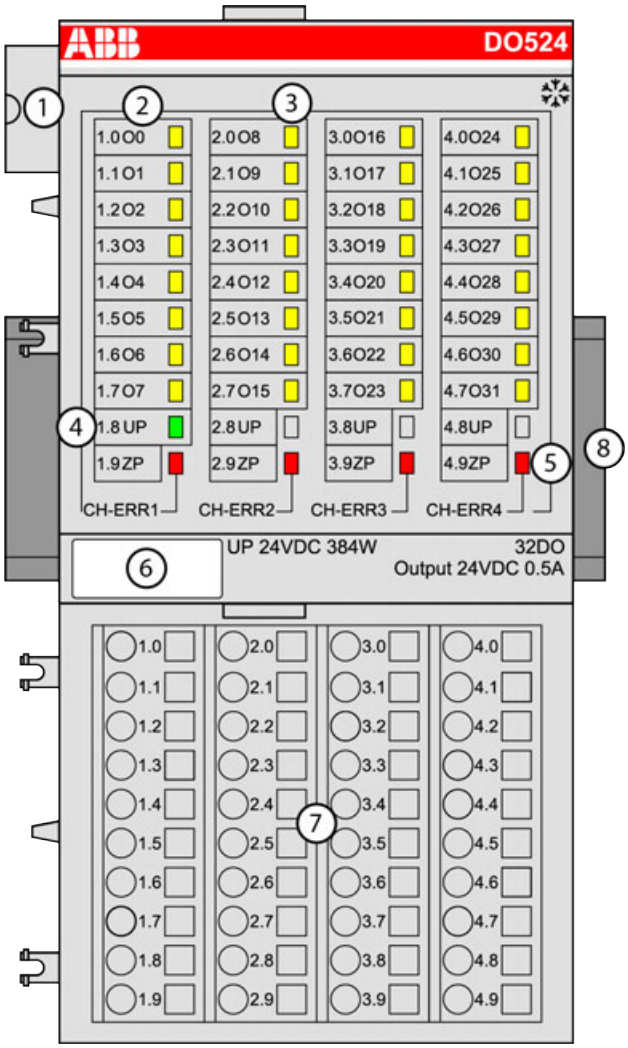

1 I/O bus
2 Allocation between terminal number and signal name
3 32 yellow LEDs to display the signal states at the digital outputs (O0 - O31)
4 1 green LED to display the state of the process supply voltage UP
5 4 red LEDs to display errors
6 Label
7 Terminal unit
8 DIN rail
Sign for XC version

Intended purpose

The device can be used as a decentralized I/O extension module for S500 communication iInterface modules (e. g. CI592-CS31, CI501-PNIO, CI541-DP, CI581-CN) or as a centralized extension module for AC500 CPUs.

The outputs are galvanically isolated from all other circuitry of the module. There is no potential separation between the channels.

Functionality

Parameter	Value
LED displays	For signal states, errors and supply voltage
Internal power supply	Via the I/O bus interface (I/O bus)
External power supply	Via the terminals ZP and UP (process voltage 24 V DC)
Required terminal unit	TU515 or TU516 ↬ *Chapter 1.5.2 “TU515, TU516, TU541 and TU542 for I/O modules” on page 126*

The device is plugged on a terminal unit ↬ *Chapter 1.5.2 “TU515, TU516, TU541 and TU542 for I/O modules” on page 126*. Position the module properly and press until it locks in place. The terminal unit is either mounted on a DIN rail or to the wall using 2 screws plus the additional accessory for wall mounting (TA526 ↬ *Chapter 1.8.2.6 “TA526 - Wall mounting accessory” on page 902*).



Multiple overloads

No effects of multiple overloads on isolated multi-channel modules occur, as every channel is protected individually by an internal smart high-side switch.

Connections



For a detailed description of the mounting, disassembly and connection of the module, please refer to the System Assembly, Construction and Connection chapter ↬ *Chapter 2.6 “AC500 (Standard)” on page 971.*

The connection of the I/O channels is carried out using the 40 terminals of the I/O terminal unit. I/O modules can be replaced without re-wiring the terminal units.

The terminals 1.8 to 4.8 and 1.9 to 4.9 are electrically interconnected within the I/O terminal unit and have always the same assignment, independent of the inserted module:

Terminals 1.8 to 4.8: process voltage UP = +24 V DC

Terminals 1.9 to 4.9: process voltage ZP = 0 V DC

The assignment of the other terminals:

Terminals	Signal	Description
1.0 to 1.7	O0 to O7	8 digital outputs
2.0 to 2.7	O8 to O15	8 digital outputs
3.0 to 3.7	O16 to O23	8 digital outputs
4.0 to 4.7	O24 to O31	8 digital outputs

The internal power supply voltage for the module's circuitry is carried out via the I/O bus (provided by a communication interface module or a CPU). Thus, the current consumption from 24 V DC power supply at the terminals L+/UP and M/ZP of the CPU/communication interface module increases by 2 mA per DO524.

The external power supply connection is carried out via the UP (+24 V DC) and the ZP (0 V DC) terminals.

WARNING!

Removal/Insertion under power

Removal or insertion under power is only permissible under conditions described in Hot Swap chapter *Chapter 1.6 “I/O modules” on page 142*.

The devices are not designed for removal or insertion under power when Hot Swap conditions do not apply. Because of unforeseeable consequences, it is not allowed to plug or unplug devices with the power being ON.

Make sure that all voltage sources (supply and process voltage) are switched off before you

– connect or disconnect any signal or terminal block
– remove, mount or replace a module.

Disconnecting any powered devices while energized in a hazardous location could result in an electric arc, which could create a flammable ignition resulting in fire or explosion.

Make sure that power is removed and that the area has been thoroughly checked to ensure that flammable materials are not present prior to proceeding.

The devices must not be opened when in operation. The same applies to the network interfaces.


NOTICE!

Risk of damaging the PLC modules!

Overvoltages and short circuits might damage the PLC modules.

– Make sure that all voltage sources (supply voltage and process supply voltage) are switched off before you begin with operations on the system.
– Never connect any voltages or signals to reserved terminals (marked with ---). Reserved terminals may carry internal voltages.

The following block diagram shows the internal construction of the digital outputs:

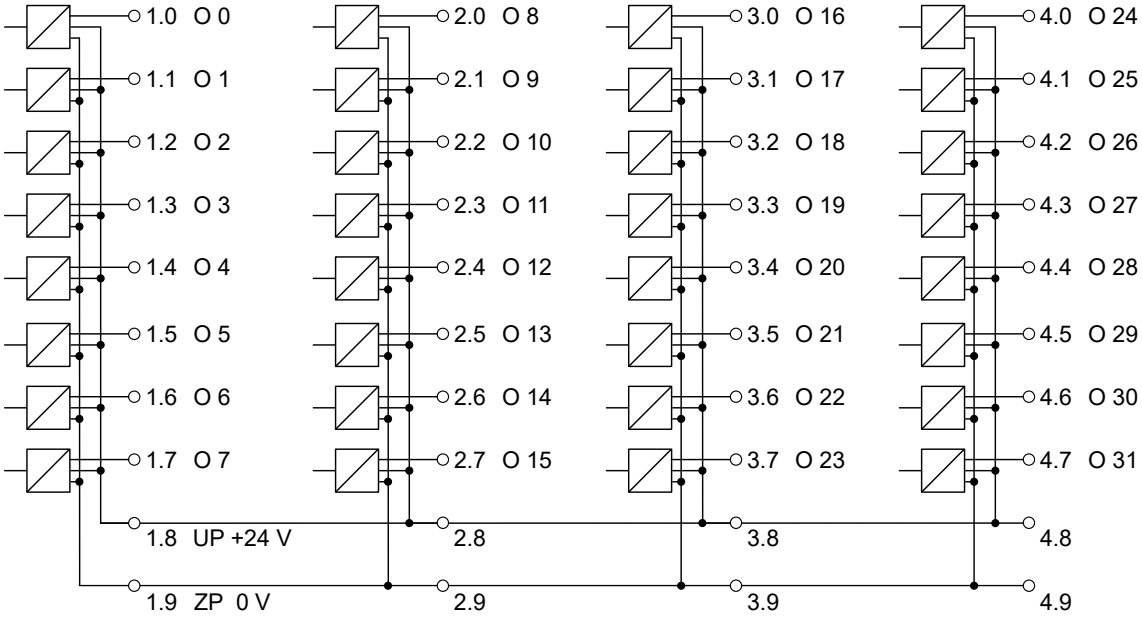

The module provides several diagnosis functions .

Internal data exchange

Digital inputs (bytes)	0
Digital outputs (bytes)	4

I/O configuration

The module itself does not store configuration data. It receives its parameterization data from the master device of the I/O bus (CPU or communication interface module) during power-up of the system.

Hence, replacing I/O modules is possible without any re-parameterization via software.



If the external power supply voltage via UP/ZP terminals fails, the I/O module loses its configuration data. The whole station has to be switched off and on again to re-configure the module.

Parameterization

Firmware version	Configuration
Firmware version > V2.0.0	The arrangement of the parameter data is performed by Control Builder Plus/ Automation Builder software.

The parameter data directly influences the functionality of modules.

For non-standard applications, it is necessary to adapt the parameters to your system configuration.

Module: Module slot address: Y = 1...10

Name	Value	Internal value	Internal value, type	Default	Min.	Max.	Max.
Module ID	Internal	1101 [1])	WORD	1101 0x044D	0	65535	0x0Y01
Ignore module [2])	No Yes	0 1	BYTE	No 0x00			not for FBP
Parameter length	Internal	7	BYTE	7-CPU 7-FBP	0	255	0x0Y02
Check supply	Off on	0 1	BYTE	On 0x01	0	1	0x0Y03
Output short circuit detection	Off On	0 1	BYTE	On 0x01	0	1	0x0Y04

Name	Value	Internal value	Internal value, type	Default	Min.	Max.	Max.
Behaviour of outputs at communication errors	Off Last value Substitute value	0 1+(n*5) 2+(n*5), n ≤ 2	BYTE	Off 0x00	0	2	0x0Y05
Substitute value at outputs Bit 31 = Output 31 Bit 0 = Output 0	0... 4294967295	0... 0xffffffff	DWORD	0 0x00000000	0	4294967295	0x0Y06

[1]) With CS31 and addresses smaller than 70 and FBP, the value is increased by 1


[2]) Not with FBP

GSD file:

Ext_User_Prm_Data_Len =	10
Ext_User_Prm_Data_Const(0) =	0x04, 0x4d, 0x07, \ 0x01, 0x01, 0x00, 0x00, 0x00, 0x00, 0x00;

State LEDs

During the power ON procedure, the module initializes automatically. All LEDs (except the channel LEDs) are ON during this time.

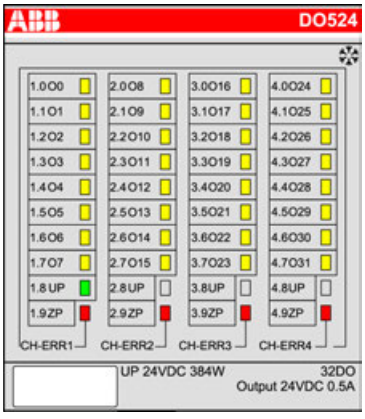LED		State	Color	LED = OFF	LED = ON	LED flashes
	Outputs O0...O31	Digital output	Yellow	Output = OFF	Output = ON	--
	UP	Process supply voltage 24 V DC via terminal	Green	Process supply voltage is missing	Process supply voltage OK	--
	CH-ERR1	Channel error, error messages in groups (digital outputs combined into the groups 1, 2, 3, 4)	Red	No error or process supply voltage is missing	Severe error within the corresponding group	Error on one channel of the corresponding group (e.g. short circuit at an output)
	CH-ERR2		Red			
	CH-ERR3		Red			
	CH-ERR4		Red			
	CH-ERR *)	Module error	Red	--	Internal error	--
	*) All of the LEDs CH-ERR1 to CH-ERR4 light up together					

Technical data

The system data of AC500 and S500 *Chapter 2.6.1 “System data AC500” on page 971* are applicable to the standard version.

The system data of AC500-XC *Chapter 2.7.1 “System data AC500-XC” on page 1023* are applicable to the XC version.

Only additional details are therefore documented below.

The technical data are also applicable to the XC version.

Parameter		Value
Process supply voltage UP		
	Connections	Terminals 1.8, 2.8, 3.8 and 4.8 for +24 V (UP) as well as 1.9, 2.9, 3.9 and 4.9 for 0 V (ZP)
	Rated value	24 V DC
	Max. ripple	5 %
	Protection against reversed voltage	Yes
	Rated protection fuse on UP	10 A fast
	Galvanic isolation	Yes, per module
Current consumption		
	From 24 V DC power supply at the terminals UP/L+ and ZP/M of the CPU/communication interface module	Ca. 2 mA
	From UP at normal operation / with outputs	0.10 A + max. 0.5 A per output
	Inrush current from UP (at power up)	0.005 A^2s
Max. power dissipation within the module		6 W (outputs unloaded)
Weight (without terminal unit)		Ca. 100 g
Mounting position		Horizontal Or vertical with derating (output load reduced to 50 % at 40 °C per group)
Cooling		The natural convection cooling must not be hindered by cable ducts or other parts in the switchgear cabinet.

NOTICE!

Attention:

All I/O channels (digital and analog) are protected against reverse polarity, reverse supply, short circuit and continuous overvoltage up to 30 V DC.


Multiple overloads

No effects of multiple overloads on isolated multi-channel modules occur, as every channel is protected individually by an internal smart high-side switch.

Technical data of the digital outputs

Parameter		Value
Number of channels per module		32 outputs (with transistors)
Distribution of the channels into groups		1 group of 32 channels
Connection of the channels		
	O0 to O7	Terminals 1.0 to 1.7
	O8 to O15	Terminals 2.0 to 2.7
	O16 to O23	Terminals 3.0 to 3.7
	O24 to O31	Terminals 4.0 to 4.7
Indication of the output signals		1 yellow LED per channel, the LED is ON if the output signal is high (signal 1)
Reference potential for all outputs		Terminals 1.9, 2.9, 3.9 and 4.9 (negative pole of the process supply voltage, signal name ZP)
Common power supply voltage		For all outputs: terminals 1.8, 2.8, 3.8 and 4.8 (positive pole of the process supply voltage, signal name UP)
Output voltage for signal 1		UP (-0.8 V)
Output delay (0 -> 1 or 1 -> 0)		On request
Output current		
	Rated value, per channel	500 mA at UP = 24 V
	Maximum value (channels O0 to O15)	4 A
	Maximum value (channels O16 to O31)	4 A
	Maximum value (all channels together)	8 A
Max. leakage current with signal 0		< 0.5 mA
Rated protection fuse on UP		10 A fast
Demagnetization when inductive loads are switched off		With varistors integrated in the module (see figure below)
Switching frequency		
	With resistive load	On request
	With inductive loads	Max. 0.5 Hz
	With lamp loads	Max. 11 Hz with max. 5 W
Short-circuit proof / overload proof		Yes
Overload message (I > 0.7 A)		Yes, after ca. 100 ms
Output current limitation		Yes, automatic reactivation after short-circuit/overload
Resistance to feedback against 24 V signals		Yes
Max. cable length		
	Shielded	1000 m
	Unshielded	600 m

The following drawing shows the circuitry of a digital output with the varistors for demagnetization when inductive loads are switched off.

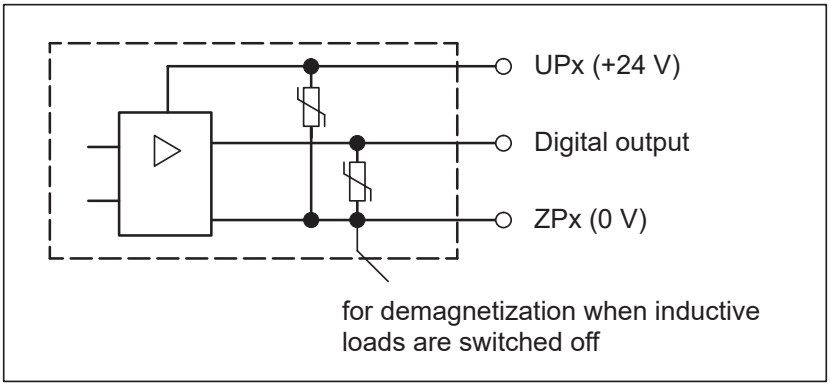

Ordering data

Part no.	Description	Product life cycle phase *)
1SAP 240 700 R0001	DO524, digital output module, 32 DO, 24 V DC / 0.5 A, 1-wire	Active
1SAP 440 700 R0001	DO524-XC, digital output module, 32 DO, 24 V DC / 0.5 A, 1-wire, XC version	Active

**) Modules in lifecycle Classic are available from stock but not recommended for planning and commissioning of new installations.*

1.6.1.2.6 DO526 - Digital output module

- 8 digital outputs 24 V DC (O0 to O7) in 2 groups without short circuit and without overload protection.
- Module and group-wise galvanically isolated
- XC version for use in extreme ambient conditions available

NOTICE!
Improper voltage level or frequency range which cause damage of AC inputs:
– AC voltage above 264 V
– Frenquency below 47 Hz or above 62.4 Hz

NOTICE!
Improper connection leads cause overtemperature on terminals.
PLC modules may be destroyed by using wrong cable type, wire size and cable temperature classification.

Parameter		Value
Temperature		
	Operating	0 °C...+60 °C: Horizontal mounting of modules. 0 °C...+40 °C: Vertical mounting of modules. Output load reduced to 50 % per group.
	Storage	-40 °C...+70 °C
	Transport	-40 °C...+70 °C
Humidity		Max. 95 %, without condensation
Air pressure		
	Operating	> 800 hPa / < 2000 m
	Storage	> 660 hPa / < 3500 m
Ingress protection		IP20

2.6.1.2 Creepage distances and clearances

The creepage distances and clearances meet the requirements of the overvoltage category II, pollution degree 2.

2.6.1.3 Insulation test voltages, routine test

According to EN 61131-2

Parameter	Value	
230 V circuits against other circuitry	2500 V	1.2/50 µs
120 V circuits against other circuitry	1500 V	1.2/50 µs
120 V...240 V circuits against other circuitry	2500 V	1.2/50 µs
24 V circuits (supply, 24 V inputs/outputs, analog inputs/outputs), if they are galvanically isolated against other circuitry	500 V	1.2/50 µs

Table 200: Immunity against the influence of radiated (CW radiated), according to IEC 61000-4-3, zone B, criterion A

Parameter	Value
Test field strength	10 V/m

Table 201: Immunity against fast transient interference voltages (burst), according to IEC 61000-4-4, zone B, criterion B

Parameter	Value
Supply voltage units (DC)	2 kV
Supply voltage units (AC)	2 kV
Digital inputs/outputs (24 V DC)	1 kV
Digital inputs/outputs (120 V AC...240 V AC)	2 kV
Analog inputs/outputs	1 kV
CS31 bus	1 kV
Serial RS-485 interfaces (COM)	1 kV
Serial RS-232 interfaces (COM, not for PM55x and PM56x)	1 kV
Ethernet	1 kV
I/O supply (DC-out)	1 kV

Table 202: Immunity against the influence of line-conducted interferences (CW conducted), according to IEC 61000-4-6, zone B, criterion A

Parameter		Value
Test voltage		3V zone B, 10 V is also met.
High energy surges		According to IEC 61000-4-5, zone B, criterion B
	Power supply DC	1 kV CM / 0.5 kV DM [2])
	DC I/O supply	0.5 kV CM / 0.5 kV DM [2])
	Communication Lines, shielded	1 kV CM [2])
	AC I/O unshielded [3])	2 kV CM / 1 kV DM [2])
	I/O analog, I/O DC unshielded [3])	1 kV CM / 0.5 kV DM [2])
Radiation (radio disturbance)		According to IEC 55011, group 1, class A

[2]) CM = Common Mode, DM = Differential Mode

[3]) When DC I/O inputs are used with AC voltage, external filters limiting high energy surges to 1 kV CM / 0.5 DM are required to meet requirements according IEC 61131-2.

2.6.1.6 Mechanical data

Parameter	Value
Mounting	Horizontal
Degree of protection	IP 20
Housing	Classification V-2 according to UL 94

Parameter	Value
Vibration resistance acc. to EN 61131-2	all three axes 2 Hz...8.4 Hz, continuous 3.5 mm 8.4 Hz...150 Hz, continuous 1 g (higher values on request)
Shock test	All three axes 15 g, 11 ms, half-sinusoidal
Mounting of the modules:	
DIN rail according to DIN EN 50022	35 mm, depth 7.5 mm or 15 mm
Mounting with screws	Screws with a diameter of 4 mm
Fastening torque	1.2 Nm

2.6.1.7 Approvals and certifications

Information on approvals and certificates can be found in the corresponding chapter of the *Main catalog, PLC Automation*.

2.6.2 Mechanical dimensions

2.6.2.1 Switchgear cabinet assembly



Information on EMC-conforming assembly and construction is provided within the overall functions section ↳ Chapter 2.4.4 “EMC-conforming assembly and construction” on page 918.

PLC enclosure



NOTICE!

PLC damage due to wrong enclosures

Due to their construction (degree of protection IP 20 according to EN 60529) and their connection technology, the devices are suitable only for operation in enclosed switchgear cabinets.

To protect PLCs against:

- unauthorized access,
- dusting and pollution,
- moisture and wetness and
- mechanical damage,

switchgear cabinet IP54 for common dry factory floor environment is suitable.

Maintain spacing from:

- enclosure walls
- wireways
- adjacent equipment

Allow a minimum of 20 mm clearance on all sides. This provides ventilation and galvanic isolation.

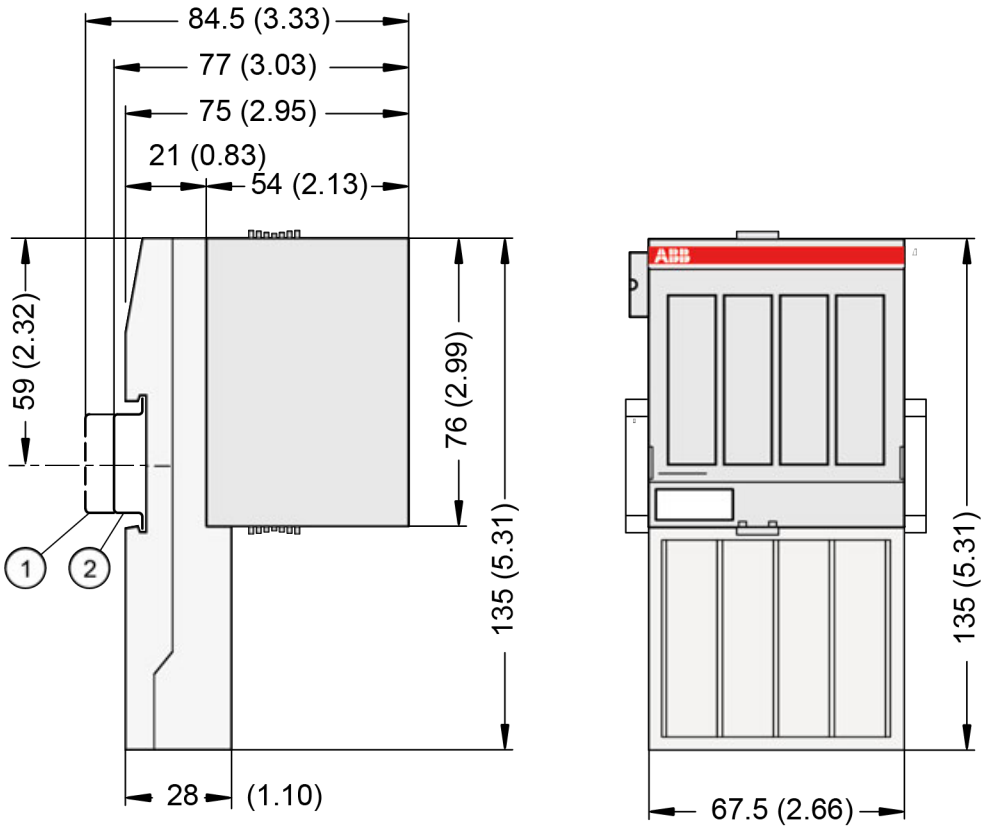


Fig. 185: Terminal units and S500 modules, side view and front view

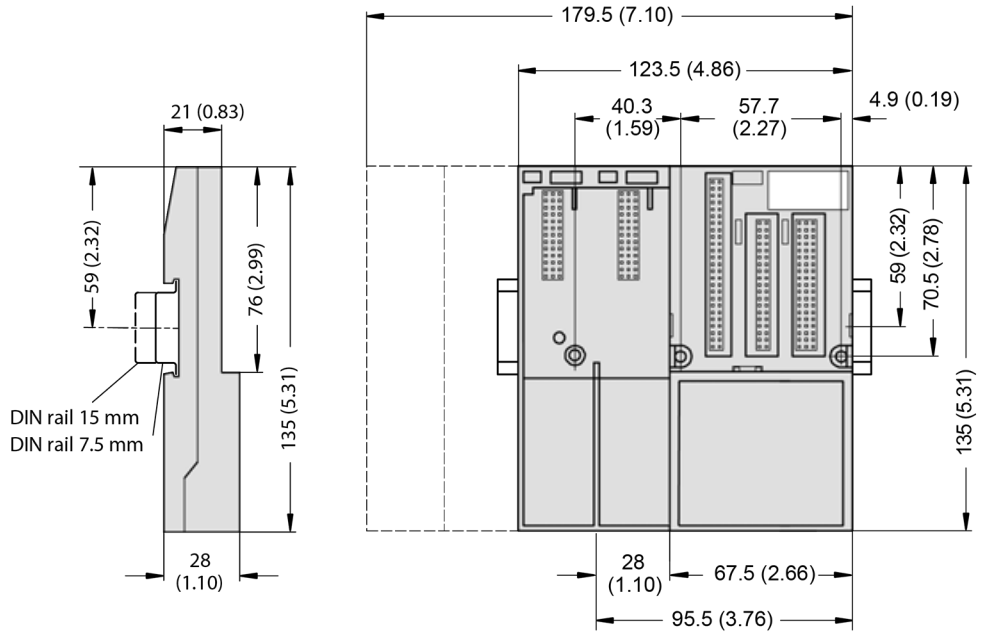


Fig. 186: Terminal base (for comparison)

All dimensions are in mm (in.). Hole spacing tolerance: ±0.4 mm (0.016 in.)