




# Hydraulic Grooming Table User Manual

**FT-804 / FT-804L**




# Schematic diagram of accessories


**1** Non-slip Table Top \*1

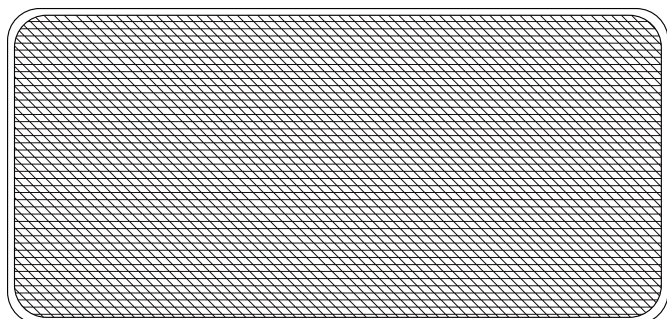


**2** Grooming Table Frame \*1

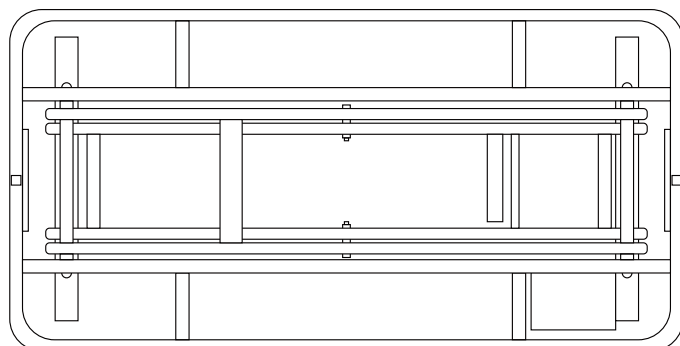

**3** Over-head Grooming Arm Set \*1

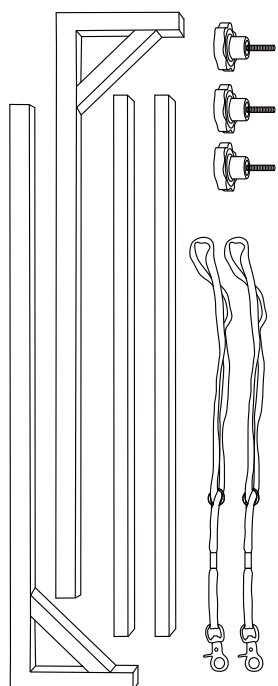

**4** M10\*25 Handle screw \*2




**6** Hydraulic pump \*1



**7** Hydraulic pump decorative shell \*1



**5** Adjustable feet \*4

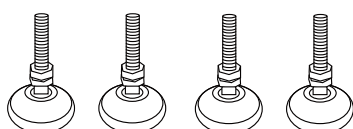

**8** Treadle bar \*1




FT- 804 / 804L

# Accessories


| List | Model No.              | Spare Parts Name                | QTY |
|------|------------------------|---------------------------------|-----|
| 1    | FT-804 -01/FT-804L -01 | Non-slip Table Top              | 1   |
| 2    | FT-804 -02             | Grooming Table Frame            | 1   |
| 3    | FT-001                 | Over-head Grooming Arm Set      | 1   |
| 4    | FT-012                 | M10*25 Handle screw             | 2   |
| 5    | BTS-T005               | Adjustable feet                 | 4   |
| 6    | FT-021                 | Hydraulic pump                  | 1   |
| 7    | FT-022                 | Hydraulic pump decorative shell | 1   |
| 8    | FT-023                 | Treadle bar                     | 1   |

**The following accessories need to be installed by oneself**


3

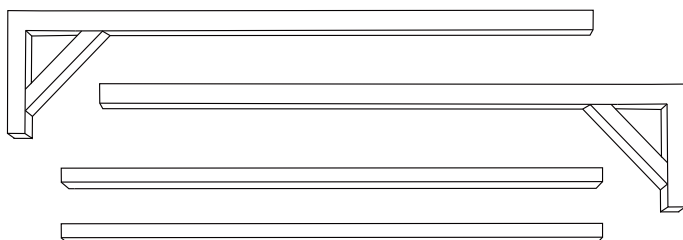

Grooming arm

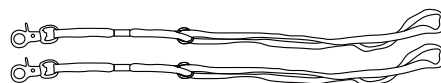


Snap-in Nylon Neck Harness \*2




M8\*16 Handle screw \*3

4



M10\*25 Handle screw \*3

5

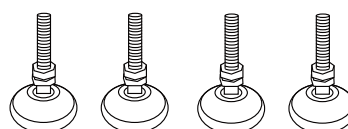

Adjustable feet \*4


After receiving the product, please first check if the packaging is severely damaged. Open the packaging and check if the accessories are complete. If there are any quality issues with the product.

**FT- 804 / 804L**


# Installation instructions

## Over-head Grooming Arm Set Installation As Below:


- ① Loosen the screws counterclockwise. According to the width of the table, push the arm outward to the appropriate position, and then lock up the top handle screw.

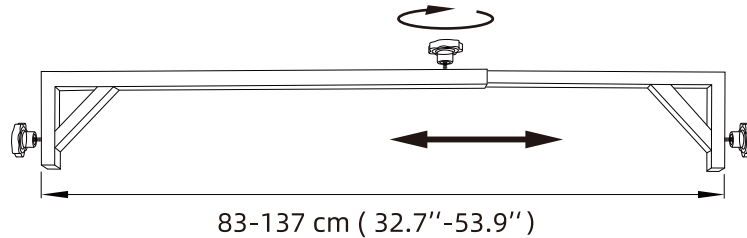

- ② Loosen the screws on both sides of the grooming arm counterclockwise. Insert the arm into the suspension arm separately, and keep the height on both sides consistent, and then lock up the handle screws on both sides.

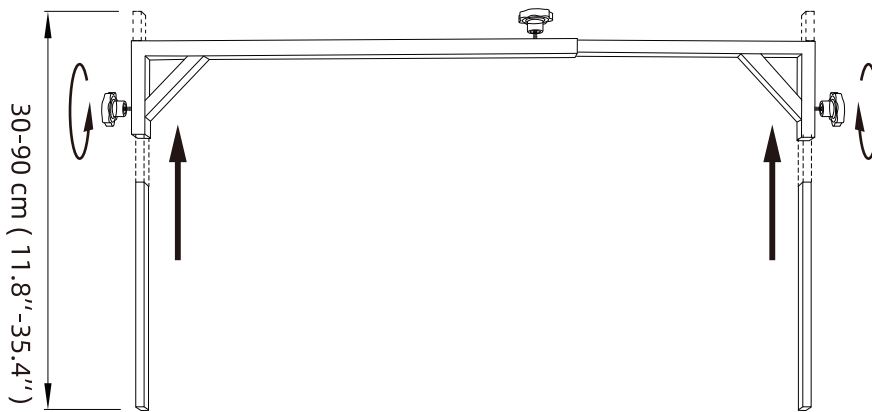


- ③ Use the over-head grooming arm set insert into the two side hole on the table, Leave a length of 4-6cm. Use M10\*25 handle screws to fix the two side grooming arms.

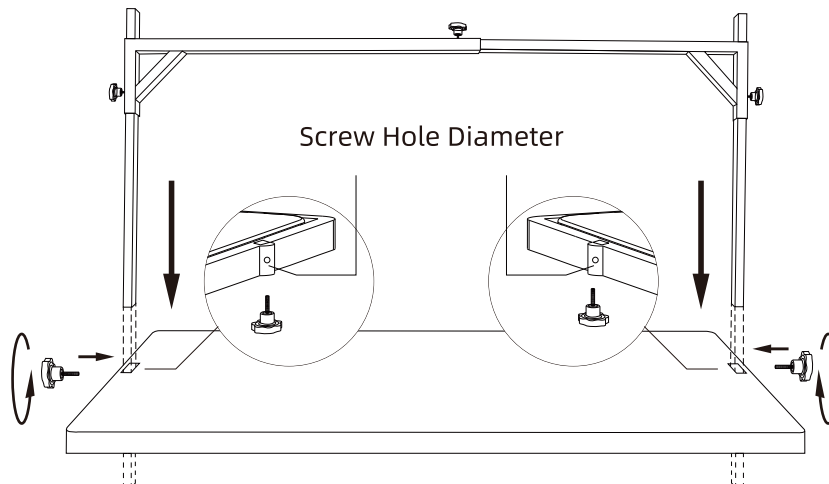

# Installation instructions



- ④ Snap-in Nylon Neck Harness, can be locked to the hole above the grooming arm, used to control the pets during the grooming process.

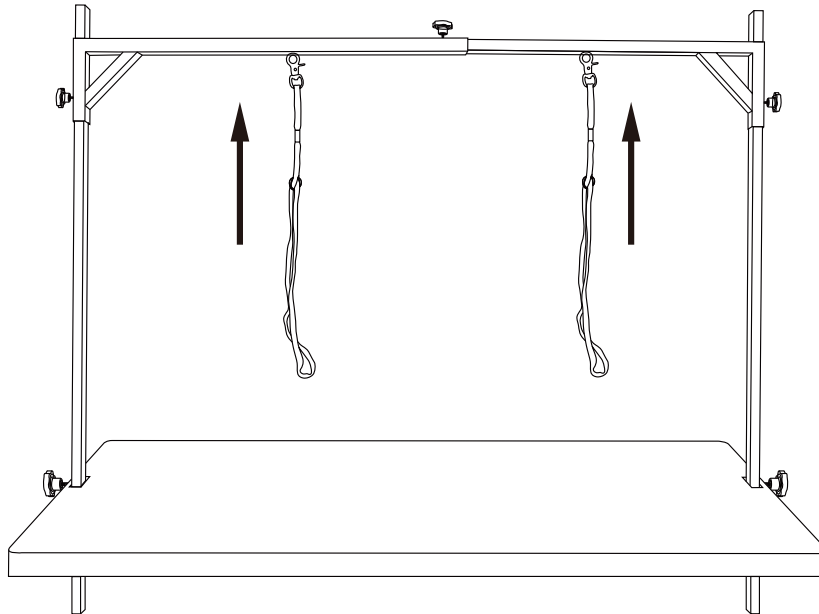

## Dual functional grooming arm installation as below :


( Note: Suppose the accessory you ordered is a Dual function grooming arm. )

- ① Put the table clamp into the center position of table top, and lock the bottom handle screw clockwise.
- ② Turn the handle screw counterclockwise to lift the single arm to the right position. Then, tighten the screw clockwise.

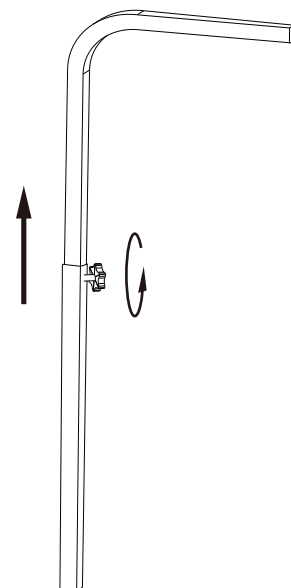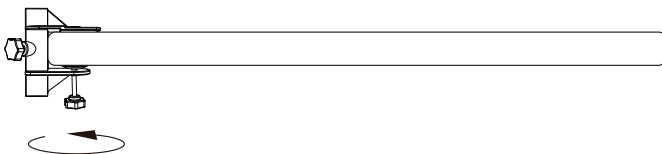


# Installation instructions

- ③ Insert the assembled single arm downward against the hole of table clamp, reserve 4~6cm length, and lock the screw of clamp clockwise.

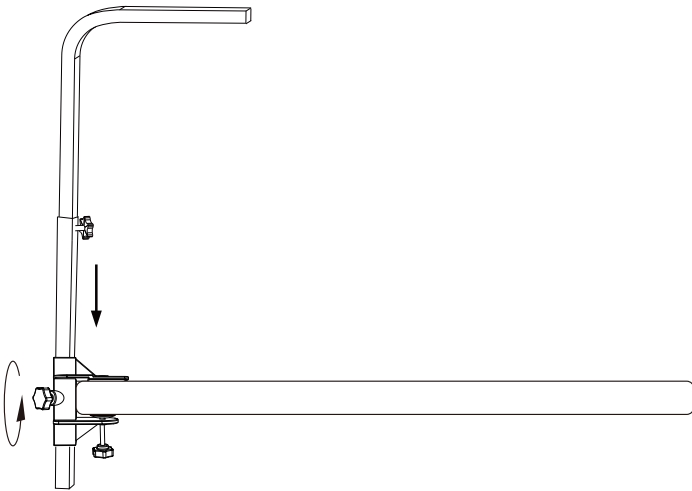


- ⑤ The nylon rope can be locked to the hole above the single arm, which is used to hold pets during grooming.

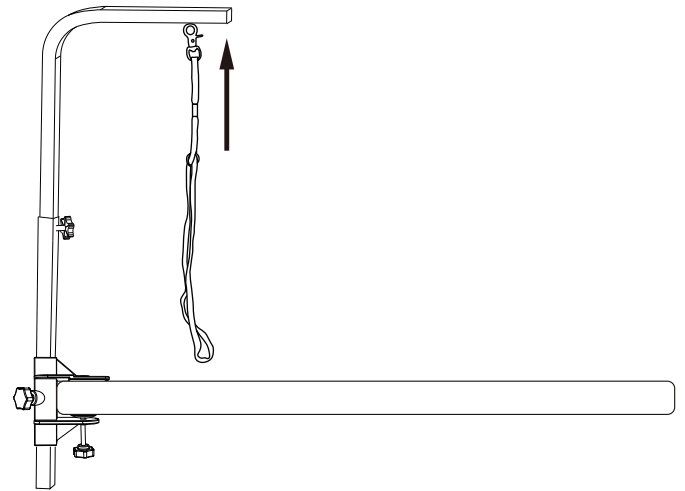


## **Adjustable Feet Installation Method As Follows:**


Install the adjustable feet in the proper position of the base and lock them tightly

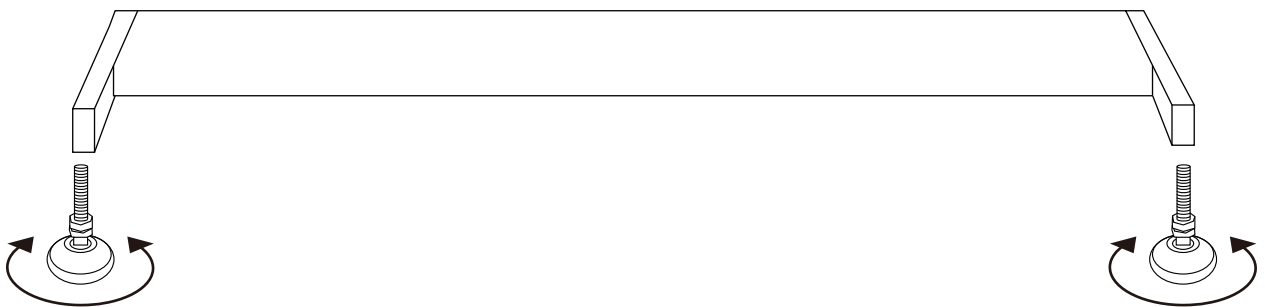

# Parameter

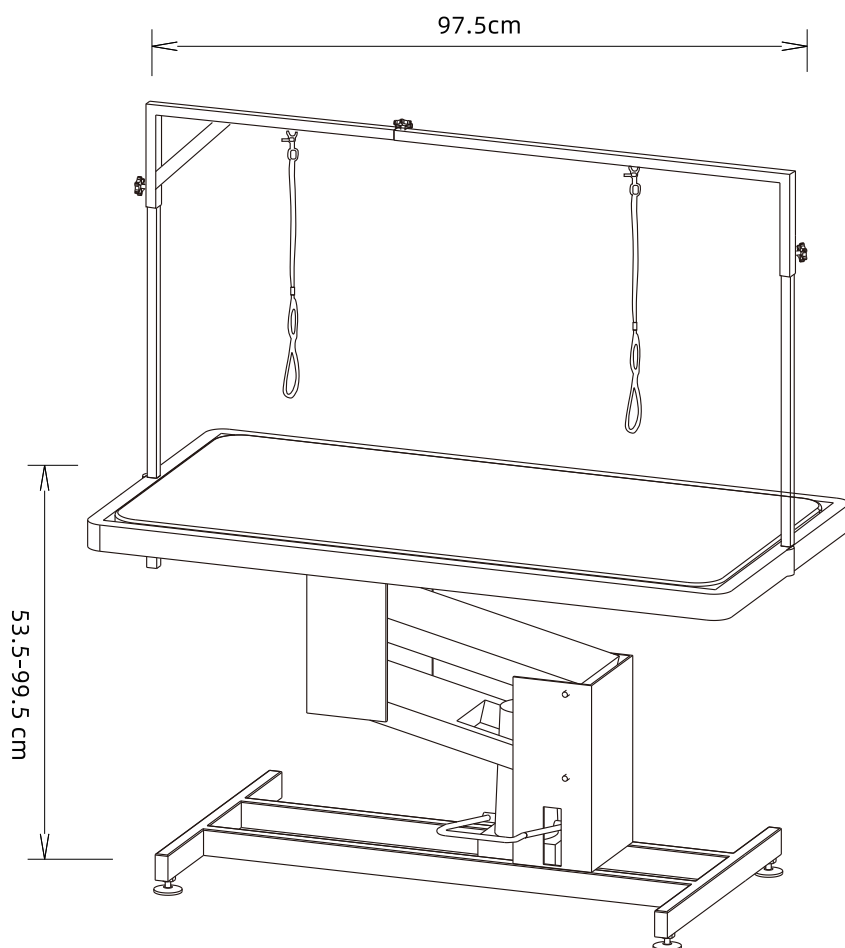

Front view

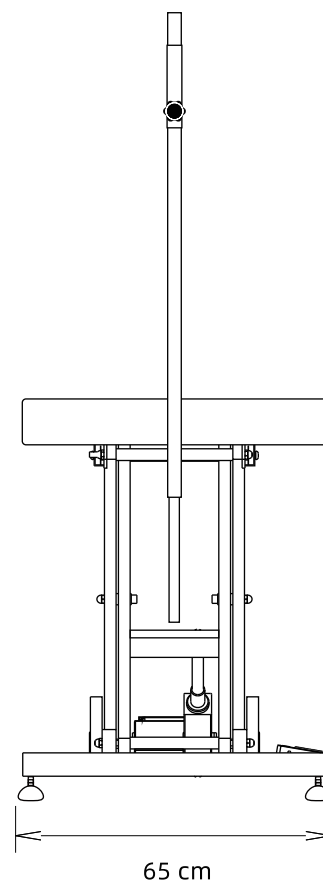

Side view

| ITEM    | G.W.(kg) | Dimension(cm)      | Package(cm)    | Volume(cbm) |
|---------|----------|--------------------|----------------|-------------|
| FT-804  | 54       | 97.5*65*53.5-101   | 101*68.5*54.5H | 0.377       |
| FT-804L | 60       | 127.5*65*53.5-99.5 | 130.5*68*52.5H | 0.467       |

## **Note**

1. This product is not intended for use by individuals (including children) with physical disabilities, delayed reactions, or mental disorders, unless there is the guardian shall supervise and guide the use of this product from the sidelines, and shall be responsible for the safety of the user;
2. Please do not let children get close to the lifting range of this product to prevent accidents.
3. Please do not disassemble it yourself if there are any abnormalities or malfunctions during use.
4. Do not contaminate with corrosive liquids or solids.
5. If you need to clean the frame and electric parts, you can use a dry towel and a hair dryer to remove any remaining hair on the surface, excrement, water stains, and other dirt.
6. Please check the power cable periodically. If the plug, power cable, or controller is damaged, do not continue to use it.
7. Do not use water to flush the power controller, foot pedal, and linear actuator. Otherwise, the electric control components will be damaged, and even electric shock may occur.